


SG & EG 1250 - 1500 Burner Only

For Retro Fitting to Warmington Open Fires Installation Guide Only



**Traditional Grate
& Burner**

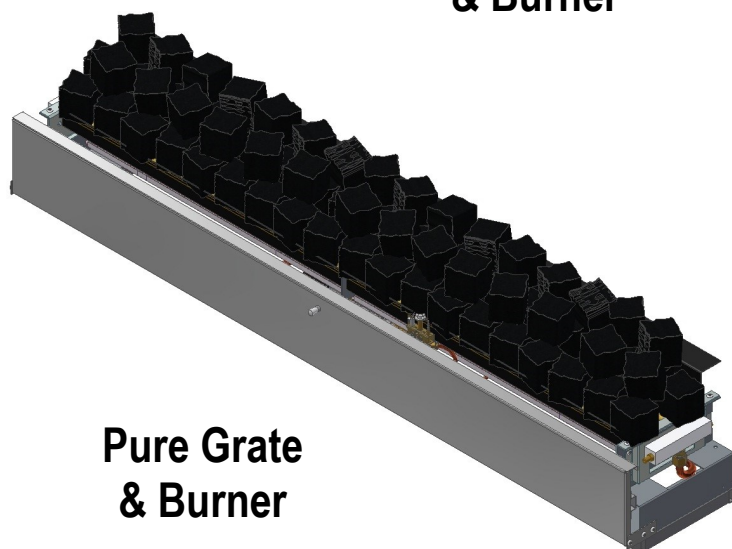

**Pure Grate
& Burner**



**Classic Grate
& Burner**

Related documents

Fire and flue system installation, and instructions to comply with NZS 5601.1:2013, 3645.1(Int):2010, 3645.2(Int):2010, 5266:2014, 2918:2001.

The fireplace is constructed and tested to comply with NZS 4558(int):2013 “Decorative gas log and other fuel effect appliances”.

Keep these instructions for further reference. Ensure that you have the correct and current installation details for the Warmington fireplace.

Installation

The Warmington unit is to be installed by a certified Warmington installer or an approved NZHHA installation technician.

See www.homeheat.co.nz/members for a certified NZHHA SFAIT Installer in your area.

A licenced certified gas fitter and licenced electrician are required to run power and gas supplies as required to the unit and any commissioning as part of the installation process. The heater must be installed according to these instructions and in compliance with all relevant building, gas fitting, electrical and other statutory regulations.

IMPORTANT

Read all the instructions carefully before commencing the Installation. Failure to follow these instructions may result in a fire hazard and void the warranty

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

POINTS TO CONSIDER PRIOR TO INSTALLATION

Location of the Fire. Open Fires are better located at one end of a room or area, as they project the heat away from their opening.

Venting to the Cavity.

This air is to allow the Cavity to Vent the Warm Air. This Warm Air helps keep the Fire and Flue System from getting too cold. If the Flue and Fire get too cold the System may soot often and require cleaning. Each Fire has different ways of venting the cavity.

The Topography of the Land.

The slope and position of the Land in relation to the Home has a bearing on how the wind will interact with the Fire and Flue System. Care needs to be taken to ensure that the Flue Termination is in the correct position to maximise performance.

The Prevailing Wind.

Care needs to be taken to ensure that the Flue Termination is in the correct position as wind and gusts that hit the Flue and Cowl System may overcome the Cowl and draft back down the Flue into the Home. This can be a combination of down draft and high pressure.

Hearth and Plinth:

The height of the Hearth off the Floor. The Finishing that is to be used on the hearth is to be allowed for at the design stage.

Positioning of the Flue System:

There is a maximum distance that an Offset Flue can be Installed. Reference to relevant standards.

Flue and Fire Clearance:

To be maintained to the Manufacturers Instructions.

Pressure Differential, Venting & External Air into the Building:

All fires need air to burn and draw correctly, Kitchen Fans, Air Conditioning units, High Wind Zones, Naturally forming Draft spaces, can all have an effect on the pressure difference from inside the building to the outside. A lower pressure in the building may induce a draft down the flue system and back into the building causing the fire to smoke or spill into the building. **Care needs to be taken at the design and installation stage to adequately vent the building, or some mechanical system to ensure that there is always a neutral or positive pressure at the fireplace and a negative pressure at the flue outlet.** This will ensure that the draft in the flue system is always to the outside.

"CAITEC AIR" the limits and requirements. See details in these Specs, on www.warmington.co.nz or contact your local Agent.

Wind Noise:

You may encounter wind noise in some installations. It is recommended to use an enclosed chase with a chimney pot to help reduce noise. There will always be some noise from the flue systems of all fireplaces.

INSTALLATION ORDER OF OPERATIONS

Prior to Construction and Installation

Important Notes:

1. Consult a licenced certified gas fitter for correct gas installation.
2. Install to current standards.
3. Install to manufacture's specifications.
4. All new Installations require a Local Council Consent No/Permit Application to be done .
5. Allow for Gas & Power supply to Cavity.
6. For special requirements concerning Materials (Timber Mantle and Surrounds) within close proximity of Warmington products, please contact your local Warmington Technical Consultant.

Install Procedure by Certified Gasfitter or approved "Warmington Installer", see "www.homeheat.co.nz" go to Members & follow steps to get a Certified NZHHA SFAIT Fire Installer in you Region. Installation has to be done in accordance with current and relevant standards.

Ensure that the gas appliance is fitted and installed to the appropriate gas code and standard, and that all checks and test have been correctly carried out.

Maintenance:

Visually Inspect Fireplace and Flue System. Ensure that the Firebox is operating according to Manufacture's Instructions, Fire & Burner may Require to be serviced by Certified Gasfitter annually.

NOTE: IMPORTANT INFORMATION FROM THE STANDARD

Installation to comply with current standards. When installing a fitted open gas fire with an existing chimney section 6.7.11 in NZS 5601 is particularly relevant, see quote below:

6.7.11 Use of existing flue or chimney

An existing chimney or *flue* shall be used for flueing a *gas appliance* only after examination and the correction of any faults.

NOTE: Poor design of existing *flues* and chimneys can cause *combustion products* to enter into the room.


An existing chimney or *flue* that has been used for fuel other than *gas* shall be—

- (a) swept clear of soot and other loose material;
- (b) checked for soundness of construction and freedom from leakage; and
- (c) checked for adequate size.

Any damper plate shall be removed or permanently fixed fully open, except where a damper is necessary and in accordance with the *manufacturer's relevant instructions*.

WARMINGTON BURNERS

Burner		SG 1250	SG 1500
Burner Width	A	1223	1372
Burner Height	B	205	205
Burner Depth	C	272	272
Flue Diameter Min	J	300	300
Flue CSA mm	K	70 686	70 686

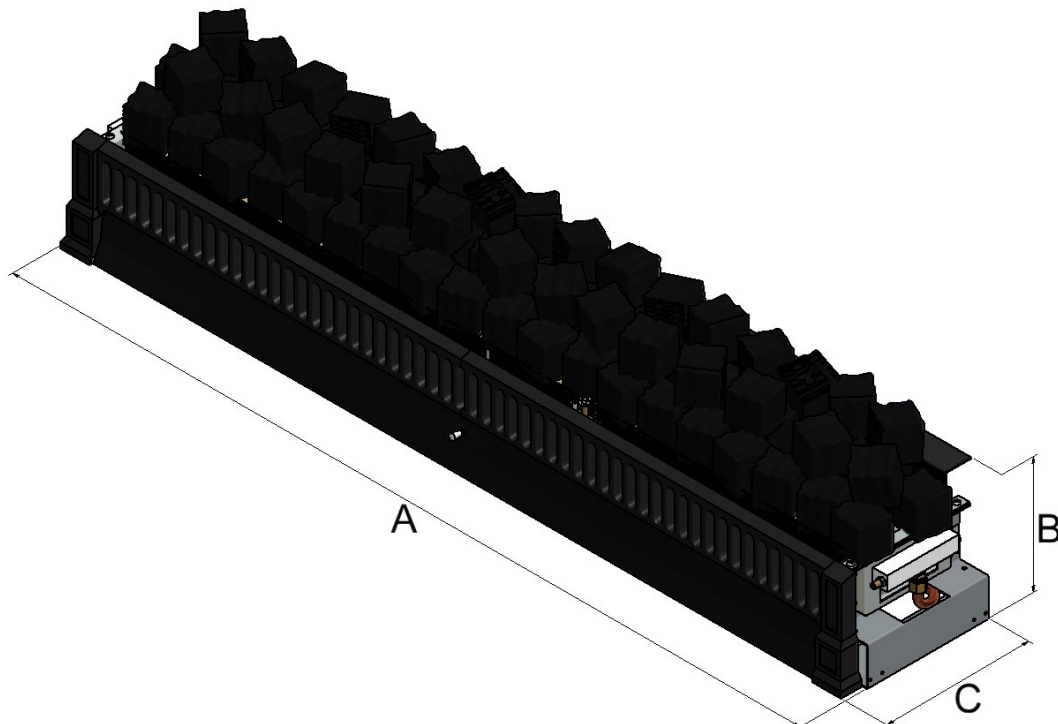

Due to continued product improvement, Warmington Ltd reserves the right to change product specifications without prior notification.

IMPORTANT NOTES :

GAS SPECIFICATIONS


Tested to current gas standards

NOTE : All Test Pressures are tested by a Independent Test Lab

* Inlet Pressure not to exceed 4.0KPa

MODLE	SG 1250	SG 1500
LPG		
Nominal Pressure kPa	2.75 kPa	2.75 kPa
Nominal Injector Size mm	4 X 1.1mm	4 X 1.2mm
Burner Pressure High kPa	2.5 kPa	2.5 kPa
Burner Pressure Low kPa	0.75 kPa	0.75 kPa
MJ/h	60	70
Flame Effect Output Only	Effect	Effect
Supply Pipe Size dia—min	1/2"	1/2"
Natural Gas		
Nominal Pressure kPa	1.5 kPa	1.5 kPa
Nominal Injector Size mm	4 X 1.8mm	4 X 2.0mm
Burner Pressure High kPa	0.85 Kpa	0.5 kPa
Burner Pressure Low kPa	0.2 kPa	0.15 kPa
MJ/h	63	62
Flame Effect Output Only	Effect	Effect
Supply Pipe Size dia—min	1/2"	1/2"
Lab. Test No	GL 973	GL 973
Lab. Test Dates	30/04/2011	30/04/2011
ESS Declaration No:	1563520139	1563520139

RAISED HEARTH CLEARANCES

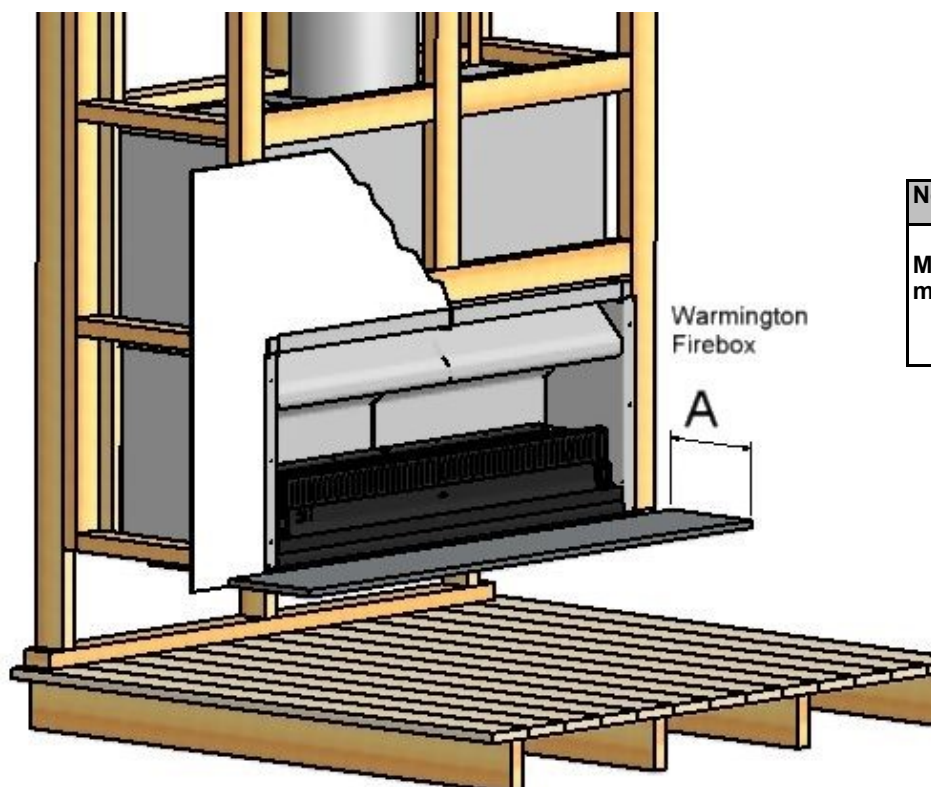

Note: For Combustible Floors

Minimum Hearth of 300mm (A) must be maintained at any given height.

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

SG Range: Gas Convection Fireplaces

TO THE INSTALLER / GAS FITTER and ELECTRICIAN

NOTES:

- Service annually or more if required.
- Custom built to clients requirements to relevant and current standards.
- The appliance and flue system must be installed in accordance with the relevant and current standards and the appropriate building codes.
- The appliance and flue system must be tested in accordance with the relevant and current standards and the appropriate building codes.

FLUED GAS APPLIANCES All Gas Fires requiring Warmington Flue Systems shall be Installed to the requirements of the current standards and shall be appropriately designed and constructed to permit safe and effective use. This Appliance must be flued to the outside atmosphere. All Warmington Fires must be Installed with a **minimum of 3.6m** of Approved **Warmington Gas Flue and Liners**.

GAS TYPE All Gas Fires shall operate safely on the Gas Type specified on the Appliance and shall comply with the requirements of The Gas Act 1992.

APPLIANCE SAFETY Any gas fire appliance shall comply with the safety requirements of the current standards listed under "Related documents" in this specification.

ELECTRICAL REQUIREMENTS All Gas Fire Appliances Installed with Mains Supplied Electrical components for associated use with these Appliances, must comply with The Electricity Regulations 1993.

ELECTRONIC CONTROL SYSTEMS Any Gas Fire Appliance Installed with Manual or Programmable Electronic Control System shall be tested and/or approved by a Recognised Person or Authority.

SEISMIC RESTRAINTS All Fires used for Domestic and Commercial Purposes shall be firmly secured (unless defined as portable or mobile) to prevent dislodgement from their point of fixture or Installation during Seismic Activity. Such Restraint must be of a reasonable expectation.

GAS CONNECTION

A Gas Certificate must be obtained for the Installation and Commissioning of this Appliance and Flue System.

Check that the Gas Type Specified on the Data Plate is correct for the available supply (LPG or NG).

A Copper Gas supply capable of supplying the correct MJ/h , should be brought into the rear of the Installation Cavity through the hole provided. A Flare Nut is provided on the Burner for Gas Connection to the Appliance.

COMMISSIONING AND TESTING OF FIREPLACE

(To be carried out by Gasfitter)

Read all the instructions before commissioning. Install coals and logs and burner before commission.

Light appliance and check HIGH/LOW settings. Check operation of appliance and adjust to suit.

Adjust control valve setting if required. After a period of running (30min Plus) check the setting of the pilot and adjust if required. See Spec's for details.


Extinguish appliance, remove test equipment and secure test nipple. Check for Gas Leaks.

Note* The Control Valves are factory set and should not require adjustment.

FITMENT OF BURNER

GAS FITTER TO CARRY OUT STANDARD TESTING FOR COMMISSION:

- Spill test taken at top of opening with smoke or smoke match.
- Leak testing appliance and joints.
- Correct operation of the burner and coal and log lay out.
- Test gas pressures high and low, drop test on supply line.
- 5 second light time across burner. Other testing that may be required.
- Ventilation requirements to the standards.
- Hand over to Client, tests and comply to relevant standards.

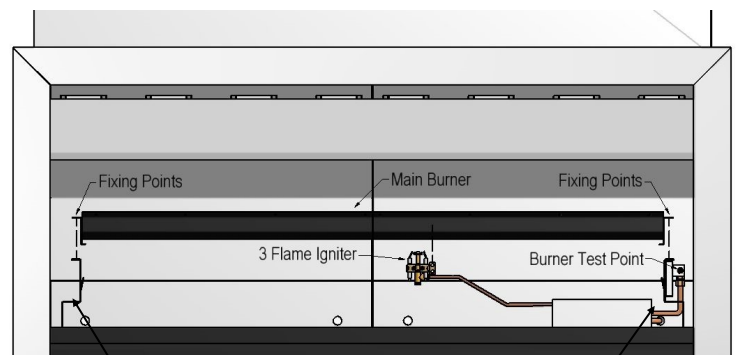

Burner may be Secured To the Firebox (Optional)



Gas Supply Pipe Into Fire , by Gasfitter . See Spec's for Pipe Size.

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

VERMICULITE (COURSE)

(To be set by Gasfitter)

General Coal orientation fro optimum effect.

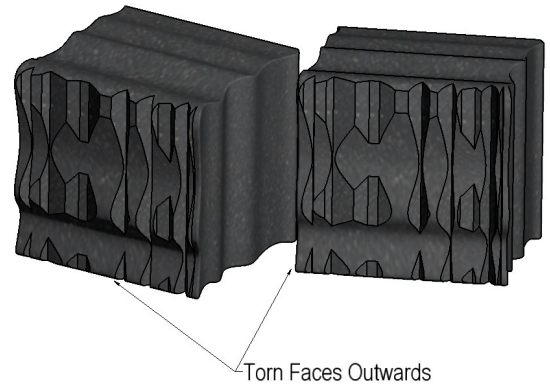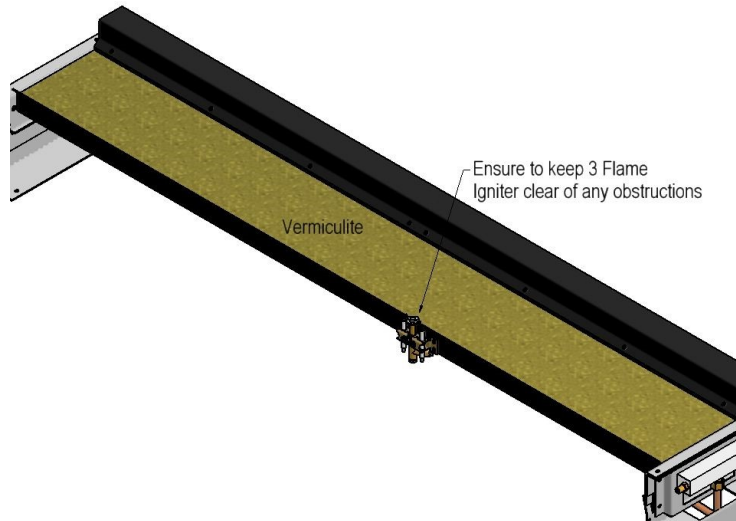

APPLYING THE VERMICULITE : (Coarse—must be larger than the burner plates holes so not to block them)

Apply with care a thin layer of Vermiculite over the Burner, just enough to cover the Burner Tray only.

NOTE: If the burner flame is uneven, the Vermiculite may need to be changed or sifted to remove the smaller pieces that can block the burners holes. The smaller pieces can, cause uneven burn and the unit to run dirty.

COALS AND LOGS


(To be set by Gasfitter)

Gloves should be worn when handling Ceramic Fibre Coals & Logs: care needs to be taken when handling Coals & Logs, Due to the Carbon on the Coals can stain the surroundings.

HELPFUL HINTS: When Hot use Metal Tongs.

Apply a thin layer of Vermiculite over the Burner, just enough to cover the Burner Tray only as shown above.

1: Bottom Row: Assemble 2 Bottom Rows of Coals onto the Vermiculite Base. **2: Top Row:** Assemble 2 Top Rows of Coals onto the Bottom Row.

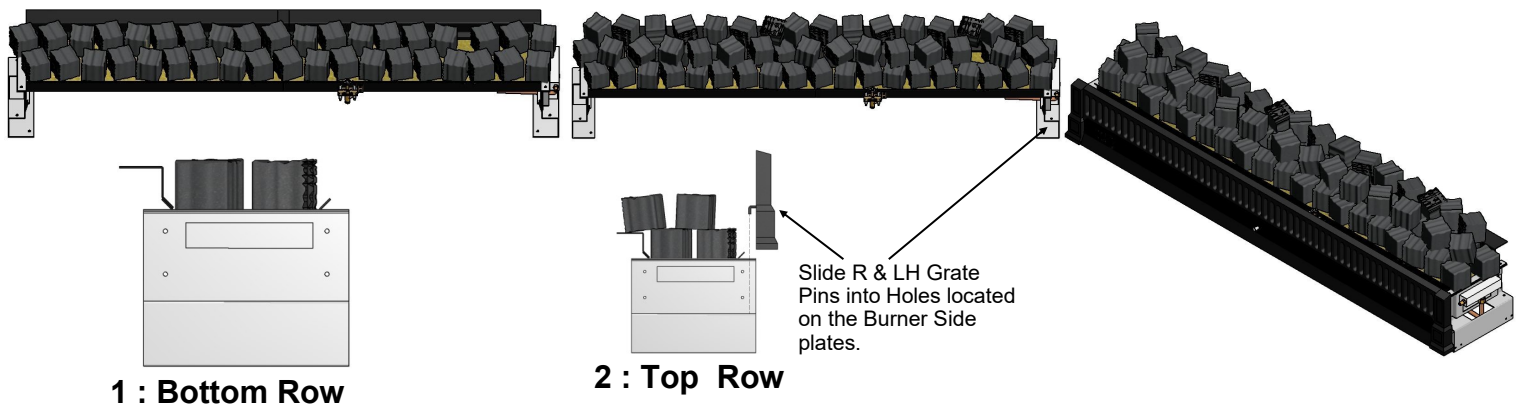

Each Coal randomly positioned with the Torn (roughest) Face Outward. **Ensure Coal positioning does not directly block the 3 Flame Pilot.**

The placement of the Coals & Logs may vary to make an even Flame Pattern.

Logs and Twigs may be scattered to achieve best Visual Effect.

Fit Burner Grate by sliding R & L Side Metal Pins on Grate, into Holes Located on Burner Side Plates, as shown below.

	Number of Coals per Row		Number of Rows		Total Coals
Model	Bottom	Top	Bottom	Top	Total
SG 1250	16	14	2	2	60
SG 1500	19	16	2	2	70


Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

SG 1250 - 1500 Burner

**Traditional Grate
& Burner**



**Pure Grate
& Burner**

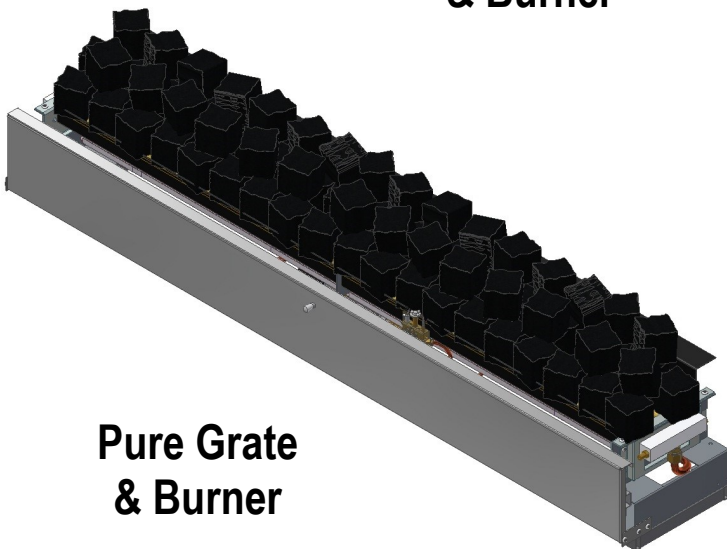

**Classic Grate
& Burner**



NOTE: IMPORTANT INFORMATION FROM THE STANDARD

Installation to comply with current standards. When installing a fitted open gas fire with an existing chimney section 6.7.11 in NZS 5601 is particularly relevant, see quote below:

6.7.11 Use of existing flue or chimney

An existing chimney or *flue* shall be used for flueing a *gas appliance* only after examination and the correction of any faults.

NOTE: Poor design of existing *flues* and chimneys can cause *combustion products* to enter into the room.


An existing chimney or *flue* that has been used for fuel other than *gas* shall be—

- (a) swept clear of soot and other loose material;
- (b) checked for soundness of construction and freedom from leakage; and
- (c) checked for adequate size.

Any damper plate shall be removed or permanently fixed fully open, except where a damper is necessary and in accordance with the *manufacturer's relevant instructions*.

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

OPTIONAL: BURNER RESTRAINTS

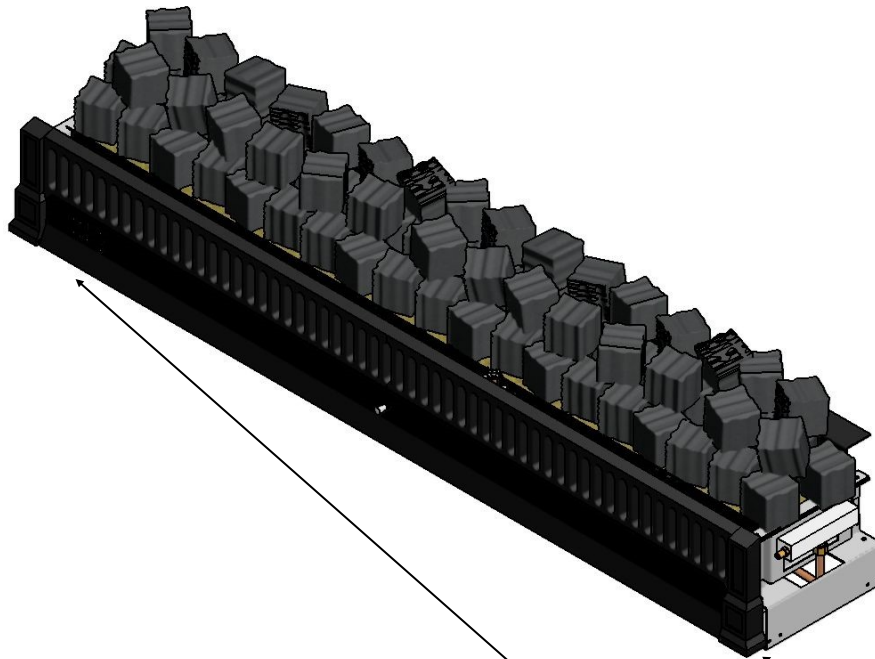

**Optional:
Seismic Restraint**
Secure Burner through 4X anchor points
provided on Burner Side Plate Bases

OPERATION OF YOUR WARMINGTON GAS CONVECTION FIRE (SG ONLY)

Your Fire must be Installed and Tested by a suitably qualified Gasfitter prior to use.

Instructions for lighting the gas fire:

- Open the front cover by pulling in outwards.
- Push in the ignition control switch and hold in the '**PILOT**' position for 5-10 seconds until you can hear the gas come through the pipe – making sure the ignition switch is pressed in firmly.
- To strike the igniter, turn anti clockwise to the ***STAR** position (with the ignition switch still firmly pressed in) until you hear the pilot ignite with a 'click'. Repeat this process 2 or 3 times if necessary.
- Once the pilot flame is lit, hold this position for 3-5 seconds, then gently let the ignition switch out, and set the flame control to high. It may take a few seconds for the burner to light all the way across.
- Once the flame is established, adjust to the desired setting and close the cover.

To shut down the gas fire:

- Open the cover by pulling it outwards.
- Turn the control ignition switch to '**PILOT**' and the flame bed will extinguish.
- Pilot light may be left on and the pilot flame will still burn.
- To fully extinguish, turn to the '**OFF**' position before closing the cover.



Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

ADJUSTMENT OF HI—LOW PRESSURE

(SG ONLY)

(Only to be Adjusted by Gasfitter)

Adjustment of High & Low Settings Must be Carried out by a Certified Gas Fitter Only .

Note* Control Valves are Factory Set but may require adjustment onsite.

Turn Appliance Off & Remove Front Plastic Cover on Igniter, Pull Cover to Slide off.



Unscrew Test Nipple on the Burner Manifold & fit the Test Gauge Securely - See Diagram

* To Set the High : Light the Burner & turn to High - Then Adjust the High Screw to the Desired Pressure. See Page 10

* To Set the Low : Light the Burner & turn to Low - Then Adjust the Low Screw to the Desired Pressure. See Page 10

Extinguish Appliance, remove Test Equipment and Secure Test Nipple.

* Check Valve & Burner for Correct Operation & check Fire for Gas Leaks.

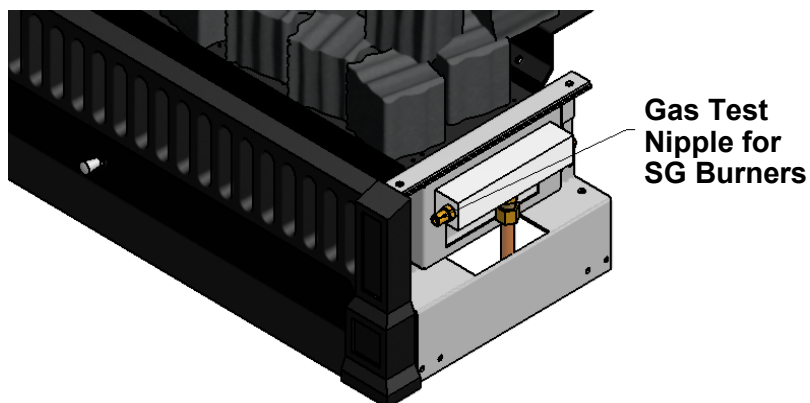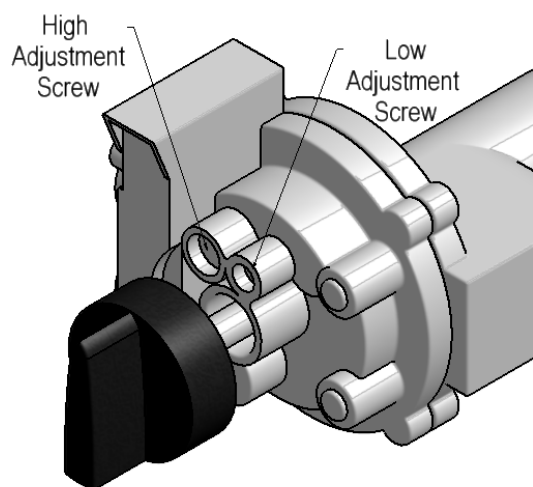

Note : Location of the Test Nipple - may vary from Model to Model

ADJUSTMENT OF THE PILOT—3 FLAME

(BOTH SG & EG)


(Only to be Adjusted by Gasfitter)

Note: When the Base screw is removed, gas will leak from the out let, ensure that the pilot is not adjusted or the screw is removed when the fire is burning.




- Adjustment of Pilot - 3 Flame: Unscrew Base Screw as shown in Diagram 2.
- Insert a Screw Driver as shown in Diagram 3 and adjust the Adjustment Screw up inside the 3 Flame Pilot to adjust the Flame Height.
- The Flame must always be passing over the Electrodes &/or File Tube on either side.
- Replace the Base screw and check for leaks.

Note: to Gas Fitters

The 3 flame pilot may need adjustment after a period of running time on set up as the increase in heat in the fire will induce a higher draft in the fire, and may pull in flame away from the File Tube causing the fire to shut down.

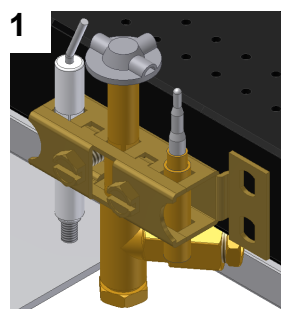

3 Flame Pilot in Assembled State

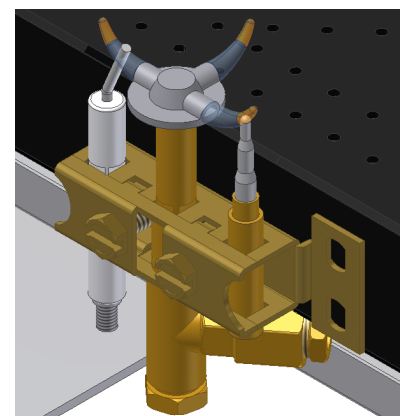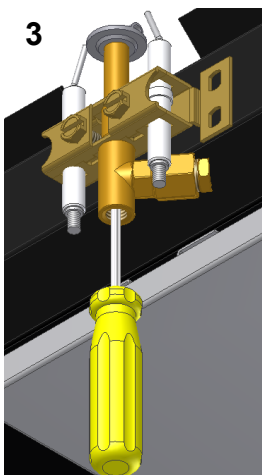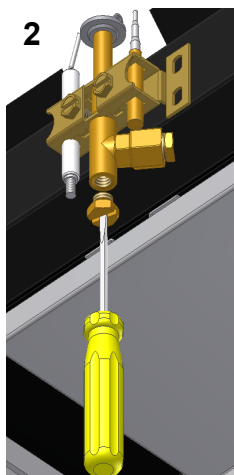

Correct Operation of 3 Flame Pilot

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.


EG On/Off 1250 - 1500 Burner

Burner Only Installation Guide Only

**Traditional Grate
& Burner**



**Pure Grate
& Burner**

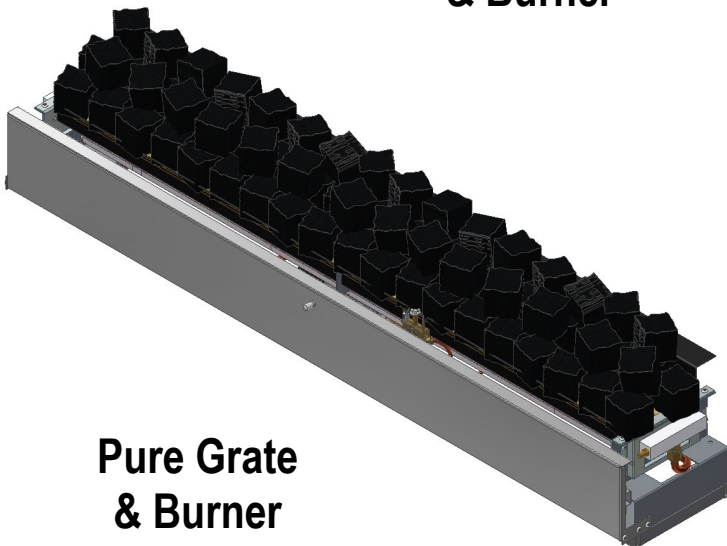

**Classic Grate
& Burner**



NOTE: IMPORTANT INFORMATION FROM THE STANDARD

Installation to comply with current standards. When installing a fitted open gas fire with an existing chimney section 6.7.11 in NZS 5601 is particularly relevant, see quote below:

6.7.11 Use of existing flue or chimney

An existing chimney or *flue* shall be used for flueing a *gas appliance* only after examination and the correction of any faults.

NOTE: Poor design of existing *flues* and chimneys can cause *combustion products* to enter into the room.

An existing chimney or *flue* that has been used for fuel other than *gas* shall be—

- (a) swept clear of soot and other loose material;
- (b) checked for soundness of construction and freedom from leakage; and
- (c) checked for adequate size.


Any damper plate shall be removed or permanently fixed fully open, except where a damper is necessary and in accordance with the *manufacturer's relevant instructions*.

Due to continued product improvement, Warmington Ltd reserves the right to change product specifications without prior notification.

PROCEDURE FOR THE TEST AND COMISSIONING OF YOUR DECORATIVE BURNER

Ensure Gas Supply and the Power Supply (caution 240V) to the Unit.

- Refer to Data Plate on this Specification for settings. The Data Plate is attached to the under carriage of the Burner .
- Loosen the Jet Test point and attach manometer (Digital is preferred). The Test Point is on the Right Hand Side of the Gas Burner , as Shown Below .

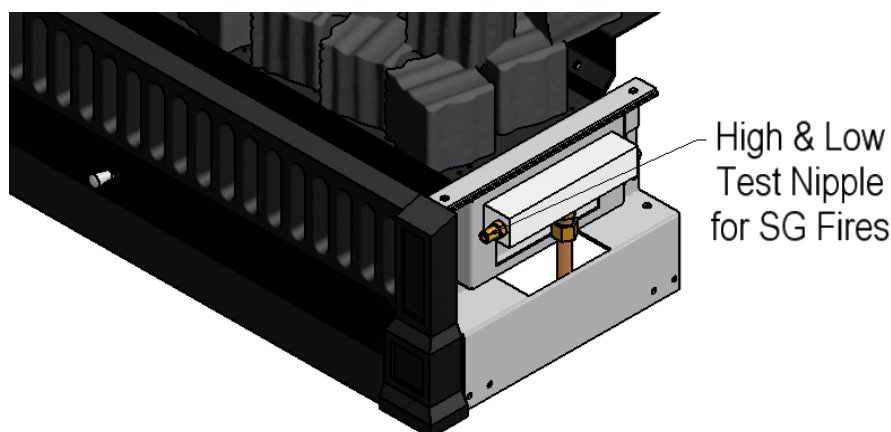

Note : Location of the Test Nipple - may vary from Model to Model

- Light Appliance and check the pressure to the Hi kPa value in the Table for maximum output.

NOTE : If setting the Pressure is required it is to be carried out by a Certified Gas Fitter.


- If adjustments are necessary, remove the dust cap on the control valve. The Pressure Adjustment Screw is on the Front Side of the Gas Control Valve (shown in Diagram **B** in this specification) and are **Factory** set.

Pressure Setting: Set the pressure to the Hi kPa value in the table for maximum output. The burner will operate any pressure between the hi and the low pressures.

Pressure Setting: Turn the Burner on with the switch and wait for full ignition. Screw the adjusting screw clockwise to Increase the Outlet Pressure or screw counter clockwise to Decrease the Pressure to the desired settings . Use a standard screw driver.

WARNING: Ensure that the dust cap is replaced after adjustment

DIAGRAM B (SHOWING CONTROL VALVE WITH TEST POINTS AND ADJUSTING SCREW).

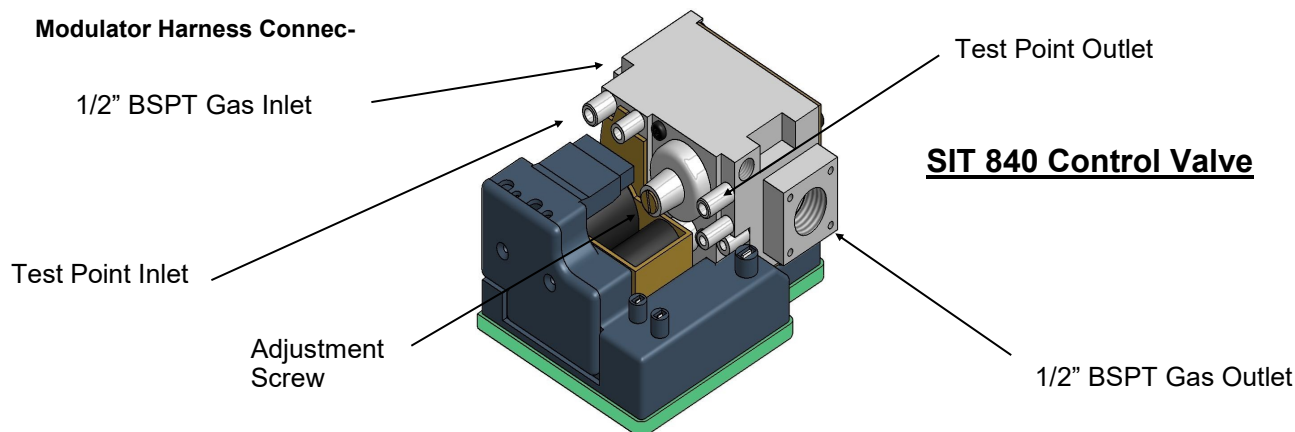

- After checking the pressure, turn the unit off, remove Manometer from the Test Point and Tighten the Test Point Screw. Ensure to check for gas leaks.
- Turn the Appliance On and Off a few times to check ignition.
- When you are satisfied that the Appliance is working correctly , fit the Front Panel Assembly back to the Gas Burner.
- NOTE : Ensure you peel the Protective Plastic Coating from any Stainless Steel components if fitted.
- All Burner Aerations are Factory Preset and cannot be adjusted.
- If you are unable to get the unit to operate correctly, refer to troubleshooting before contacting your Local Service Contact as listed.
- It may take approximately 2 hours of operation for the coals/Logs or river rocks to achieve their full flame pattern and glow.
- During the Initial Burning in period, some smoke and smell may be experienced , the appliance should be run in a well ventilated room until these dissipate .

ADJUSTMENT OF THE PILOT—3 FLAME

(BOTH SG & EG)

(Only to be Adjusted by Gasfitter)


Note: When the Base screw is removed, gas will leak from the out let, ensure that the pilot is not adjusted or the screw is removed when the fire is burning.

- Adjustment of Pilot - 3 Flame : Unscrew Base Screw as shown in Diagram 2 .
- Insert a Screw Driver as shown in Diagram 3 and adjust the Adjustment Screw up inside the 3 Flame Pilot to adjust the Flame Height .
- The Flame must always be passing over the Electrodes &/or File Tube on either side .
- Replace the Base screw and check for leaks.

Note: to Gas Fitters


The 3 flame pilot may need adjustment after a period of running time on set up as the increase in heat in the fire will induce a higher draft in the fire, and may pull in flame away from the File Tube causing the fire to shut down.

1


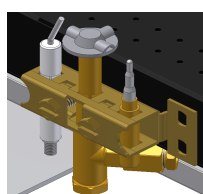


3 Flame Pilot in

2

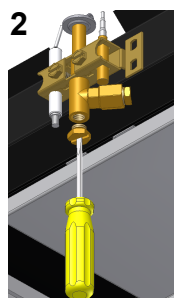


3

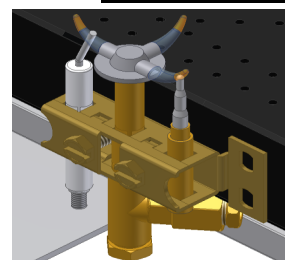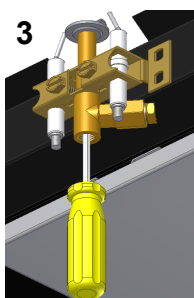

Correct Operation of 3 Flame Pilot

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

ON/OFF SWITCH (SIT 840) - WIRING DIAGRAM

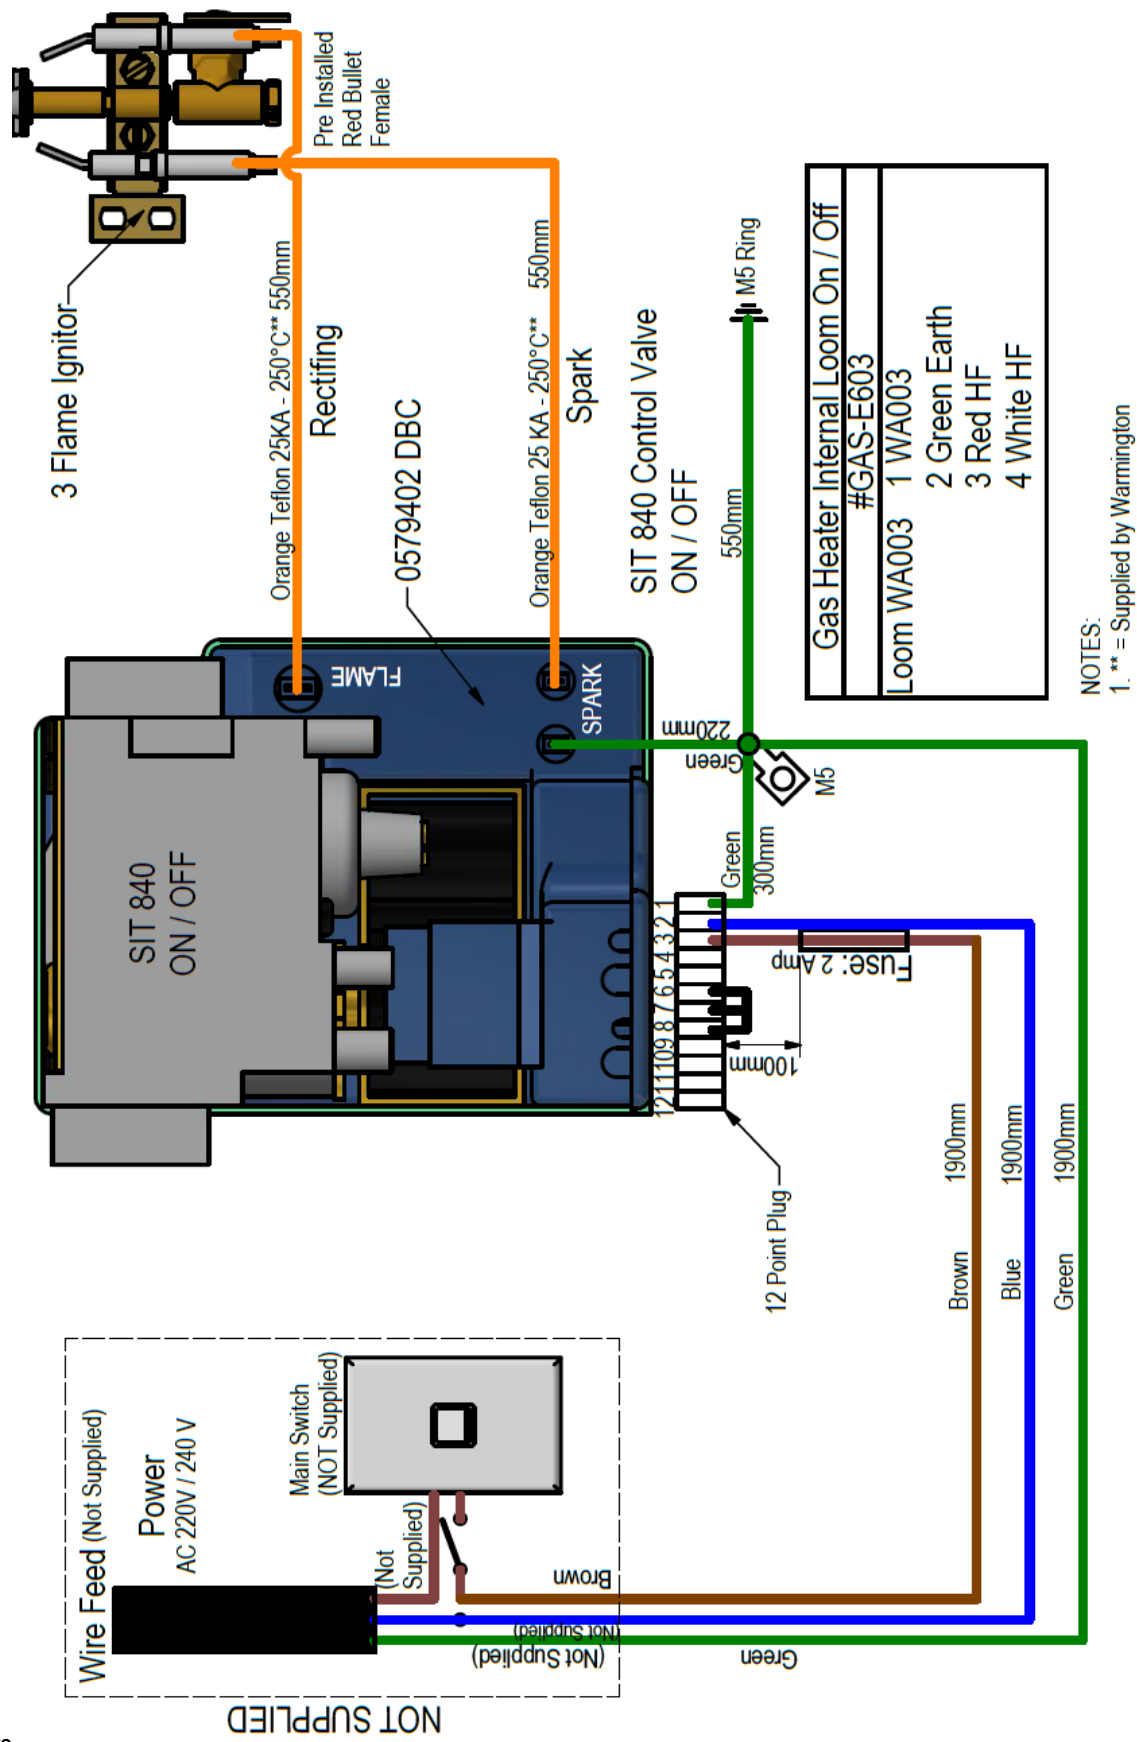

Due to

ation.


EG Hi/Low 1250 - 1500 Burner

Burner Only Installation Guide Only

**Traditional Grate
& Burner**



**Pure Grate
& Burner**

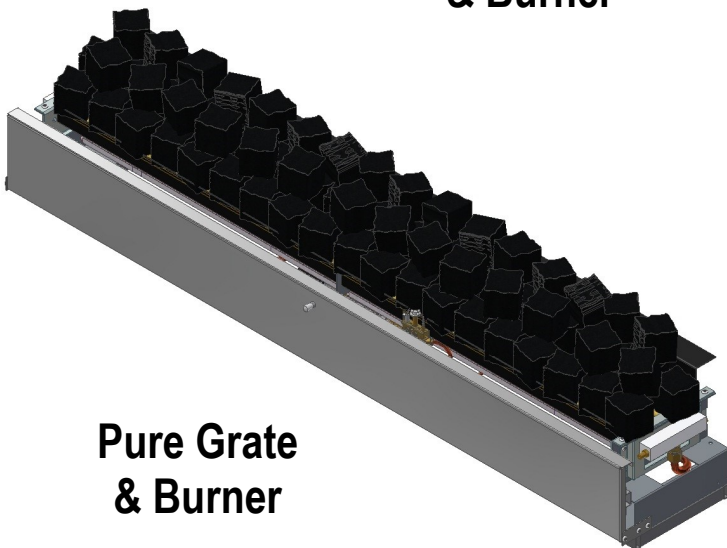

**Classic Grate
& Burner**



NOTE: IMPORTANT INFORMATION FROM THE STANDARD

Installation to comply with current standards. When installing a fitted open gas fire with an existing chimney section 6.7.11 in NZS 5601 is particularly relevant, see quote below:

6.7.11 Use of existing flue or chimney

An existing chimney or *flue* shall be used for flueing a *gas appliance* only after examination and the correction of any faults.

NOTE: Poor design of existing *flues* and chimneys can cause *combustion products* to enter into the room.

An existing chimney or *flue* that has been used for fuel other than *gas* shall be—

- (a) swept clear of soot and other loose material;
- (b) checked for soundness of construction and freedom from leakage; and
- (c) checked for adequate size.


Any damper plate shall be removed or permanently fixed fully open, except where a damper is necessary and in accordance with the *manufacturer's relevant instructions*.

Due to continued product improvement, Warmington Ltd reserves the right to change product specifications without prior notification.

PROCEDURE FOR THE TEST AND COMMISSIONING OF YOUR DECORATIVE FIRE.

Ensure Gas Supply and the Power Supply (caution 240V) to the Unit.

- Refer to Data Plate on this Specification for settings. The Data Plate is attached to the under carriage of the Burner .
- Loosen the Jet Test point and attach manometer (Digital is preferred). The Test Point is on the Right Hand Side of the Gas Burner , as Shown Below .

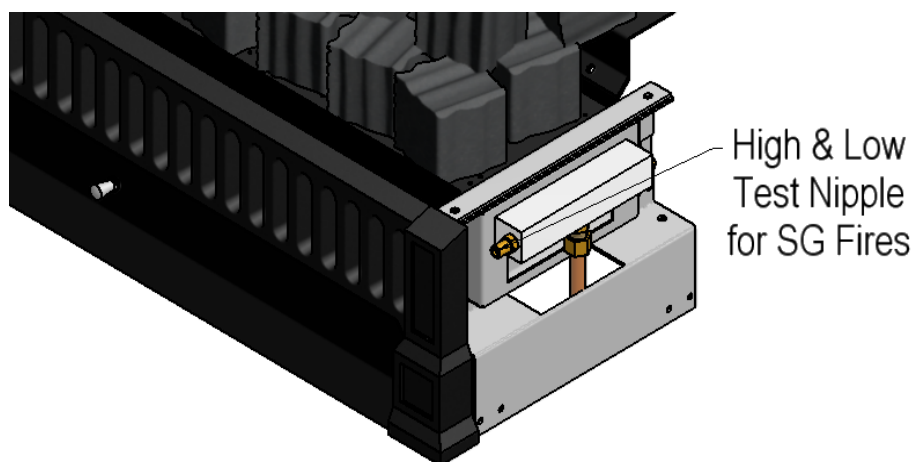

Note : Location of the Test Nipple - may vary from Model to Model

- Light Appliance, adjust to High Flame setting and check pressure, adjust to Low Flame and check pressure.

NOTE : If setting the Pressure is required it is to be carried out by a Certified Gas Fitter.

- If adjustments are necessary, remove the cap . The Pressure Adjustment Screw and Nut are on the Front Side of the Gas Control Valve (shown in Diagram B in this specification) and are **Factory** set.


High Pressure Setting: Set the Burner to High with the switch. Screw in **Nut A** to Increase the Outlet Pressure then screw Nut A out to Decrease the Pressure to the desired settings . Use 10mm spanner.

Low Pressure Setting: Set the Burner to Low with the switch - See Wiring Diagram) and, keep Nut A stationary . Use a screwdriver to screw in **Screw B** to Increase the Pressure and Screw it Out to Decrease the Pressure . Carefully replace the Modulator Plastic Cap .

WARNING: To ensure the Correct Operation of the Hi/Low burner it is necessary that the Plastic Cap is returned to its original location .

DIAGRAM B (SHOWING CONTROL VALVE WITH TEST POINTS AND ADJUSTING SCREW).

Hi LOW Harness Connections

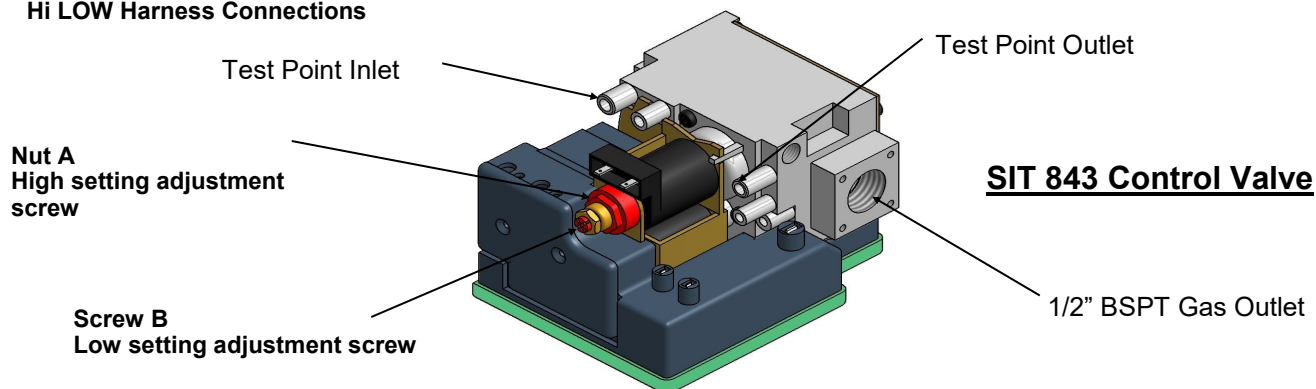

- After checking the pressure, turn the unit off, remove Manometer from the Test Point and Tighten the Test Point Screw. Ensure to check for gas leaks.
- Ensure Power is Off & Reconnect Modulator Harness Connection in the Main Harness. See Diagram B Above .
- Turn the Appliance On and Off a few times to check ignition.
- When you are satisfied that the Appliance is working correctly , fit the Front Panel Assembly back to the Gas Burner.
- NOTE : Ensure you peel the Protective Plastic Coating from any Stainless Steel components if fitted.
- All Burner Aerations are Factory Preset and cannot be adjusted.
- If you are unable to get the unit to operate correctly, refer to troubleshooting before contacting your Local Service Contact as listed.
- It may take approximately 2 hours of operation for the coals/Logs or river rocks to achieve their full flame pattern and glow.
- During the Initial Burning in period, some smoke and smell may be experienced , the appliance should be run on the high position in a well ventilated room until these dissipate .





ADJUSTMENT OF THE PILOT—3 FLAME (BOTH SG & EG) (Only to be Adjusted by Gasfitter)

Note: When the Base screw is removed, gas will leak from the out let, ensure that the pilot is not adjusted or the screw is removed when the fire is burning.

- Adjustment of Pilot - 3 Flame : Unscrew Base Screw as shown in Diagram 2 .
- Insert a Screw Driver as shown in Diagram 3 and adjust the Adjustment Screw up inside the 3 Flame Pilot to adjust the Flame Height .
- The Flame must always be passing over the Electrodes &/or File Tube on either side .
- Replace the Base screw and check for leaks.


Note: to Gas Fitters

The 3 flame pilot may need adjustment after a period of running time on set up as the increase in heat in the fire will induce a higher draft in the fire, and may pull in flame away from the File Tube causing the fire to shut down.

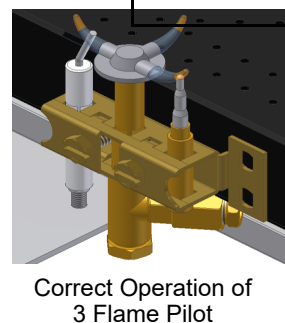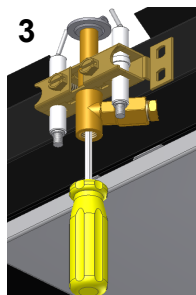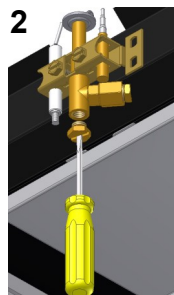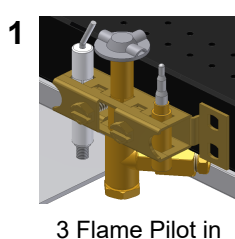

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

HIGH/LOW SWITCH (SIT 843) - WIRING DIAGRAM

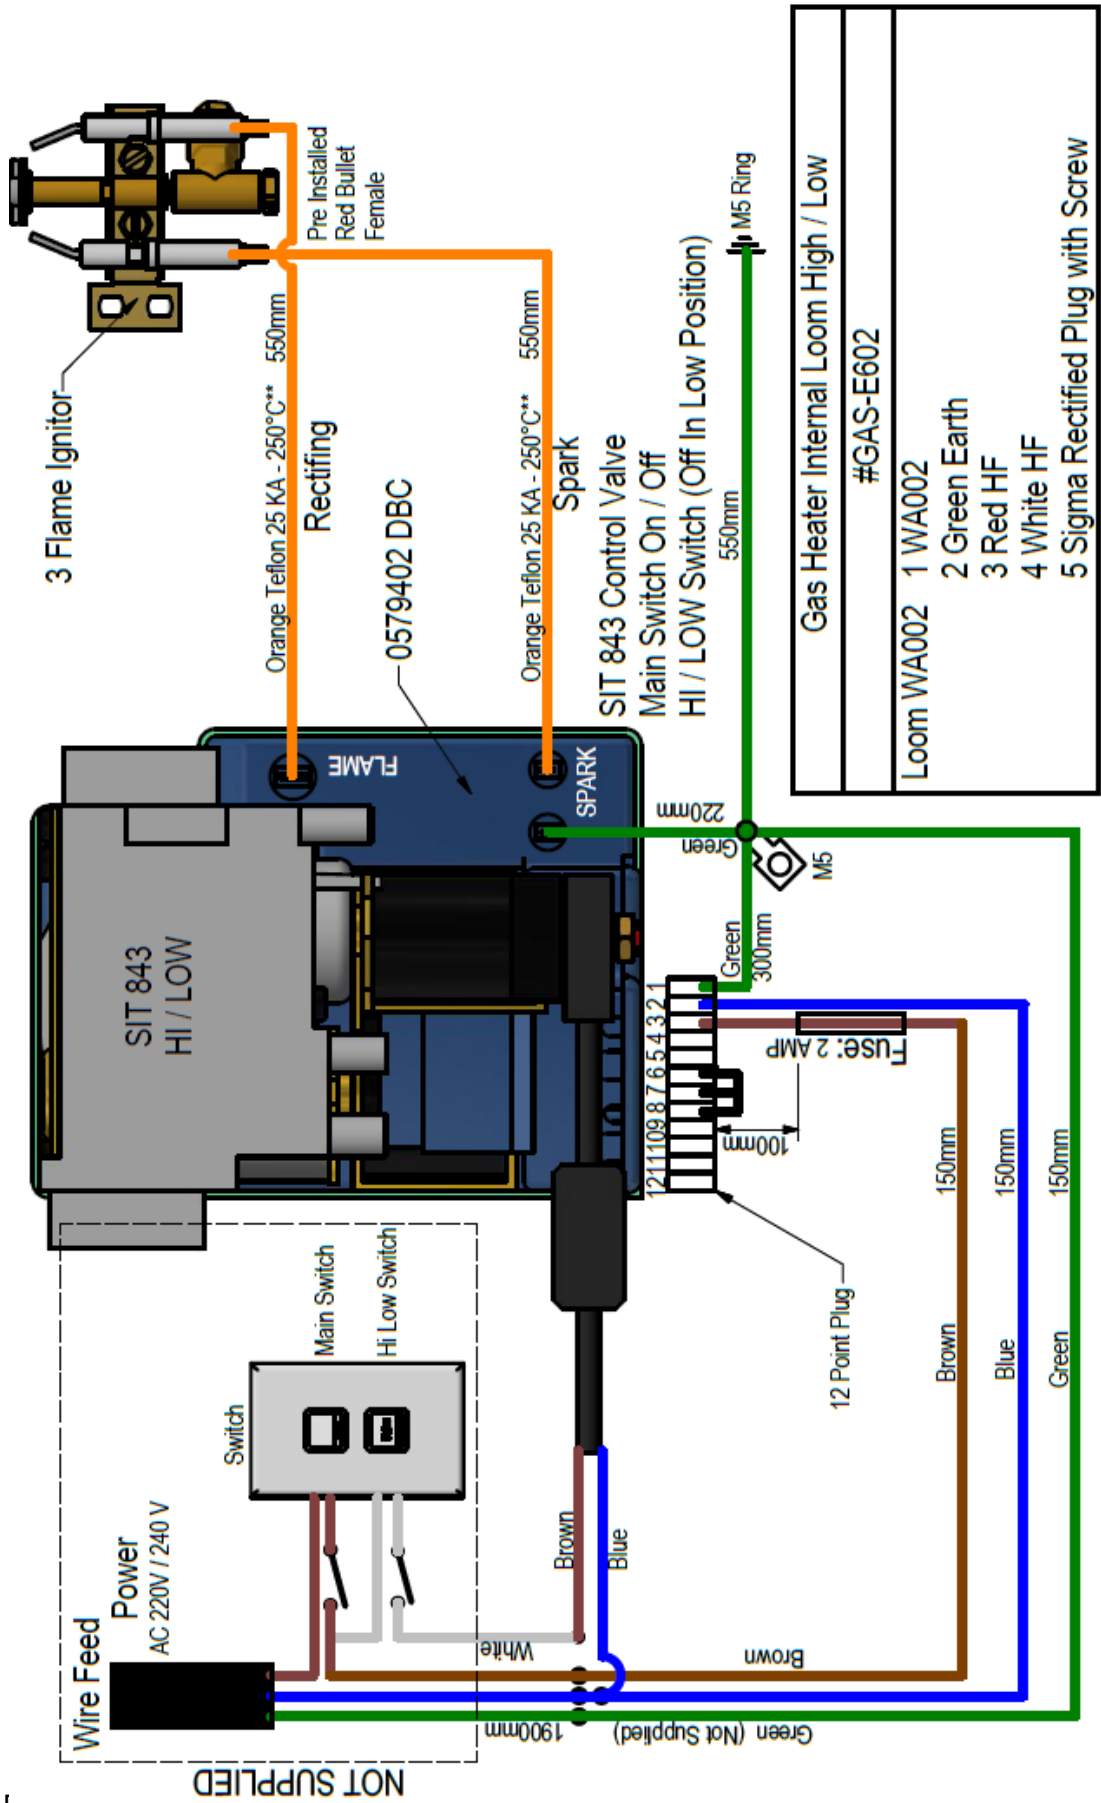

NOTES:
1. ** = Supplied by Warmington


EG With Remote 1250 - 1500 Burner

Burner Only Installation Guide Only


**Traditional Grate
& Burner**



**Pure Grate
& Burner**

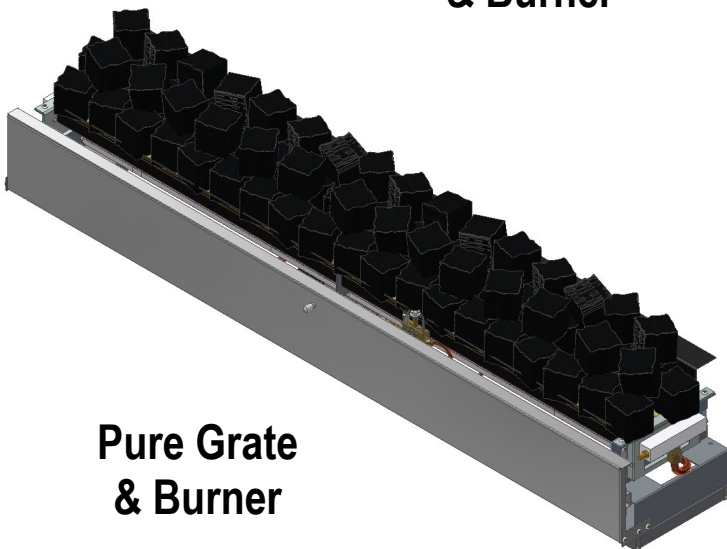

**Classic Grate
& Burner**

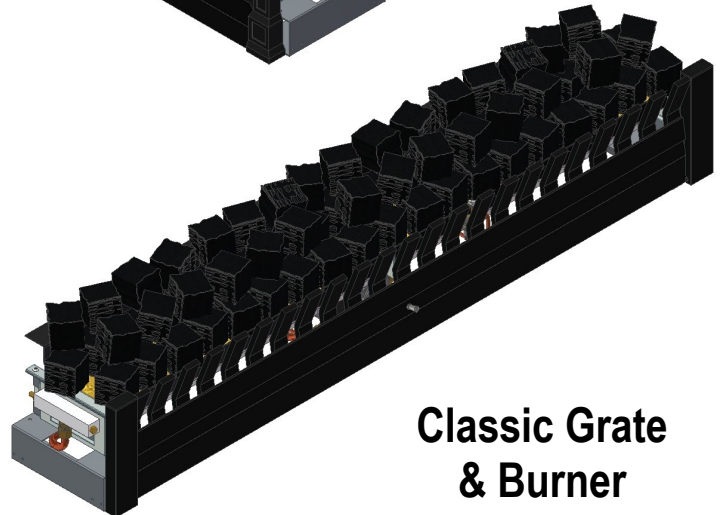

NOTE: IMPORTANT INFORMATION FROM THE STANDARD

Installation to comply with current standards. When installing a fitted open gas fire with an existing chimney section 6.7.11 in NZS 5601 is particularly relevant, see quote below:

6.7.11 Use of existing flue or chimney

An existing chimney or *flue* shall be used for flueing a *gas appliance* only after examination and the correction of any faults.

NOTE: Poor design of existing *flues* and chimneys can cause *combustion products* to enter into the room.

An existing chimney or *flue* that has been used for fuel other than *gas* shall be—


- (a) swept clear of soot and other loose material;
- (b) checked for soundness of construction and freedom from leakage; and
- (c) checked for adequate size.

Any damper plate shall be removed or permanently fixed fully open, except where a damper is necessary and in accordance with the *manufacturer's relevant instructions*.

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

OPERATION OF YOUR REMOTE CONTROLLED EG GAS BURNER (SIT 845 valve)

REMOTE CONTROL FEATURES

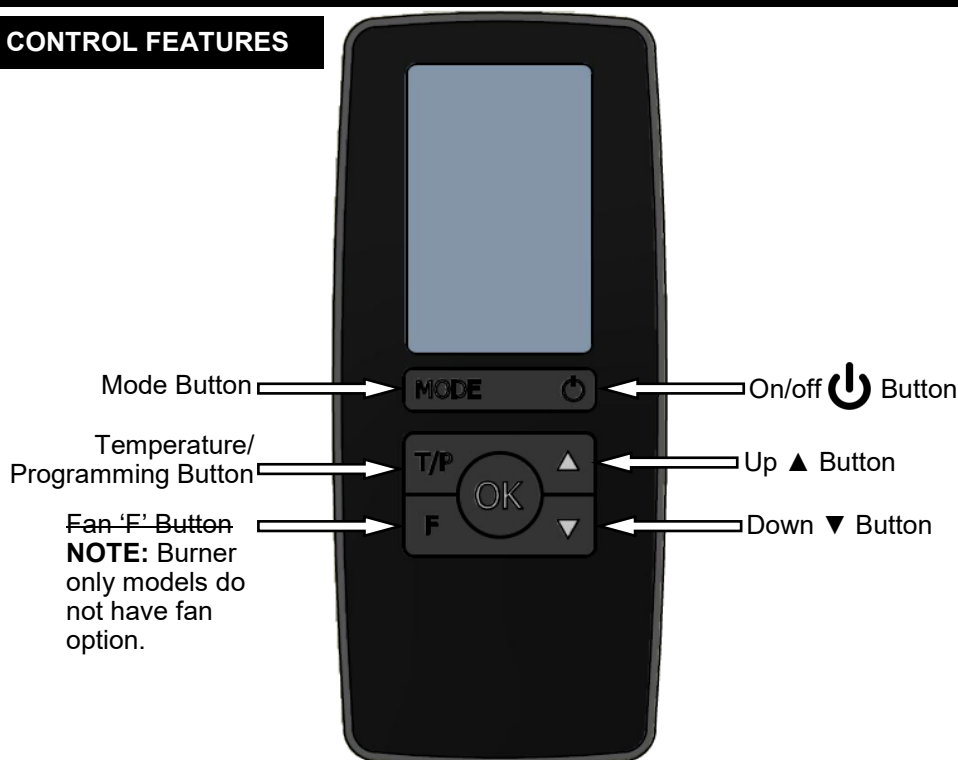

Press and release the  button to turn the remote on and off.

SETTING THE DAY OF THE WEEK AND TIME

With the remote off, press and hold the 'T/P' button for 2 seconds or longer to initiate programming the time. The Time, Hour setting and AM/PM will flash.

Setting the hour function: Press and release the ▲ or ▼ button to increase or decrease the hour setting by 1 hour. Please ensure that AM/PM is set correctly. Press 'OK' to accept. The minute digits will begin to flash.

Setting the minute function: Press and release, the ▲ or ▼ button to increase or decrease the minute setting by 1 minute. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the minute setting by 1 minute every 0.5 seconds. Press 'OK' to accept. The days of the week will begin to flash.

Setting the day of the week function: Press and release the ▲ or ▼ button to change the day of the week to the following or previous day. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the day of the week by 1 day every 0.5 seconds. Press 'OK' to complete setting. The time and day of the week is now set.

USING THE VARIOUS MODES

While the remote is switched on, pressing and releasing the MODE button will cycle between all available modes. These are:

Manual Mode→Auto Mode→Flame Mode→Manual Mode

Manual mode

Manual mode does not require that the time and day of the week to be set. Press the ▲ or ▼ button to increase or decrease the temperature as desired.

Automatic mode

The automatic mode allows the temperature to be regulated according to a programmed level and time. At any time, the temperature may be adjusted up or down. However, whenever the remote changes to a new time period, the temperature will be set automatically according to that period's setting.

Flame Mode

In Flame mode the flame level is selected as required, and remains at the selected level. A change in the temperature will not change the flame level. Press the ▲ or ▼ button to increase or decrease the Flame level desired.

Programming for Auto Mode

Each day of the week can be programmed individually for 4 periods P1, P2, P3 and P4, making a total of 28 programmed periods. Alternatively, a weekday program can be set, so the same program is used for Monday-Friday. Similarly, a weekend program can be set for Saturday-Sunday. The entire week can also have the same program. Alternatively, a weekday or weekend program can be set with individual programs for the remaining days.

The suggested period settings for each day/s are:

Period 1 - morning

Period 2 - daytime

Period 3 - evening

Period 4 - night-time

Entering programming mode:

With the remote off, Press and hold the 'T/P' button for 2 seconds or longer then release, followed by another press and release of the 'T/P' button. If successful, the LCD will display 'Pd' at the top, and the word PROG at the bottom. The time at which the remote is currently set, and MO will flash.

Select which day/s to program. You must choose which day/s of the week you wish to program. Press and release the ▲ or ▼ button to change the day of the week to the following or previous day. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the day of the week by 1 day every 0.5 seconds. The order that you can scroll through the days is as follows:

MO→TU→WE→TH→FR→ 'MO TU WE TH FR' → SA → SU → 'SU SA' → 'MO TU WE TH FR SA SU'

To accept the selected day/s of the week press 'OK'.

First period's start time. The display will indicate 'P1' on the top. The Hour and AM/PM settings will now flash.

To set the P1 starting time:

Press and release the ▲ or ▼ button to increase or decrease the hour setting. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the hour setting by 1 hour every 0.5 seconds. Please ensure that AM/PM is set correctly. Press 'OK' to accept. The Minute setting will now flash.

Adjust the minute setting:

Press and release the ▲ or ▼ buttons to increase or decrease the minute setting. Press 'OK' to accept. Setting the temperature. The Set Temperature setting will now flash.

Adjust the desired set temperature:

Press and release the ▲ or ▼ button to increase or decrease the temperature setting by 1 °C. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the temperature setting by 1°C every 0.5 seconds. Press 'OK' to accept. Period 1 is now set for the day/s of the week that you have chosen. The LCD will display 'P2' to indicate that Period 2 can now be set for the same day/s of the week. Repeat the programming process for periods 2, 3 and 4. After program 4 is set, press 'OK' and the program for the selected day/s will be set. Repeat the programming process for any other periods/days that are required.

Restore factory default settings

With the remote off, press the following sequence of buttons: 'F', 'T/P', 'T/P' again, ▼. If done correctly, the icon 'rE' will be indicated on the LCD.

Teaching RF remote ID code to control unit

CAUTION: The remote has already been programmed with a unique code. Do not attempt to teach the RF Remote ID code unless instructed by the manufacturer. With the remote off, press the following sequence of buttons: 'F', 'T/P', 'T/P' again, ▲. The LCD display will show 'LC' (Learn Code) for 2 seconds then return to the normal OFF state display. During this time a special code will be transmitted by the RF Remote to the Control Unit, causing the Control Unit to learn its ID.

APP OPERATION

The app can be used both on iOS and Android devices they can be downloaded here:

Apple Store: <https://apps.apple.com/jm/app/intelligy-thermostat-mkii/id1327577138>


Google Play Store: <https://play.google.com/store/apps/details?id=com.millec.intelligythermostatmkii>

For instructions on how to push the appliance to your Wi-Fi, please go to the Warmington website and find details located under the 'Downloads' tab for your fireplace model.

The app has both manual control and automatic controls.

In manual control you can adjust the flame height by touching the < and > symbols next to the flame icon.

In automatic control you can adjust the desired room temperature by touching the < and > symbols next to the temperature.

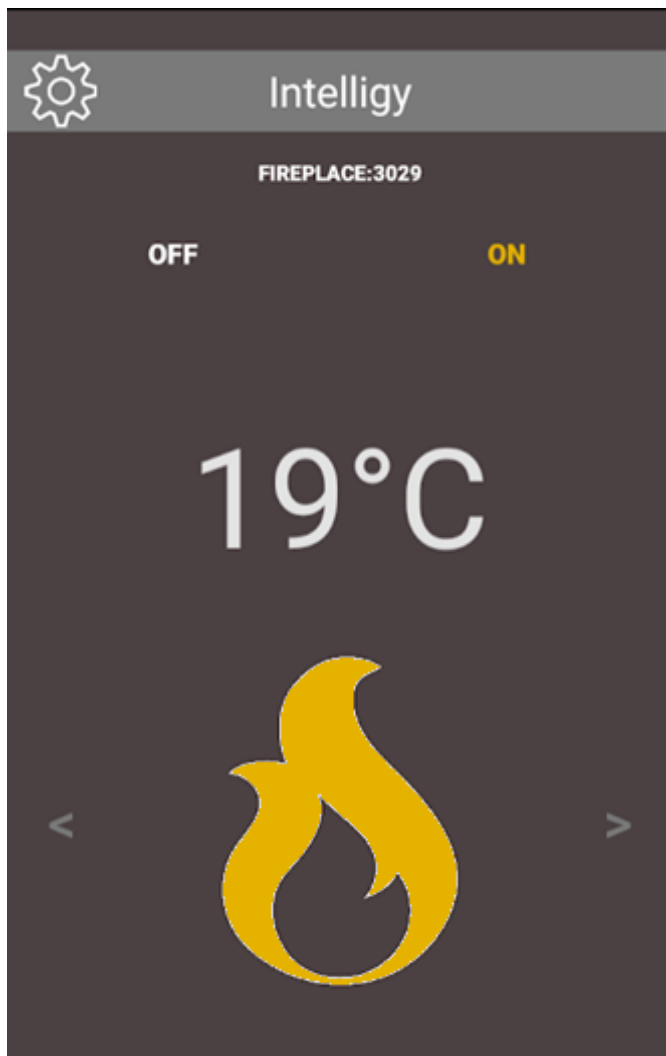


Manual



Automatic

MANUAL ON/OFF SWITCH

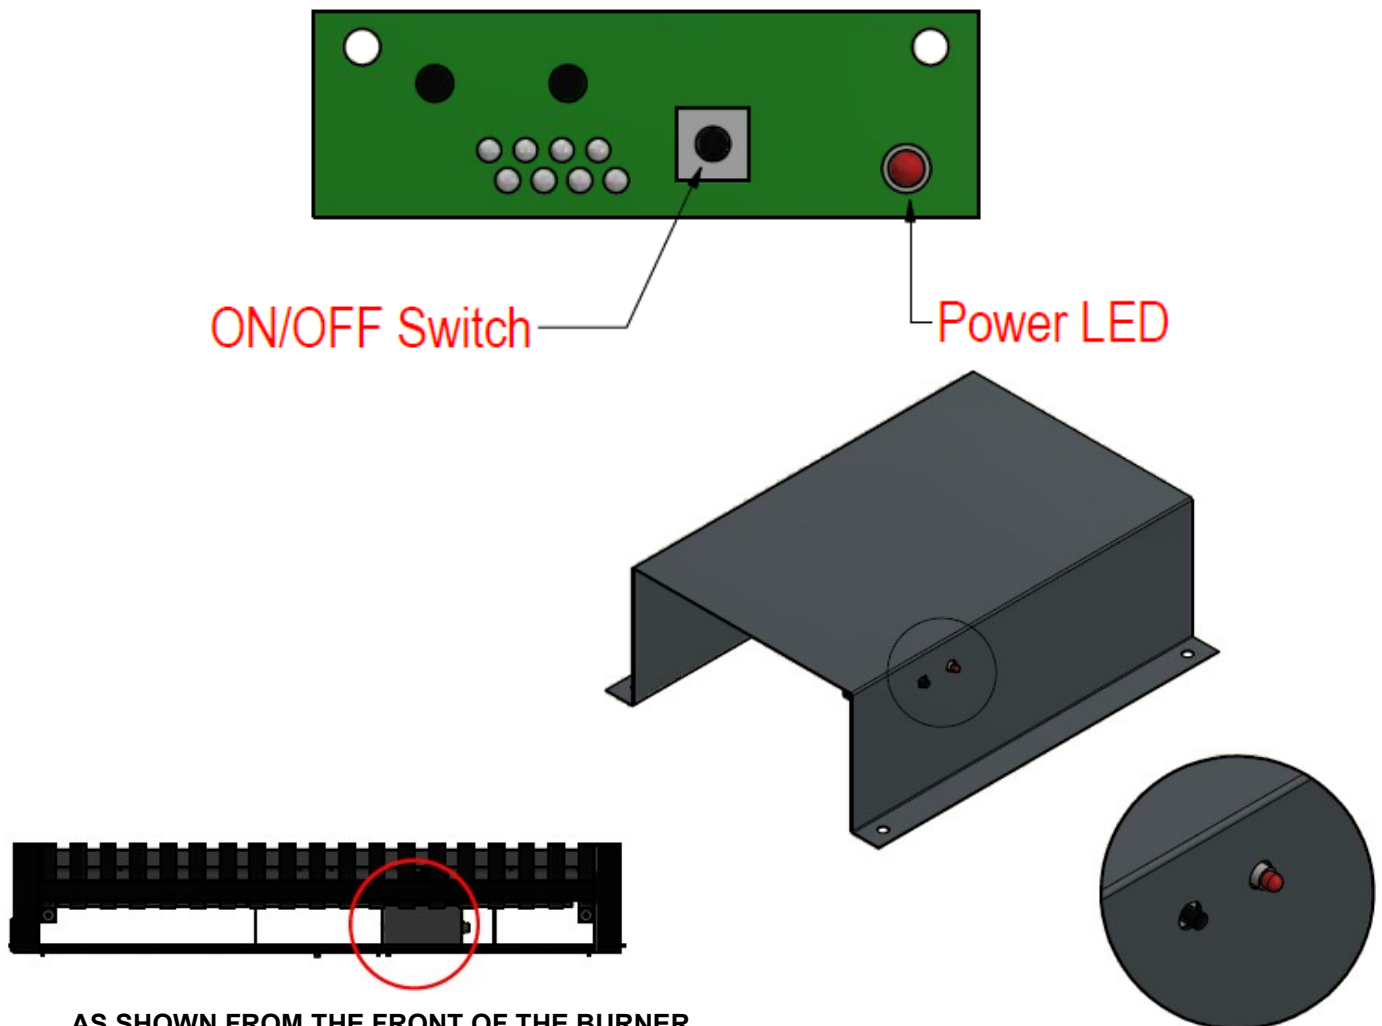

AS SHOWN FROM THE FRONT OF THE BURNER

The switch is located behind the grate on the control valve heat shield as shown above.

Press and release the power button. This will start the electronic spark and the power LED will be on permanently. The pilot will ignite first and once this is on, it will ignite the main burner. Pressing and releasing the power button again will switch off the appliance.

When the appliance is turned on, the gas fire will be set to medium flame setting.


If the gas fails to light, the appliance will go into lock out mode. To start the appliance again turn appliance off and wait 3 minutes before turning it on.

Please note that the power button is for use when the remote controller is lost or damaged and can't be used. This controller can not adjust flame height, hence is supplied for emergency use, if remote and phone App is not able to be used.

PROCEDURE FOR THE TEST AND COMISSIONING OF YOUR DECORATIVE BURNER.

Ensure Gas Supply and the Power Supply (caution 240V) to the Unit.

- Refer to Data Plate on this Specification for settings. The Data Plate is attached to the under carriage of the Burner.
- Remove Front Grate.
- Loosen the Jet Test point and attach manometer (Digital is preferred). The Test Point is on the Right Hand Side of the Gas Burner , as Shown Below.

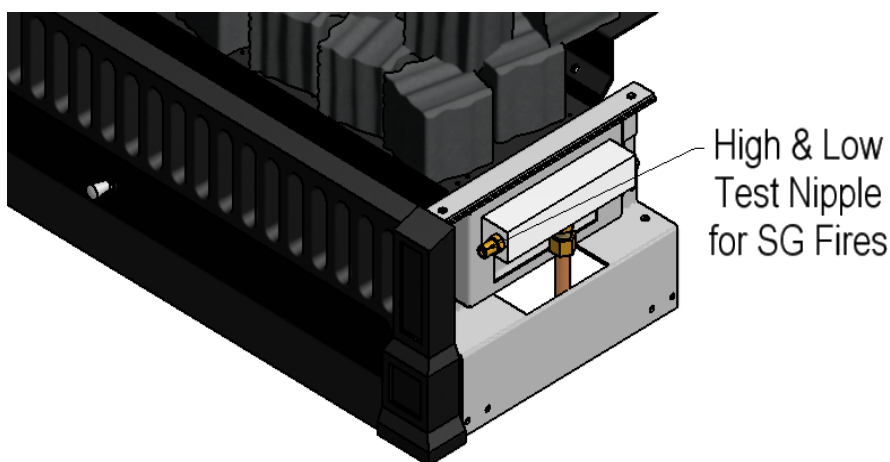

Note : Location of the Test Nipple - may vary from Model to Model

- Light Appliance, adjust to High Flame setting and check pressure, adjust to Low Flame and check pressure.

NOTE : If setting the Pressure is required it is to be carried out by a Certified Gas Fitter.

- If adjustments are necessary, remove the cap . The Pressure Adjustment Screw and Nut are on the Front Side of the Gas Control Valve (shown in Diagram **B** in this specification) and are **Factory** set.


High Pressure Setting: Set the modulator to Maximum Condition. Screw in **Nut A** to Increase the Outlet Pressure then screw Nut A out to Decrease the Pressure to the desired settings . Use 10mm spanner.

Low Pressure Setting: Turn Off the Power to the Modulator (by disconnecting the Modulator Harness Connection at the Valve - See Wiring Diagram in Page 17 .) and, keep Nut A stationary . Use a screwdriver to screw in **Screw B** to Increase the Pressure and Screw it Out to Decrease the Pressure . Carefully replace the Modulator Plastic Cap .

WARNING: To ensure the Correct Operation of the Modulator it is necessary that the Plastic Cap is returned to its original location .

DIAGRAM B (SHOWING CONTROL VALVE WITH TEST POINTS AND ADJUSTING SCREW).

Modulator Harness Connections

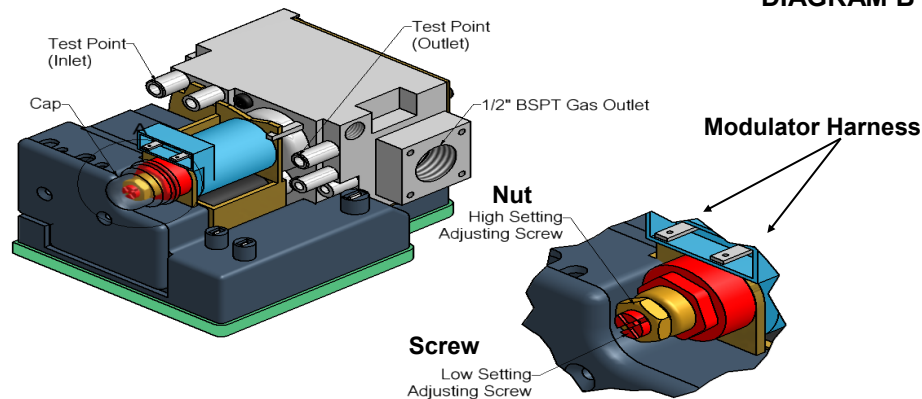

- After checking the pressure, turn the unit off, remove Manometer from the Test Point and Tighten the Test Point Screw. Ensure to check for gas leaks.
- Ensure Power is Off & Reconnect Modulator Harness Connection in the Main Harness. See Diagram B Above .
- Turn the Appliance On and Off a few times to check ignition.
- When you are satisfied that the Appliance is working correctly , fit the Front Panel Assembly back to the Gas Burner.
- NOTE : Ensure you peel the Protective Plastic Coating from any Stainless Steel components if fitted.
- All Burner Aerations are Factory Preset and cannot be adjusted.
- If you are unable to get the unit to operate correctly, refer to troubleshooting before contacting your Local Service Contact as listed.
- It may take approximately 2 hours of operation for the coals/Logs or river rocks to achieve their full flame pattern and glow.
- During the Initial Burning in period, some smoke and smell may be experienced , the appliance should be run on the high position in a well ventilated room until these dissipate .

ADJUSTMENT OF THE PILOT—3 FLAME

(BOTH SG & EG)


(Only to be Adjusted by Gasfitter)

Note: When the Base screw is removed, gas will leak from the out let, ensure that the pilot is not adjusted or the screw is removed when the fire is burning.




- Adjustment of Pilot - 3 Flame : Unscrew Base Screw as shown in Diagram 2 .
- Insert a Screw Driver as shown in Diagram 3 and adjust the Adjustment Screw up inside the 3 Flame Pilot to adjust the Flame Height .
- The Flame must always be passing over the Electrodes &/or File Tube on either side .
- Replace the Base screw and check for leaks.

Note: to Gas Fitters

The 3 flame pilot may need adjustment after a period of running time on set up as the increase in heat in the fire will induce a higher draft in the fire, and may pull in flame away from the File Tube causing the fire to shut down.

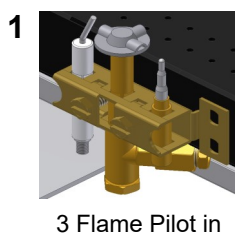


3 Flame Pilot in

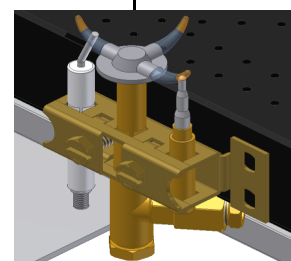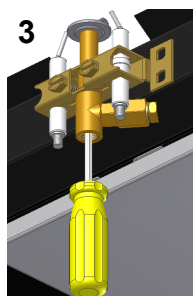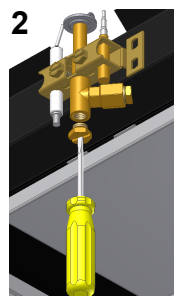

Correct Operation of 3 Flame Pilot

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

FULLY MODULATING (SIT 845) - WIRING DIAGRAM

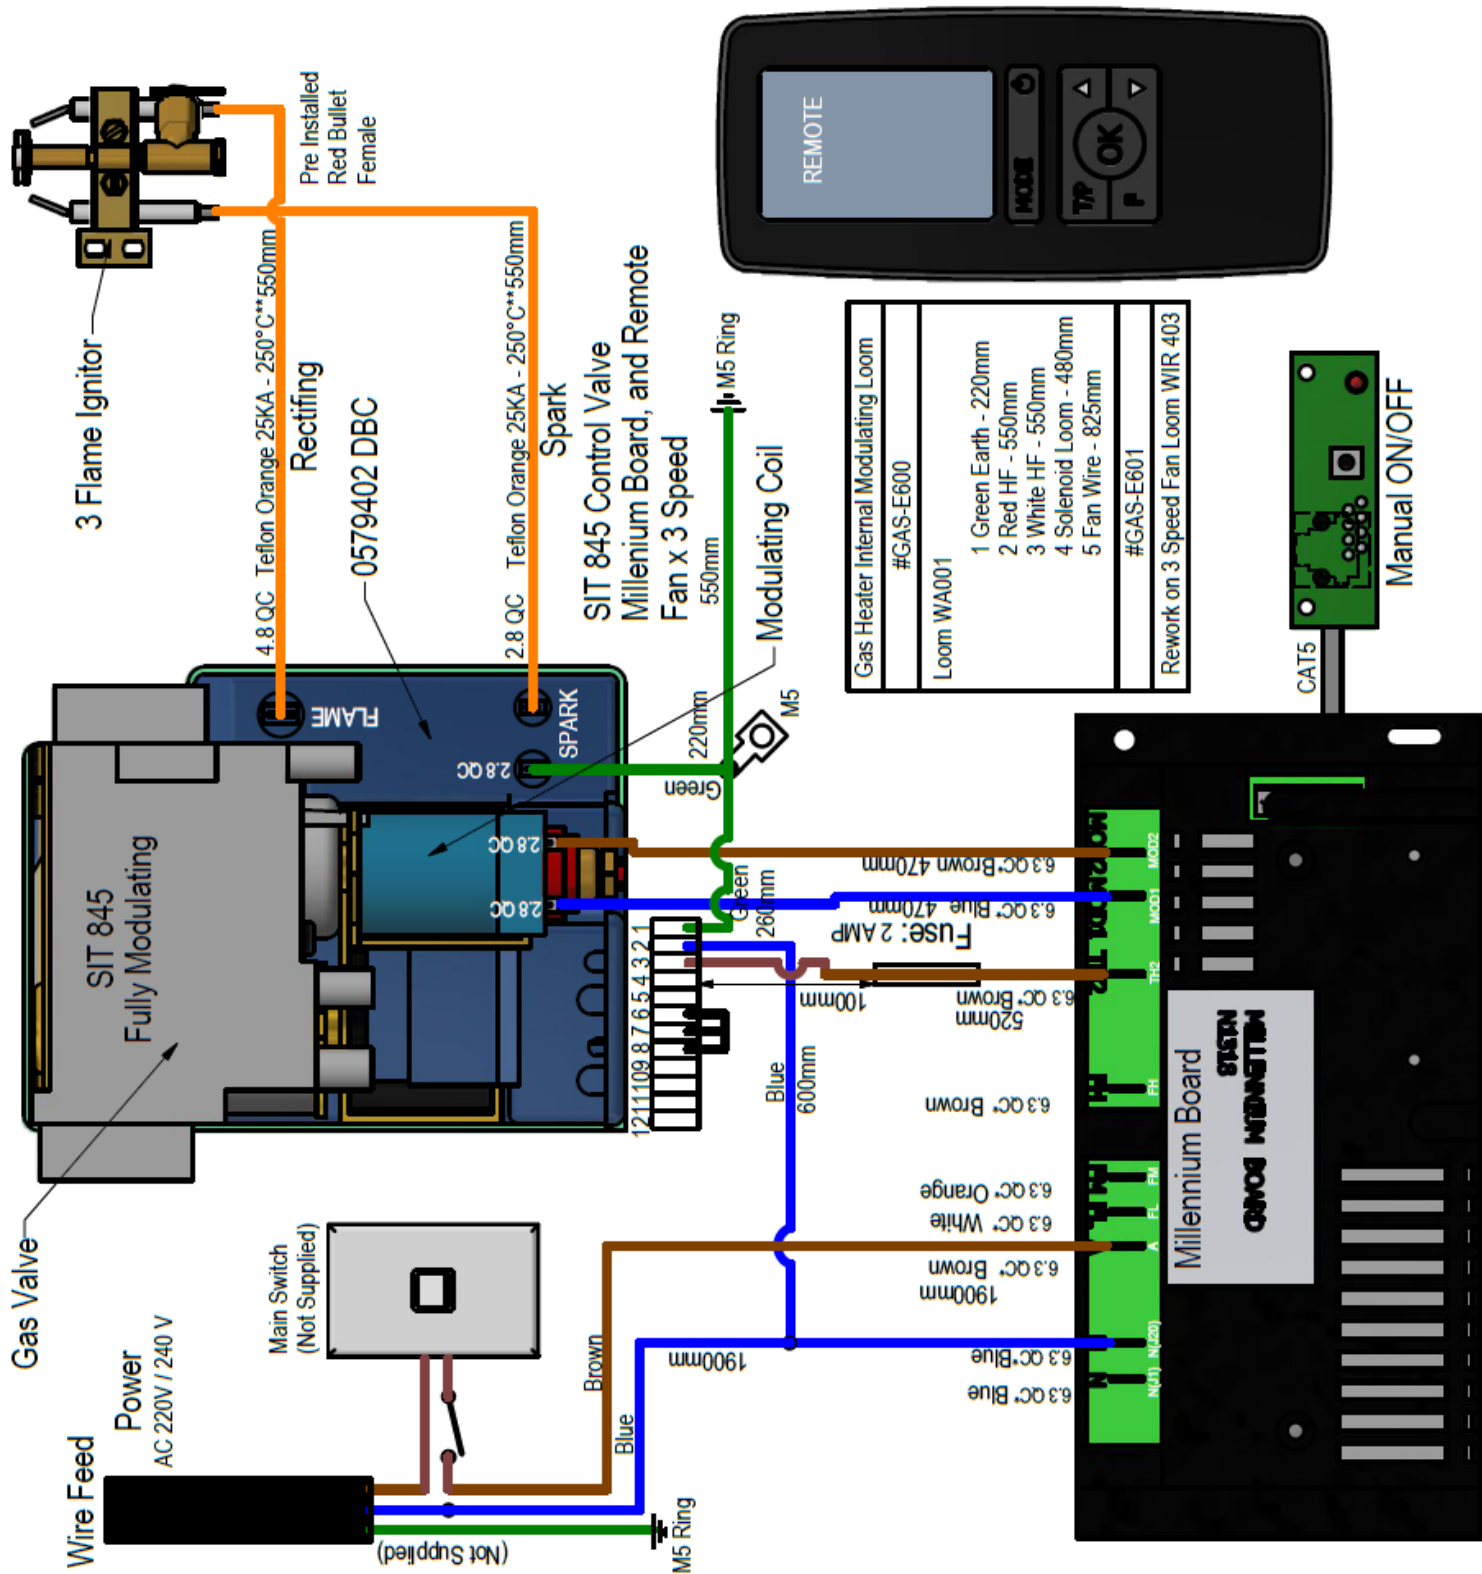

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

POINTS OF SAFETY—To the Customer /Home-Owner

Your Warmington Gas Decorative Fire operates on the principle of dual radiant and convected heat. Therefore it is important to observe the following precautions associated with any heating appliance or open fire.

- Do not cover or restrict the fireplace upper or lower vents in any way as this may result in a build-up of hazardous gases within the room.
- The fire is not intended for the drying of clothing, bedding etc.
- Avoid installing this appliance in high traffic areas, strong draughts or near drapes or furniture.
- The use of an approved fireguard is recommended for the protection of young children.
- Avoid using aerosols when the appliance is operating.
- Avoid anyone leaning against or lying directly in front of the fire while operating.
- Do not place anything objects into or against the gas fire at any stage.
- The fire may release a small amount of smoke on its first start up which may take 1 or 2 hours to dissipate. This is part of the curing process so ensure there is adequate ventilation within the room.
- Always use a registered Gas Fitter or Electrician for installing and maintenance work.
- Always use certified gas cylinders that have been tested and are safe to use.
- Never modify your gas appliance or its settings from those specified by the manufacturer.

APPLIANCE SAFETY Any gas fire appliance shall comply with the safety requirements of the current standards listed under "Related documents" in this specification.

ELECTRONIC CONTROL SYSTEMS Any gas fire appliance fitted with manual or programmable electronic control systems shall be tested and/or approved by a recognised person or authority.

SEISMIC RESTRAINTS All gas fires used for domestic and commercial purposes shall be firmly secured (unless defined as portable or mobile) to prevent dislodgement from their point of fixture or installation during seismic activity. Such restraint

WHAT DO YOU DO IF YOU SMELL GAS

Open windows and doors

Do not light any gas appliance

Do not use any electrical appliance or switches

Do not use the telephone in your home

Leave the building; shut off the domestic gas supply valve (beside your meter)

Call your gas supplier/gas fitter or the Fire Service for further advice

MAINTENANCE

**Lighting your gas fire using electronic or remote ignition systems may vary as per manufacturer instructions.*

Warmington Industries recommend annual servicing of your gas fire by an approved Warmington dealer Gas Fitter.

External surfaces should be dusted with a damp, lint-free cloth when the fire is cold.

Warmington Industries provide 12 months warranty from the date of purchase, for domestic or commercial installations.

This Warranty Covers :

Replacement Parts and Labour for Gas Control Components due to Manufacturing Defects Only.

Repair or Replacement of the Burner or Firebox Components due to Manufacturing Defects Only.

Warranty cover will be considered void if the product is subject to incorrect installation, failure to operate the appliance in accordance with the supplied instructions and specifications or is subject to damage or misuse beyond the expected conditions of normal use.

All installations and servicing must be carried out by and approved Warmington dealer or Gas Fitter.

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

GENERAL NOTES**NOTES:**

- These installation and operating instructions should be kept in a safe place. Should you require another copy, download from the **Warmington** website www.warmington.co.nz
- This appliance must be installed in accordance with the manufacturer's written instructions to comply with the **Warmington** warranty.
- The appliance and flue system must be installed in accordance with relevant standards and the appropriate building codes.
- This appliance must be serviced annually and any service operation must be carried out by a qualified service person.

WARNINGS:

- **WARNING; ANY MODIFICATION OF THE APPLIANCE THAT HAS NOT BEEN APPROVED IN WRITING BY THE TESTING AUTHORITY IS CONSIDERED A BREACH OF NZ STANDARDS.**
- **WARNING; DO NOT USE OR STORE FLAMMABLE LIQUIDS OR AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILST IN OPERATION.**
- **WARNING; DO NOT PLACE FLAMMABLE MATERIALS ON OR AGAINST THIS APPLIANCE.**
- **CAUTION:** THIS APPLIANCE SHOULD BE MAINTAINED AND OPERATED AT ALL TIMES IN ACCORDANCE WITH THESE INSTRUCTIONS.
- **CAUTION:** ALL SERVICING MUST BE CARRIED OUT BY AN AUTHORISED SERVICE TECHNICIAN.
- **CAUTION:** MAKE SURE THE USE OF CORRECT FUEL TYPE WITH THIS APPLIANCE.

NOTE: Keep a copy of these instructions for operating and maintenance guidelines.



Industries 1994 LTD
PO Box 58652, Botany 2163, Auckland www.warmington.co.nz

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.