


Debonaire Virage LH 1200-1600-2000-2400-2800

Debonaire Virage LH - Gas Burner Installation Instructions

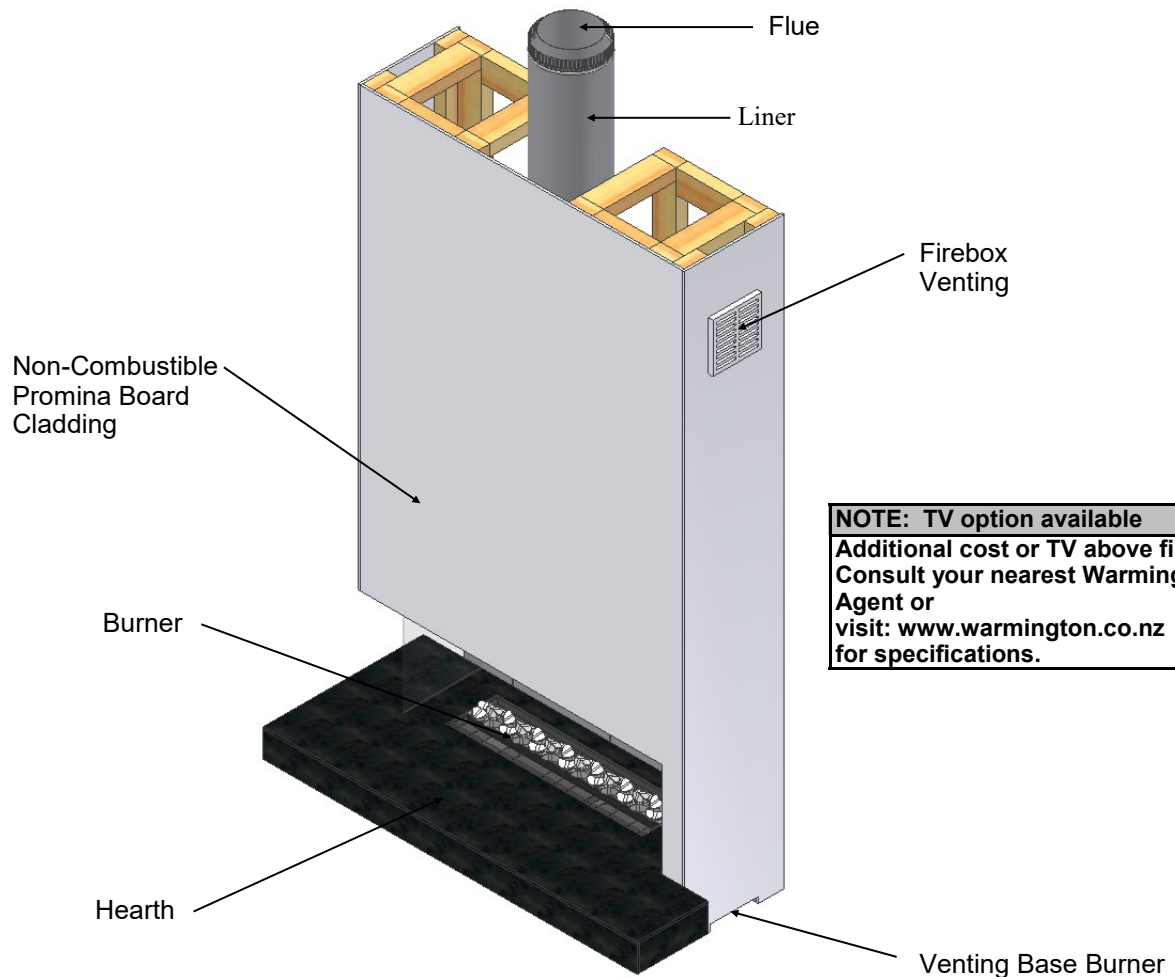

Related documents

Fire and flue system installation, and instructions to comply with NZS 5601.1:2013, 3645.1(Int):2010, 3645.2(Int):2010, 5266:2014, 2918:2001.

The fireplace is constructed and tested to comply with NZS 4558(int):2013 'Decorative gas log and other fuel effect appliances'.

Keep these instructions for further reference. Ensure that you have the correct and current installation details for the Warmington fireplace.

Installation

The Warmington unit is to be installed by a certified Warmington installer or an approved NZHHA installation technician.








See www.homeheat.co.nz/members for a certified NZHHA SFAIT Installer in your area.

A licenced certified gas fitter and licenced electrician are required to run power and gas supplies as required to the unit and any commissioning as part of the installation process. The heater must be installed according to these instructions and in compliance with all relevant building, gas fitting, electrical and other statutory regulations.

IMPORTANT

Read all the instructions carefully before commencing the Installation. Failure to follow these instructions may result in a fire hazard and void the warranty

COMPONENTS REQUIRED FOR CONSTRUCTION
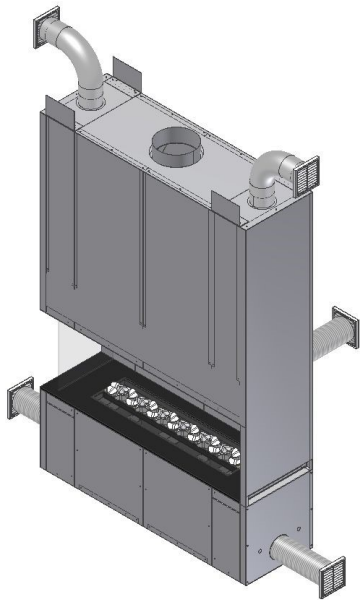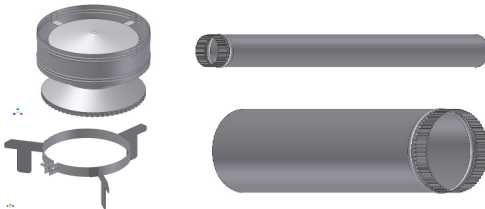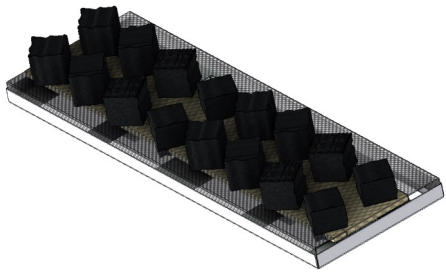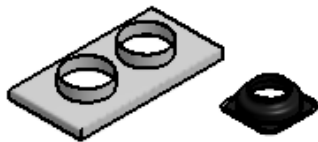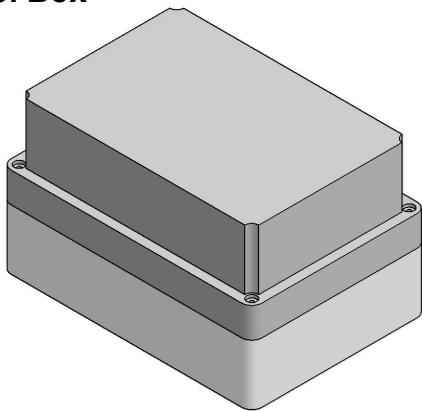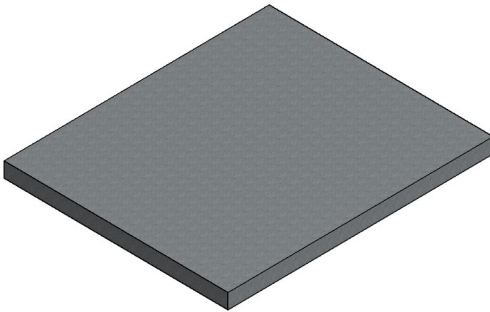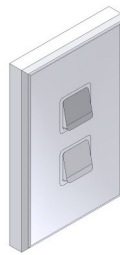
| Supplied | No: | NOT Supplied (sold separately) | No: |
|--|-----|---|-----|
| Warmington Debonaire Firebox  | 1 | Warmington Freestanding Flue kit  | 1 |
| Debonaire Burner  | 1 | Flashing System  | 1 |
| Control Box  | 1 | Hearth/ Plinth  | 1 |
| | | Isolating Switch  | 1 |
| | | Vents | |
| | | Exhaust Sealant | |
| | | Gas fitting | |
| | | Electrical work and Feed | |
| | | Fire / Flue kit / Flashing Installation | |
| | | Council Permit | |

| Assembly Check List | Tick Box |
|---------------------|----------|
| Firebox | |
| Burner | |
| Control Box | |
| Specifications | |
| Packed By | |

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

POINTS TO CONSIDER PRIOR TO INSTALLATION

Location of the fire. Open fires are better located at one end of a room or area, as they project the heat away from their opening.

Venting to the cavity.

This air is to allow the cavity to vent the warm air. This warm air helps keep the fire and flue system from getting to cold. If the flue and fire get to cold the system may soot and require cleaning. Each fire has different ways of venting the cavity.

The Topography of the land .

The slope and position of the land in relation to the home has a bearing on how the wind will interact with the fire and flue system. Care needs to be taken to ensure that the flue termination is in the correct position to maximise performance.

The Prevailing Wind.

Care needs to be taken to ensure that the flue termination is in the correct position as wind and gusts that hits the flue and cowl system may overcome the cowl and draft back down the flue into the home. This can be a combination of down draft and high pressure.

Hearth and plinth:

The height of the hearth off the floor. The finishing that is to be used on the hearth is to be allowed for at the design stage.

Positioning of the Flue system:

Flue Systems are to comply with the appropriate standard.

Flue And Fire Clearance:

To be maintained to the manufactures Instructions. Reference the appropriate standard.

Pressure Differential, Venting & External Air into the Building :

All fires need air to burn and draw correctly, Kitchen Fans, Air Conditioning units, High Wind Zones, Naturally forming Draft spaces, can all have an effect on the pressure difference from inside the building to the outside. A lower pressure in the building may induce a draft down the flue system and back into the building causing the fire to smoke or spill into the building. **Care needs to be taken at the design and installation stage to adequately vent the building, or some mechanical system to ensure that there is always a neutral or positive pressure at the fireplace and a negative pressure at the flue outlet.** This will ensure that the draft in the flue system is always to the outside.

'CAITEC AIR' the limits and requirements. See details in these Spec's, on www.warmington.co.nz or contact your local Agent.

Wind Noise:

You may encounter wind noise in some installations. It is recommended to use an enclosed chase with a chimney pot to help reduce noise. There will always be some noise from the flue systems of all fireplaces.

INSTALLATION ORDER OF OPERATIONS

Important Notes:

1. **Consult a licenced certified gas fitter for correct gas installation.**
2. Install to current standards.
3. Install to manufacture's specifications.
4. All new installations require a permit.
5. Allow for gas supply to heat cell at the rear, and power supply to the rear if required.
6. For special requirements concerning materials (timber mantle and surrounds) within close proximity of Warmington products, please contact your local Warmington Technical Consultant.

Stage 1: Frame Construction Procedure by Builder.

1. Mark out flue centre.
2. Mark out heat cell clearance requirements.
3. Build timber framing to heat cell clearances and chimney chase clearance requirements.
4. Ensure that front face of heat cell clearance alcove is left open and unframed to enable installation of the firebox. The chimney chase is left unlined for installation of the flue.
5. Construct plinth only, to required height. *

Stage 2: Install Procedure by Certified 'Warmington Installer' or Certified Person (Gas Fitter / Plumber)

1. Fit fire to plint. (Ensure gas supply line is fed through firebox.)
2. Fit flue system.
3. Fit cowl and flashing system.
4. Fit vents to heat cell alcove and chimney chase, to cool the heat cell and ensure efficiency of CAITEC Technology.

Stage 3: Finishing Procedure by Builder.


1. Construct hearth to required thickness. *
2. Finish framing of heat cell alcove.
3. Close in heat cell alcove and chimney chase.
4. Finish heat cell alcove and hearth to customer's requirements (e.g. paint / tiles).
5. *** Note: Certified installer can install hearth and plinth.**

Maintenance.


Visually inspect fireplace and flue system.
Ensure that firebox is operated according to manufacture's instructions.

CUSTOM GAS FIREBOX DIMENSIONS


| Description | | 1200 | 1600 | 2000 | 2400 | 2800 |
|------------------------|---|------|------|---------|---------|---------|
| Firebox Overall Width | A | 1200 | 1600 | 2000 | 2400 | 2800 |
| Firebox Overall Height | B | 1800 | 1800 | 1800 | 1800 | 1800 |
| Firebox overall Depth | C | 390 | 390 | 390 | 390 | 390 |
| Window Width | D | 1050 | 1450 | 1850 | 2250 | 2650 |
| Window Height | E | 400 | 400 | 400 | 400 | 400 |
| Base Height | F | 400 | 400 | 400 | 400 | 400 |
| Convection Vent Dia | G | 100 | 100 | 100 | 100 | 100 |
| Flue Dia. | H | 200 | 275 | 2 x 200 | 2 x 250 | 2 x 250 |
| Flue Liner Dia. | | 250 | 325 | 2 x 250 | 2 x 300 | 2 x 300 |
| Double Flue Center | | NA | NA | 600 | 1000 | 1400 |

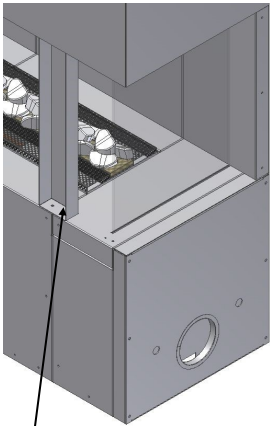

NOTE:
Support Arm to be
Removed once
Firebox is Bolted to
Supporting Framing
or Block Work

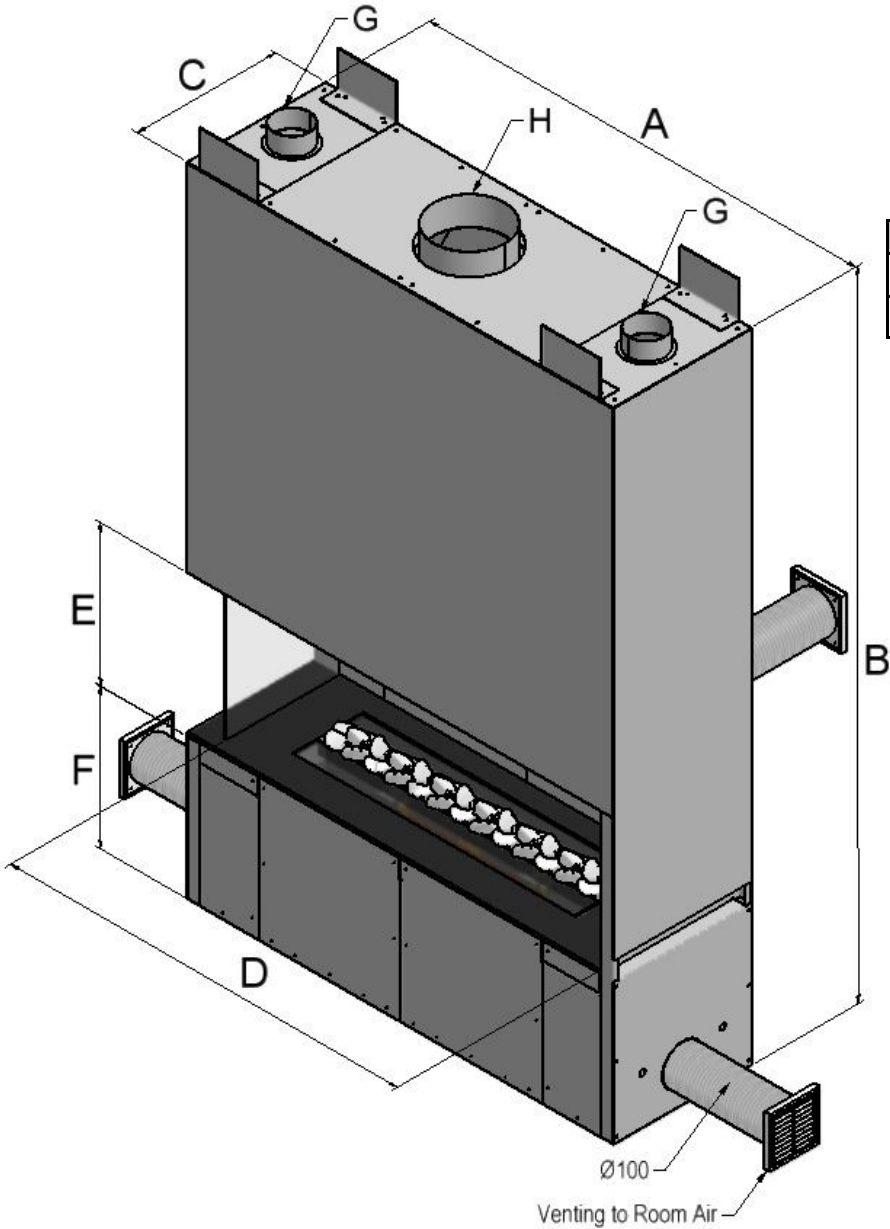


| Minimum Flue Height | |
|------------------------------|------|
| Flue Height | 3600 |
| Measured From Top of Adaptor | 3600 |

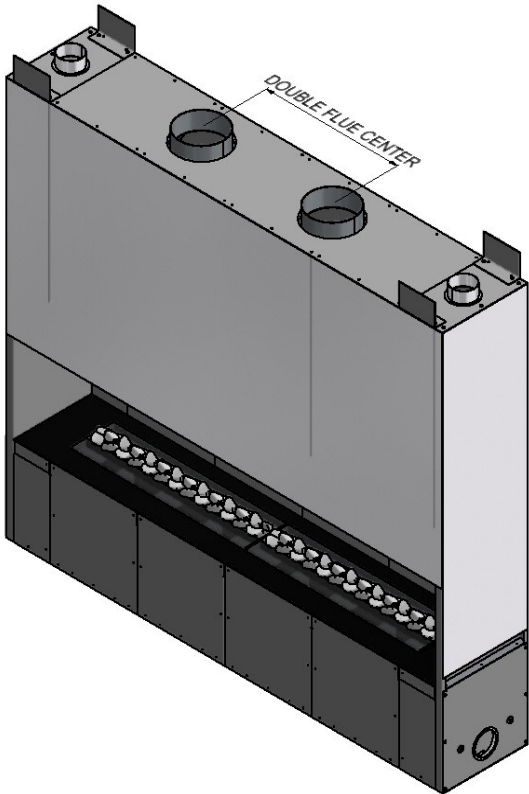

GAS SPECIFICATIONS (tested to current gas standards)

| MODEL | 1200 | 1600 | 2000 | 2400 | 2800 |
|--------------------------|----------|----------|----------|----------|----------|
| LPG | | | | | |
| Nominal Pressure kPa | 2.75 | 2.75 | 2.75 | 2.75 | 2.75 |
| Nominal Injector Size mm | 2x 1.3mm | 3x 1.3mm | 4x 1.3mm | 5x 1.3mm | 6x 1.3mm |
| Burner Pressure High kPa | 2.50 | 2.50 | 2.50 | 2.50 | 2.50 |
| Burner Pressure Low kPa | 0.75 | 0.75 | 0.75 | 0.75 | 0.75 |
| MJ/h | TBC | 64 MJ/h | TBC | TBC | TBC |
| Flame Effect Output Only | Effect | Effect | Effect | Effect | Effect |
| Supply Pipe Size dia—min | 3/8" | 3/8" | 1/2" | 1/2" | 1/2" |
| Natural Gas | | | | | |
| Nominal Pressure kPa | 1.5 | 1.5 | 1.5 | 1.5 | 1.5 |
| Nominal Injector Size mm | 2x 2.0mm | 3x 2.0mm | 4x 2.0mm | 5x 2.0mm | 6x 2.0mm |
| Burner Pressure High kPa | 1.0 | 1.0 | 0.9 | 0.85 | 0.5 |
| Burner Pressure Low kPa | 0.3 | 0.3 | 0.3 | 0.25 | 0.2 |
| MJ/h | 41 | TBC | TBC | TBC | TBC |
| Flame Effect Output Only | Effect | Effect | Effect | Effect | Effect |
| Supply Pipe Size dia—min | 3/8" | 1/2" | 1/2" | 1/2" | 1/2" |
| Lab. Test No (LPG) | TBC | 2/2-22 | TBC | TBC | TBC |
| Lab. Test Dates (LPG) | TBC | WAR0168 | TBC | TBC | TBC |
| Lab. Test No (NG) | TBC | TBC | TBC | TBC | TBC |
| Lab. Test Dates (NG) | TBC | TBC | TBC | TBC | TBC |

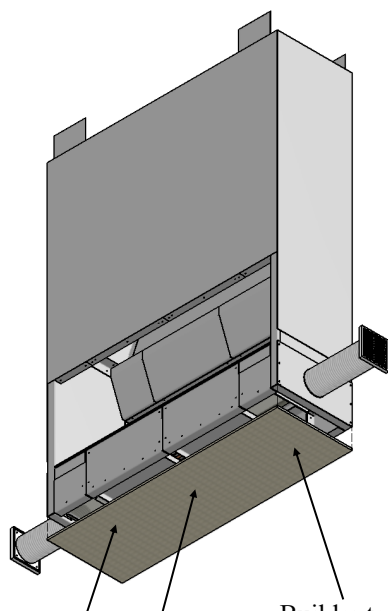

Seismic restraint
Secure firebox through anchor points provided

Builder to supply non-combustible base compressed sheet to act as seal to base

This is a raised & cantilevered hearth



HEARTH & PLINTH CONSTRUCTION DETAILS

Note hearth and plinth construction


Plinth to be offset above hearth by the hearth's finishing (e.g. tiles/granite/solid plaster/etc.)

Raised hearth & plinth with cantilevered hearth must be adequately supported to take the weight in accordance with the NZ Building Code.


Offset for hearth finishing

Hearth & plinth material must be built with non-combustible material.

Offset

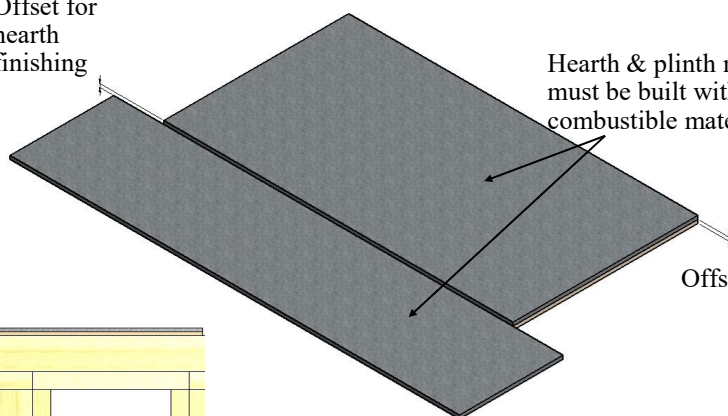


MINIMUM ALCOVE CLEARANCES

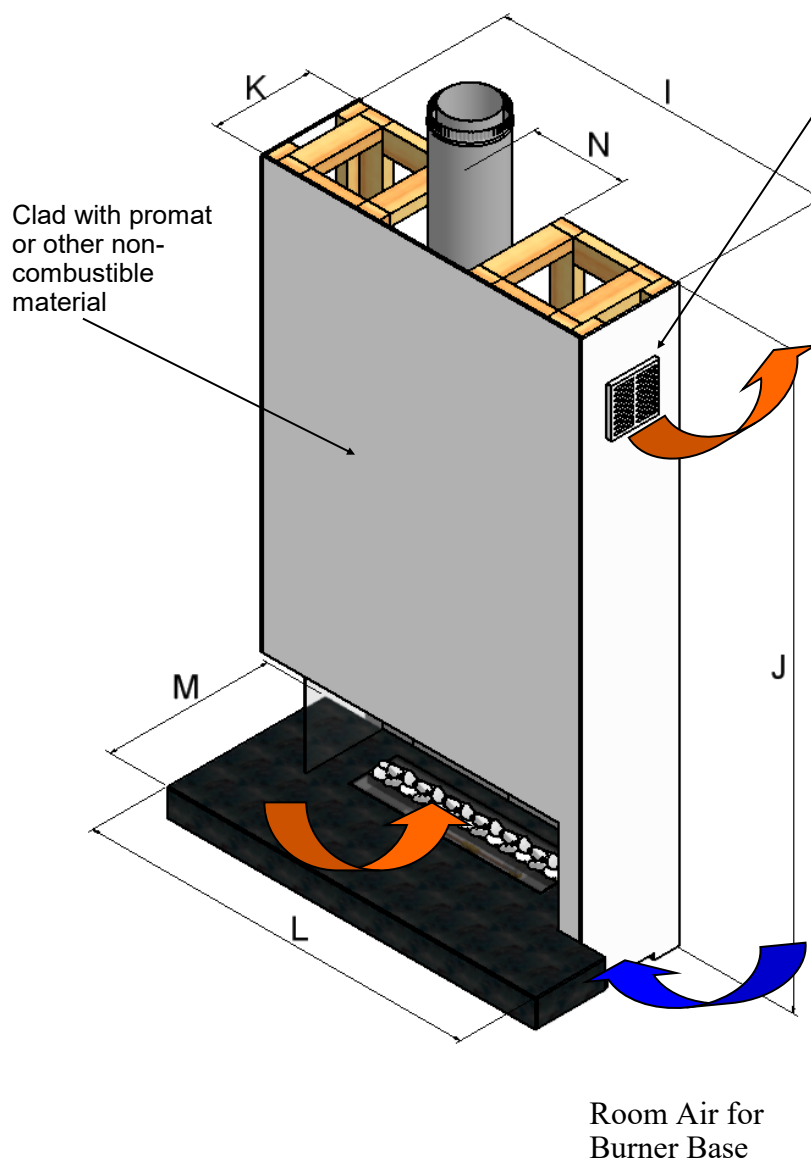

warm air return to room (optional Caitec) vent grill NOT provided

FRAME OUT DETAIL

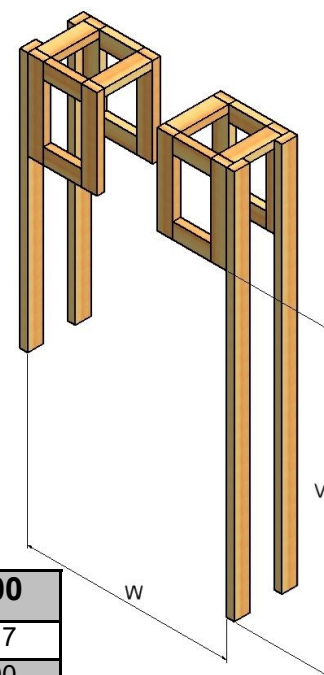


| Description | | 1200 | 1600 | 2000 | 2400 | 2800 |
|-------------------------|---|------|------|------|------|------|
| Outside Framing | I | 1317 | 1717 | 2117 | 2517 | 2917 |
| Framing Height | J | 2400 | 2400 | 2400 | 2400 | 2400 |
| Framing Depth | K | 390 | 390 | 390 | 390 | 390 |
| Hearth Width | L | 1530 | 1930 | 2330 | 2730 | 3130 |
| Hearth Depth | M | 655 | 655 | 655 | 655 | 655 |
| Chimney Chase Clearance | N | 350 | 425 | 950 | 1400 | 1800 |
| Timber Opening | | | | | | |
| Window Height | V | 1850 | 1850 | 1850 | 1850 | 1850 |
| Window Width | W | 1223 | 1623 | 2023 | 2423 | 2823 |

VENTING THE BURNER CAVITY ONLY - General


IMPORTANT NOTE

The burner and the burner base are to be vented into the same air space, eg. the room that the burner is taking its air from must be the same as the position of the vent for the burner base.

The burner base must be vented separately to the alcove and flue system, this is to avoid the flames and heat being drawn from the fire, down into the burner base and up into the cavity - heating and damaging the control system.

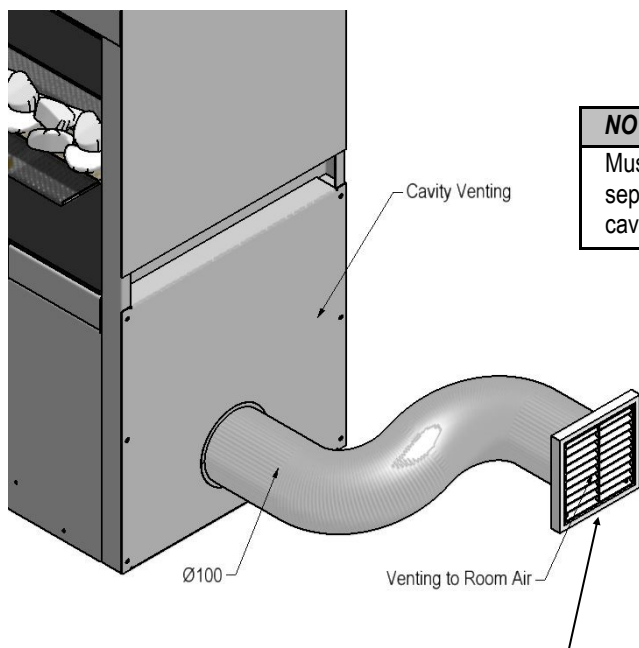

from the room that the burner takes its air from.

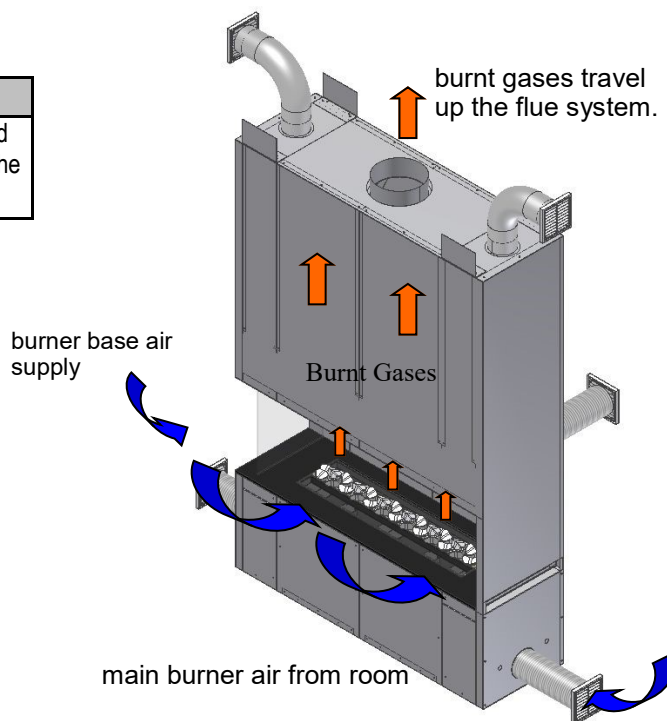


VENTING THE CAVITY & VENTS FOR CONVECTION AIR - General

The cavity venting will allow the air to move through the heat exchanger returning warm air to the room.

NOTE:

This cavity air must not be vented to the burner cavity

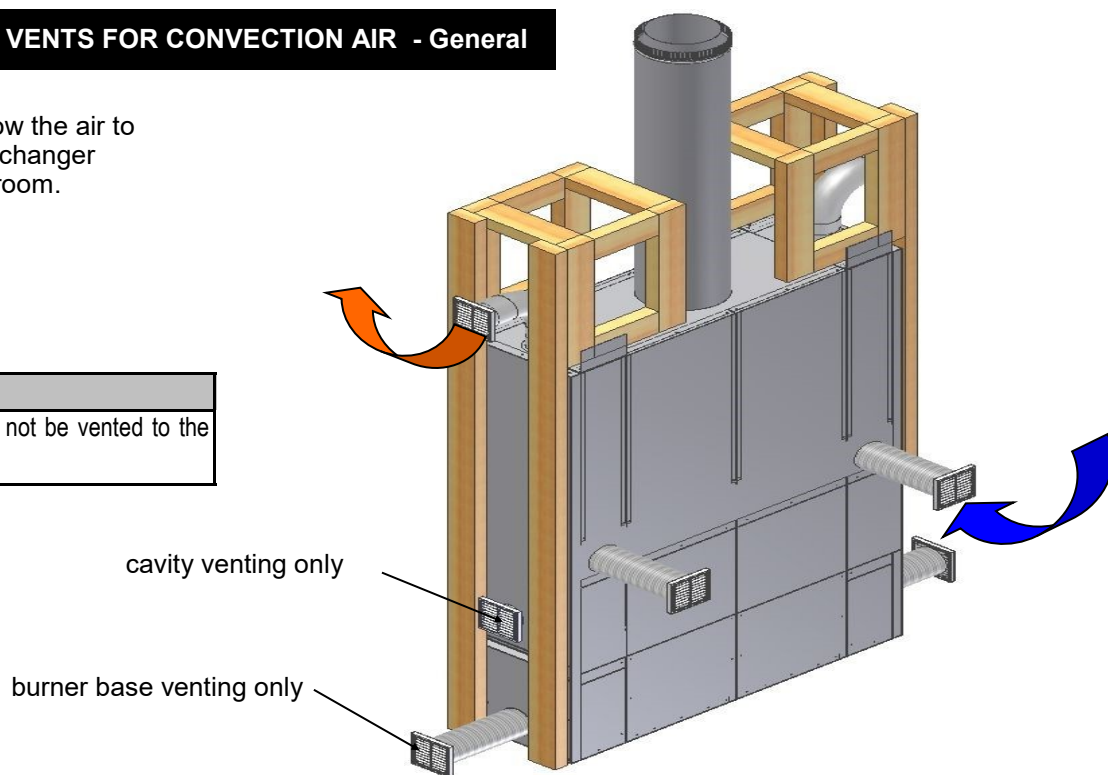

FIREBOX INSTALLATION

This is a general installation guide only – Contact a ‘NZHHA Installer’ or Gas Fitter for Installation Advice.


1. All the dimensions are minimums.
2. Fit the plinth into position inside the cavity. If installing onto a wooden floor, ensure that an insulating plinth is fitted as per the specifications. Ensure that the plinth is elevated to allow for finishing on the hearth. (See Hearth and plinth details)
3. Fit the firebox into the cavity. Bolt the fire box to the plinth or through to the floor with the bolting point provided on the left and right hand sides of the fire box (seismic restraints).
4. Install the flue system.

HEARTH & PLINTH CONSTRUCTION DETAILS

IMPORTANT NOTE:

Note: *Hearth and Plinth construction.*

Plinth to be off set above hearth by the hearth finishing's (e.g. tiles / granite / plaster / etc)

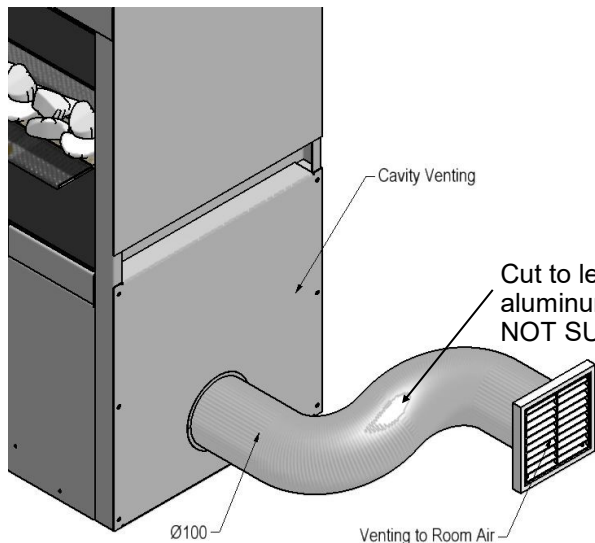

Note:

vent & duct
NOT SUPPLIED


Vent NOT SUPPLIED

300mm Minimum Projection


10mm Minimum
Non-Combustible Material

Note:

Hearth to be constructed as
per specification

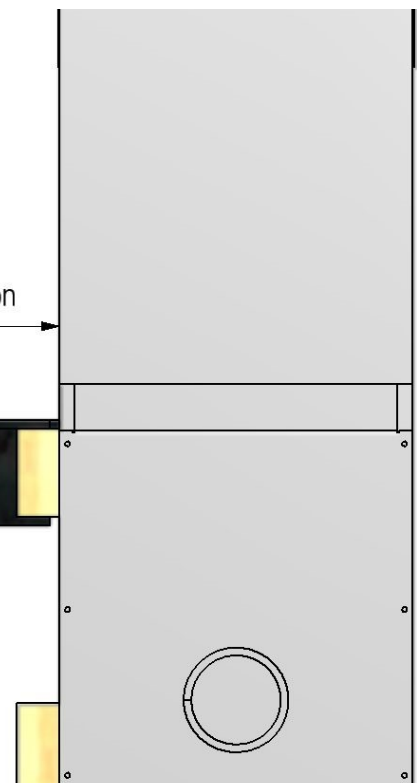


PLAN

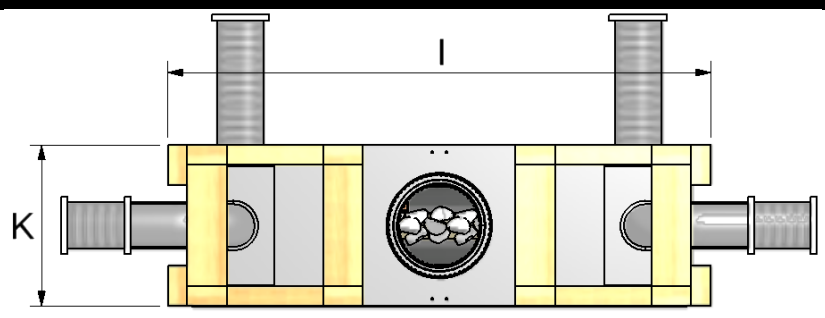

FRONT ELEVATION & CROSS SECTION

| Description | | 1200 | 1600 | 2000 | 2400 | 2800 |
|-----------------|---|------|------|------|------|------|
| Window Height | E | 400 | 400 | 400 | 400 | 400 |
| Base Height | F | 400 | 400 | 400 | 400 | 400 |
| Outside Framing | I | 1317 | 1717 | 2117 | 2517 | 2917 |
| Framing Height | J | 2400 | 2400 | 2400 | 2400 | 2400 |
| Framing Depth | K | 390 | 390 | 390 | 390 | 390 |

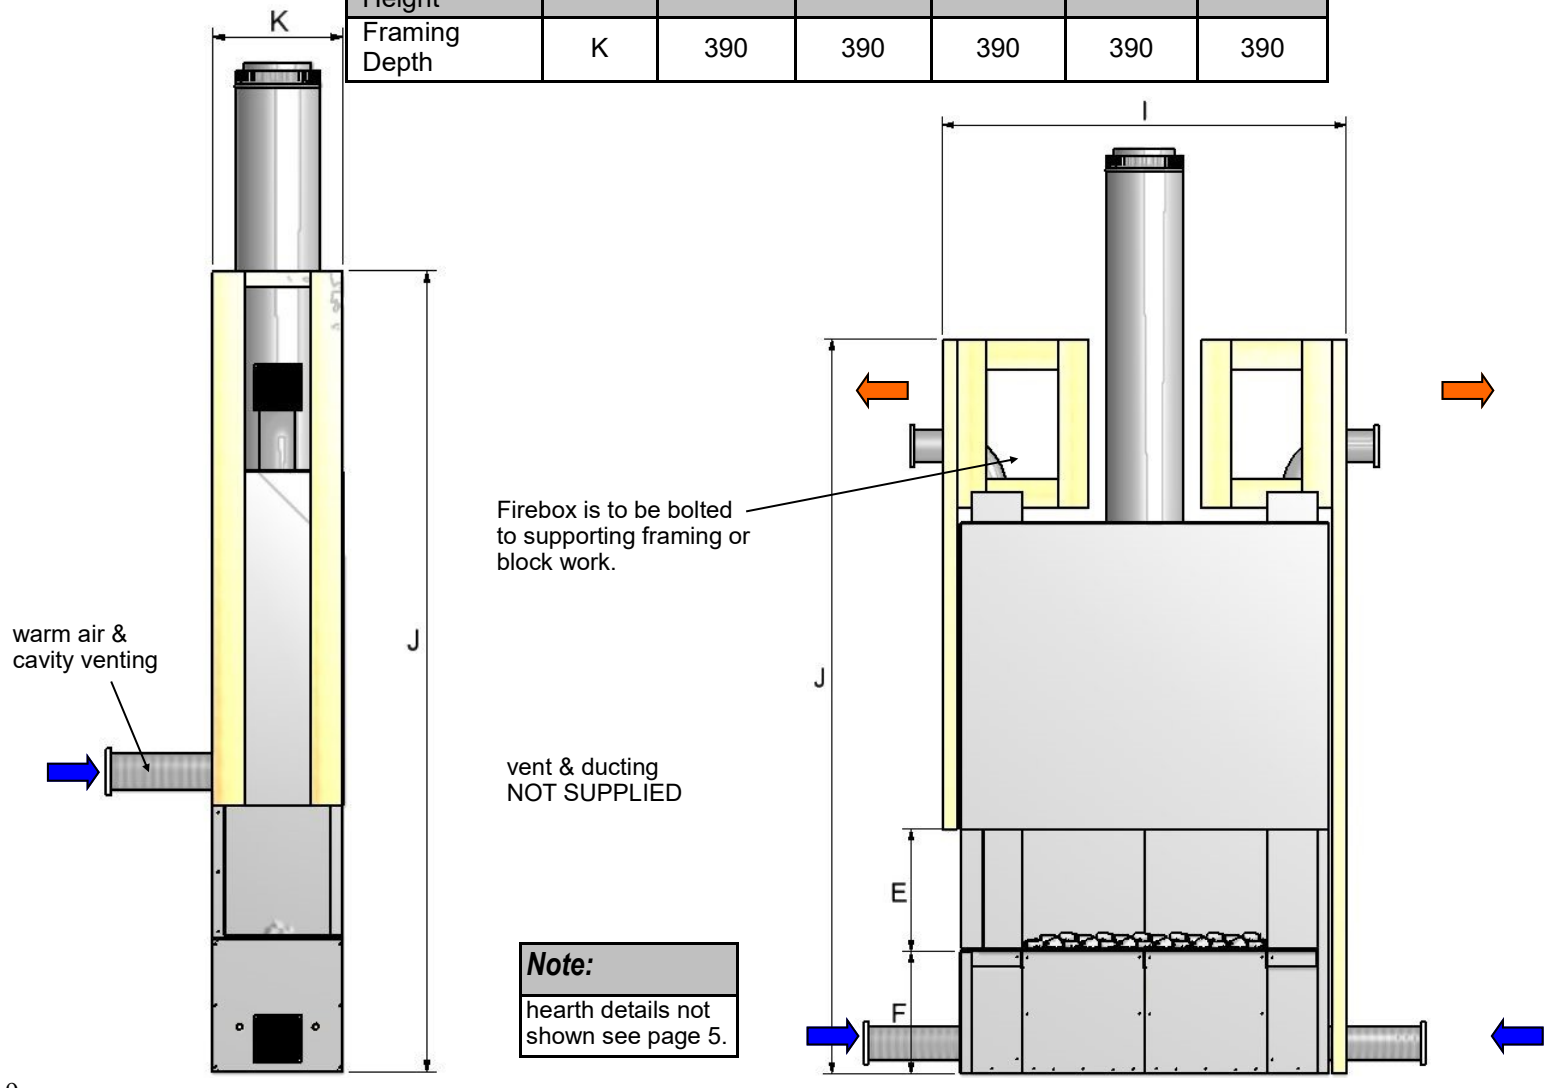

FLUE DETAILS DIMENSIONS (double flue system)

| Minimum Flue Height | |
|------------------------------|------|
| Flue Height | 3600 |
| Measured From Top of Adaptor | 3600 |

| Flue details | No. | 1200 | No. | 1600 | No. | 2000 | No. | 2400 | No. | 2800 |
|----------------|-----|---------|-----|---------|-----|---------|-----|---------|-----|---------|
| Cowl | 1 | 200 | 1 | 275 | 2 | 200 | 2 | 250 | 2 | 250 |
| Spacer | 3 | 200 | 3 | 275 | 6 | 200 | 6 | 250 | 6 | 250 |
| Flue Diameter | 3 | 200 | 3 | 275 | 6 | 200 | 6 | 250 | 6 | 250 |
| Liner Diameter | 3 | 250 | 3 | 325 | 6 | 250 | 6 | 300 | 6 | 300 |
| Bottom Spacer | 1 | 200/250 | 1 | 275/325 | 2 | 200/250 | 2 | 250/300 | 2 | 250/300 |

ANY OPENING OR CAVITY MUST BE MORE THAN 1 METRE AWAY FROM WHERE EXHAUST GASES ARE PRESENT

NOTE: Ensure that a standard tested Warmington flue system is used on Warmington fires.

GENERAL FLUE SYSTEM INSTALLATION GUIDE ONLY (MAY VARY ON SITE INSTALL)


This is a general installation guide only – Contact a ‘NZHHA Installer’ for Installation Advice.

1. Install the first length of flue pipe with the crimped end down, inside the Adaptor collar, ensure that the flue pipe is sealed into the collar with exhaust sealant. Rivet the flue in 3 places around the Adaptor collar. Place a bottom spacer around the flue pipe approximately 150mm above the adaptor collar. Secure in position by tightening the screw and nut.
2. Install the second length of flue pipe with the crimped end down and fit by riveting in at least 3 places around the flue pipe joint. Ensure that the flue is sealed into position with sealant.
3. Install the first section of flue pipe liner with the Crimped end up, over the flue pipe and over the spacer that is fixed to the flue pipe. This spacer will keep the liner concentric about the flue pipe.
4. Position flue spacer at the flue pipe joint for every length of ‘Flue pipe’ and ‘Liner’. Repeat the Steps from 1 – 4 to the installed required height of the flue system. The flue system is to comply with the current standards.


- a “the flue pipe shall extend not less than 4.6m above the top of the floor protector.”
- b “ the minimum height of the flue system within 3 m distance from the highest point of the roof shall be 600mm above that point.”
- c “the minimum height of the flue system further than 3 m from the highest point of the roof shall be 1000mm above the roof penetration.”
- d “no part of any building lies in or above a circular area described by a horizontal radius of 3 m about the flue system exit.”

IF FLASHING CONE NEEDED


1. **NOTE:** The last length of flue pipe needs to extend past the liner so that when the ‘top spider’ and the ‘flashing cone’ are fitted, that the ‘flashing cone’ and the ‘flue pipe’ are **flush**, or that the ‘flue pipe’ is **5mm lower** than the ‘flashing cone’.
2. Fit the ‘top spider’ into position, ensure that the legs of the spider are fitted inside the liner and that the spider is positioned hard down onto the liner and tighten with the screw and nut.
3. Place the ‘Flashing cone’ over the ‘flue pipe’ and press hard down onto the ‘top spider’, (note that the ‘flue pipe’ and the ‘Flashing Cone’ are either flush or the ‘flue pipe’ is 5mm Lower than the ‘flashing cone’.) Ensure that the ‘flashing cone’ is clear for the venting from the ‘liner’ and the ‘flue pipe’.
4. Fit the ‘cowl’ to the top of the flue pipe. The ‘cowl’, ‘flashing cone’, and the ‘flue pipe’ can be secured to each other with the uses of a stainless steel self tapping screw. This will allow the ‘cowl’ to be removed for cleaning.
5. Flue system may require Bird Proofing due to the installation and locations, discuss this with your installer for the best advice.
6. If the Flue system is installed into a ‘chimney chase’, allow for air vent as close to the top of the chase as practical, or allow venting through the ‘chimney chase flashing’ a ‘venting flashing cone’ and a 25mm gap around the liner with a ‘venting flashing cone-spider’ can be used. Ref: to figures.

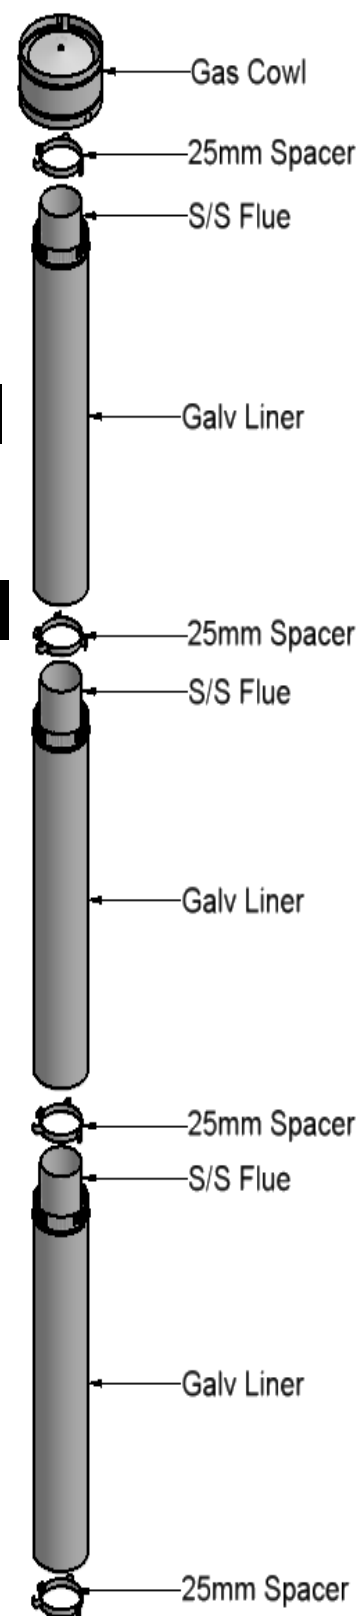


FLUE PENETRATION vented through alcove (single-lined flue system)

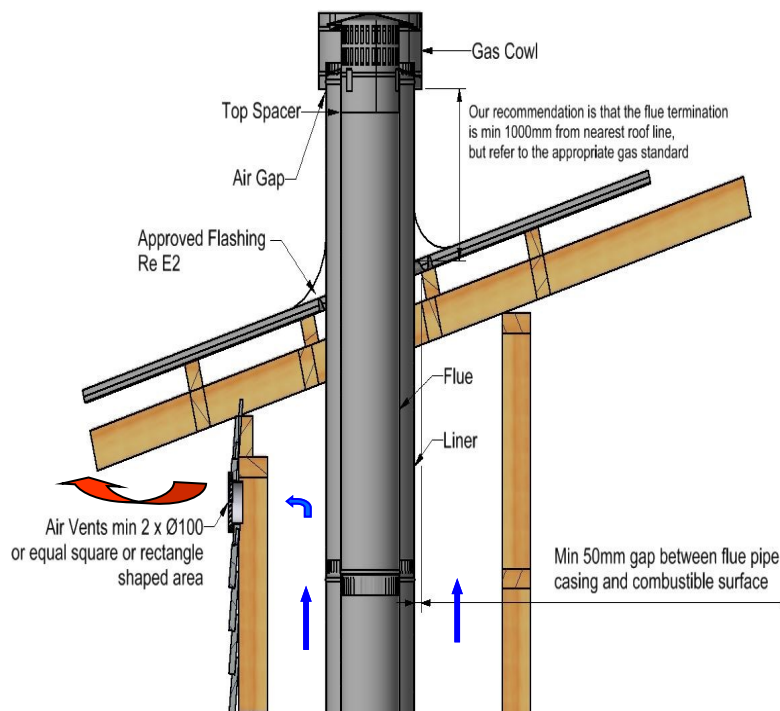

FLUE PENETRATION vented through alcove (double-lined flue system)

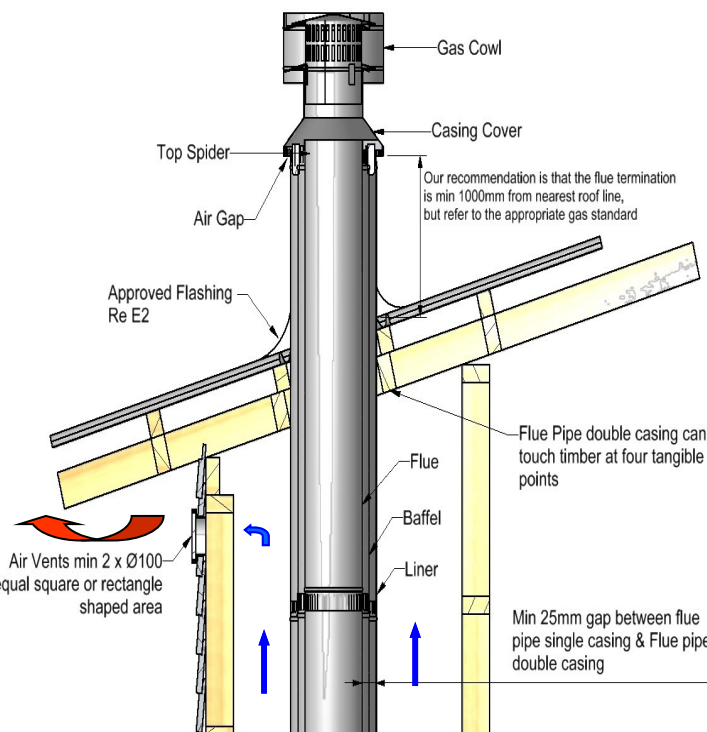

FLUE PENETRATION Vented through Top Flashing

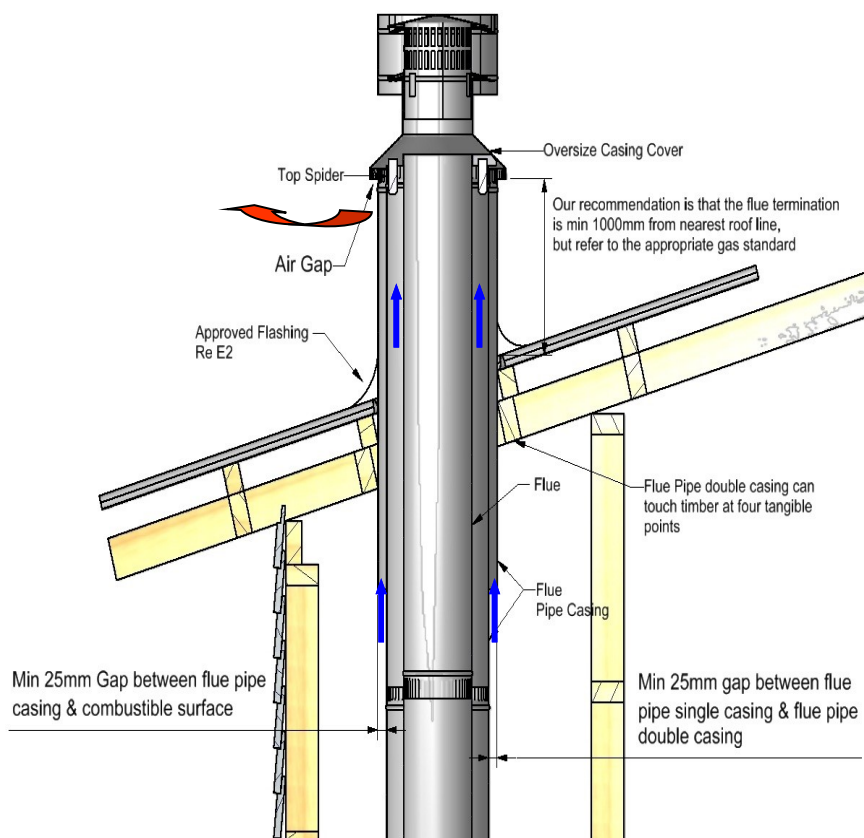

Note:

External requirements
Refer to relevant standards.

Install flue system to relevant standards.

When using a rubber or bitumen flashing (butynol, bectite) an additional flue pipe baffle is required.

All external air vents & ceiling penetrations must be bird proofed with permanently fixed screens.


All flashing to comply with E2.

All external air vents and ceiling penetrations are to be vermin and rodent proof.

| Test Report Number | Date of Report |
|--------------------|----------------------------|
| 04/1039 | 20 th July 2004 |
| 04/1040 | 20 th July 2004 |
| 04/1041 | 20 th July 2004 |

CHIMNEY CHASE FLASHING DETAILS FOR SETTING ADD GAS COWL HEIGHT

General Chimney Chase Flashing Lay Out

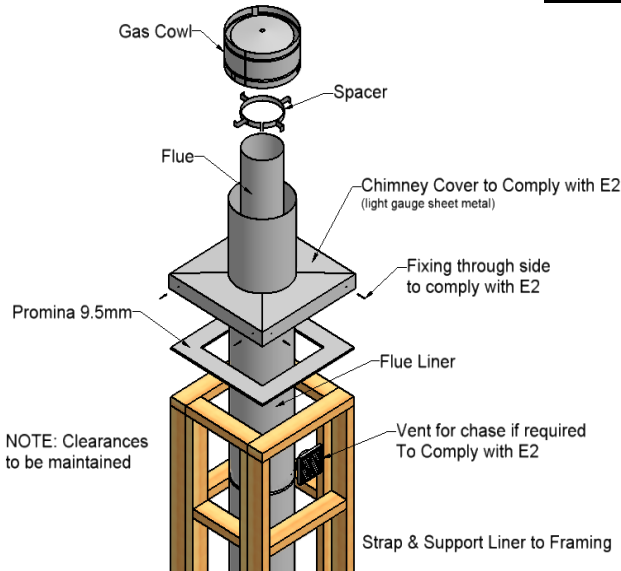


Note:

Flashing spigot height is determined by the insulation that is fitted under the flashing, see details at bottom of page.

STEP 1

Flues are to be set flush to the same height, Spacer set at approx 80mm low.

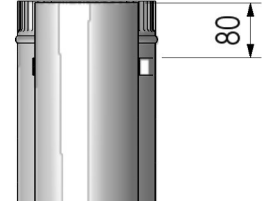


SETTING COWL TO FLUE

ADD Gas Cowl is to be set as shown and is in accordance with Foley's Industries LTD.


STEP 2

ADD Gas Cowl slides inside the flue, sitting on the swage, leaving a 10mm Air gap from cowl to liner, screw to secure

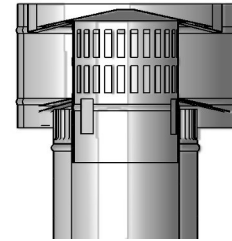


CHIMNEY CHASE FLASHING AND AIR VENTILATION OPTIONS:

VENTING THROUGH CHIMNEY CHASE


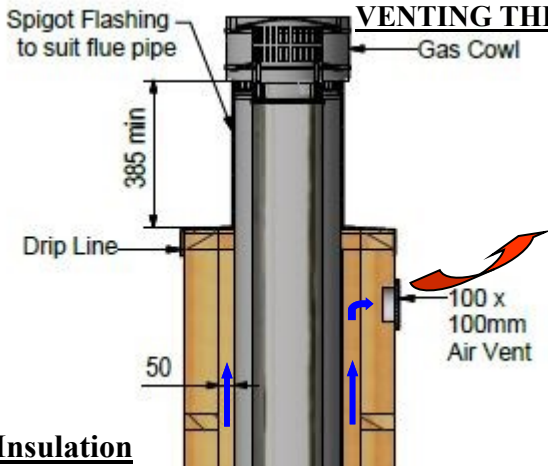


**No Insulation
under flashing**

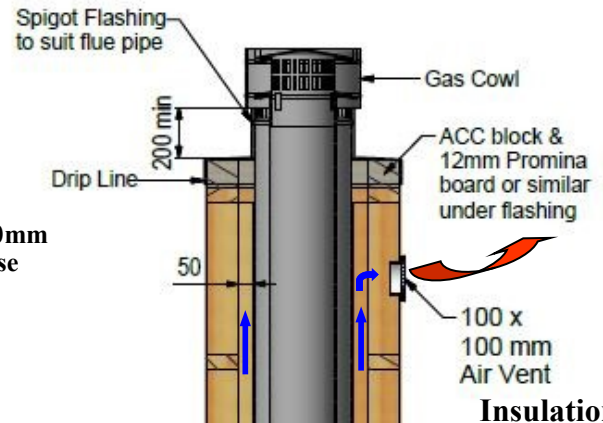


**Insulation under
flashing**

VENTING THROUGH FLASHING

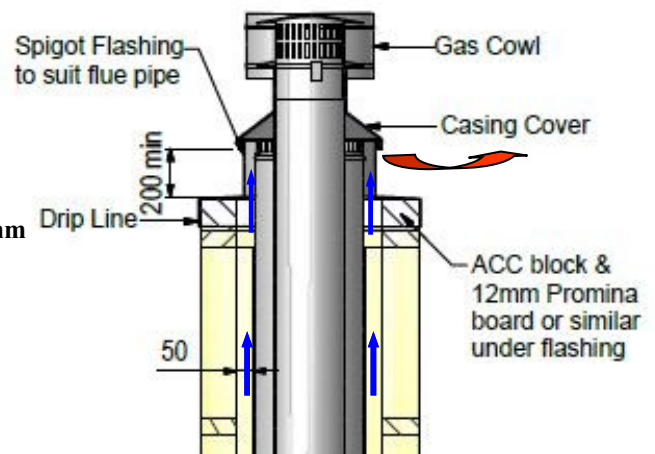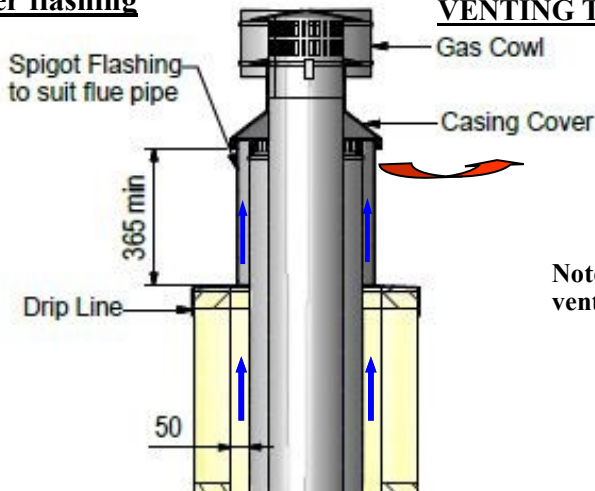


Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

FLUE HEIGHT MINIMUM DETAILS

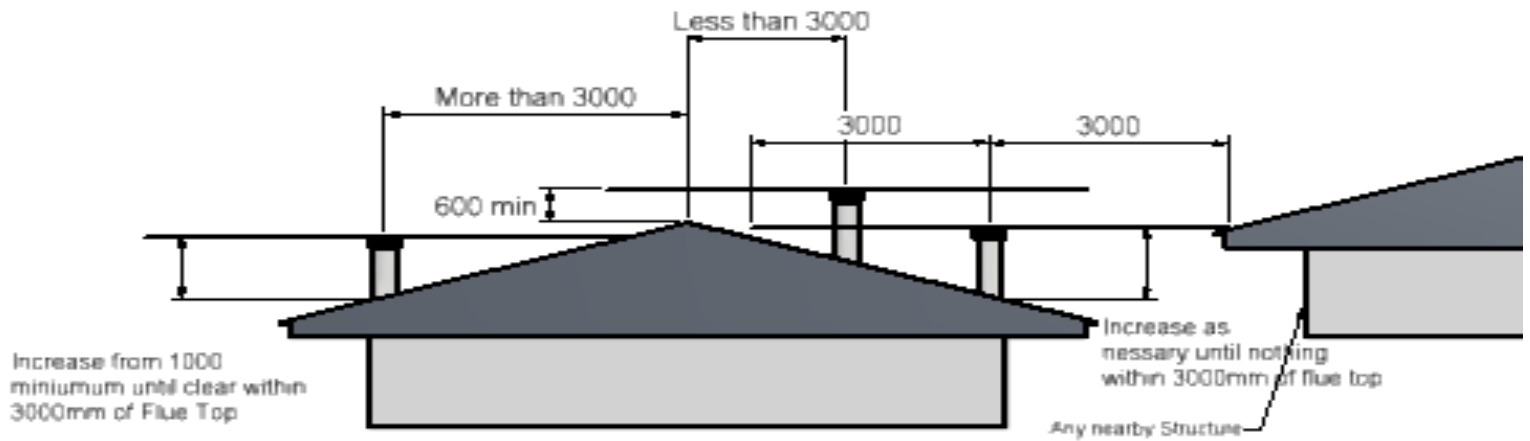


The flue exit is to comply to relevant standards.

3D View

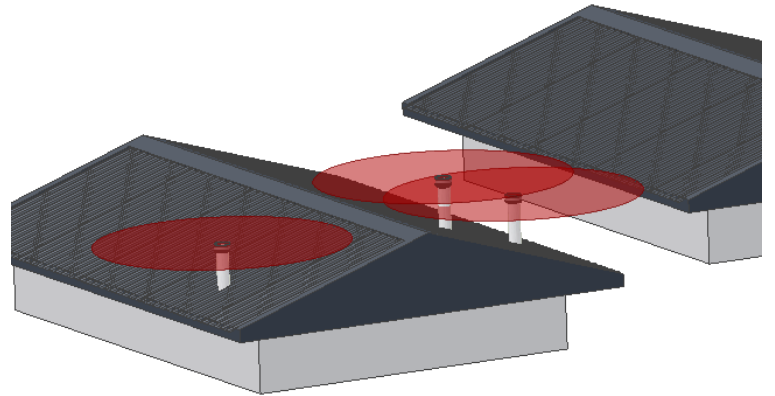


FRAME OUT AND TRIM OUT DETAILS FOR CHIMNEY CHASE



Option X – Singled Lined Flue System

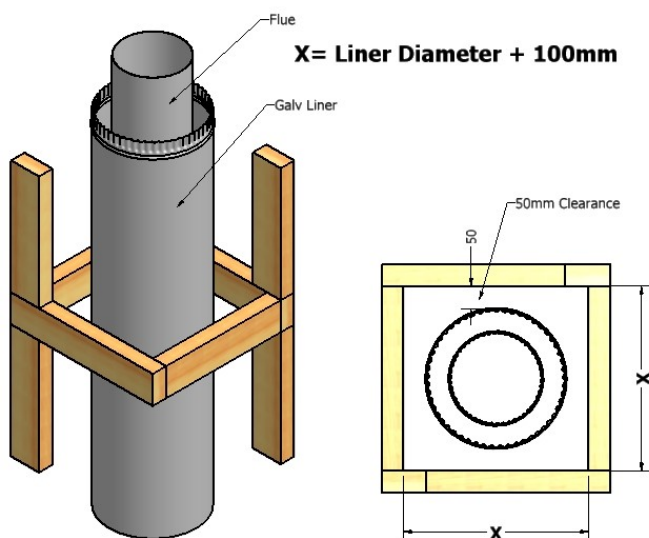

Option Y – Double Lined

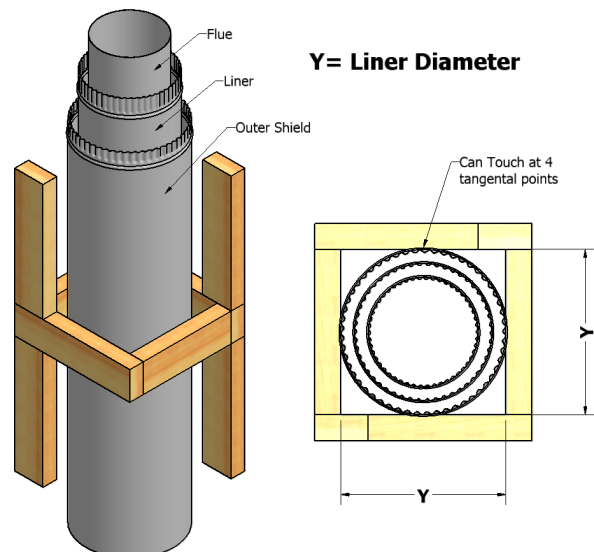

COMBUSTABLE MANTEL CLEARANCES

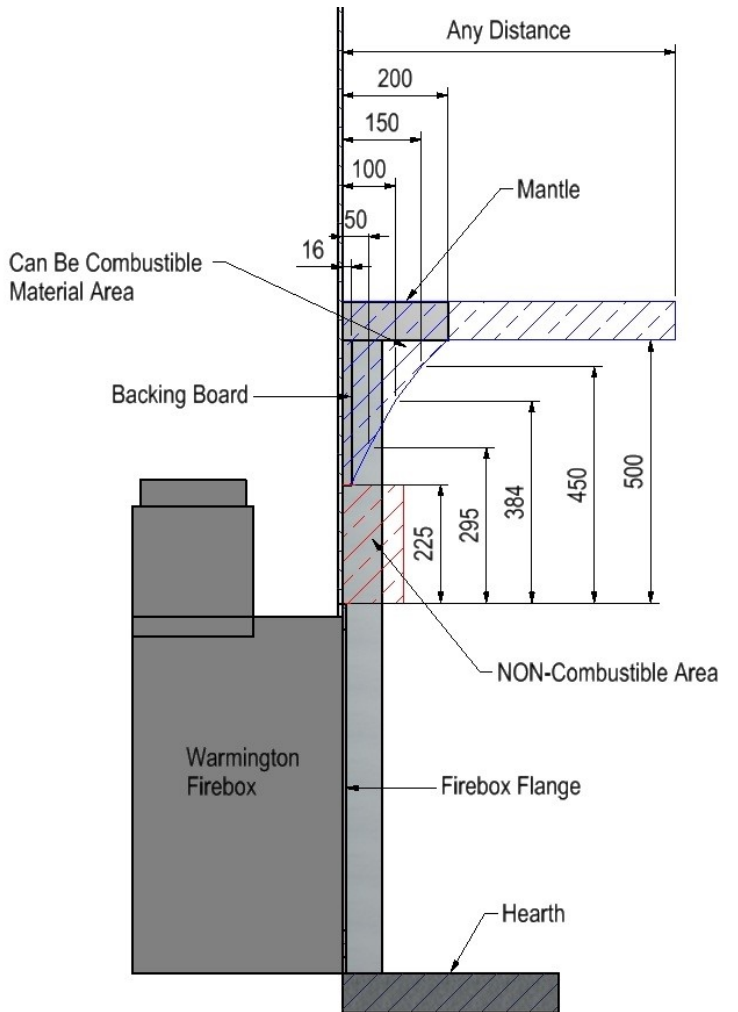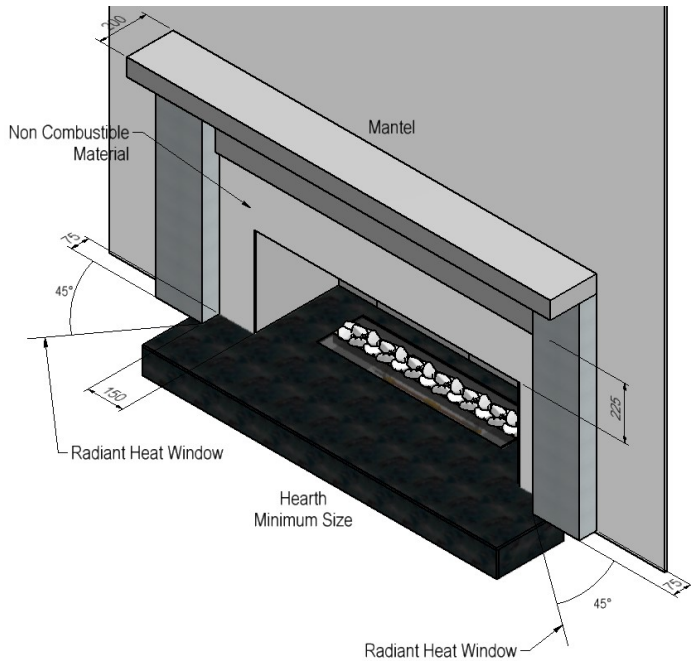


Note:

For Combustable Floors
Minimum Floor Protector of 300mm (A) must be maintained.

NOTE:

Additional Costing for T.V Above Fire-
Consult your nearest Warmington Agent
Visit: www.warmington.co.nz
For Specification

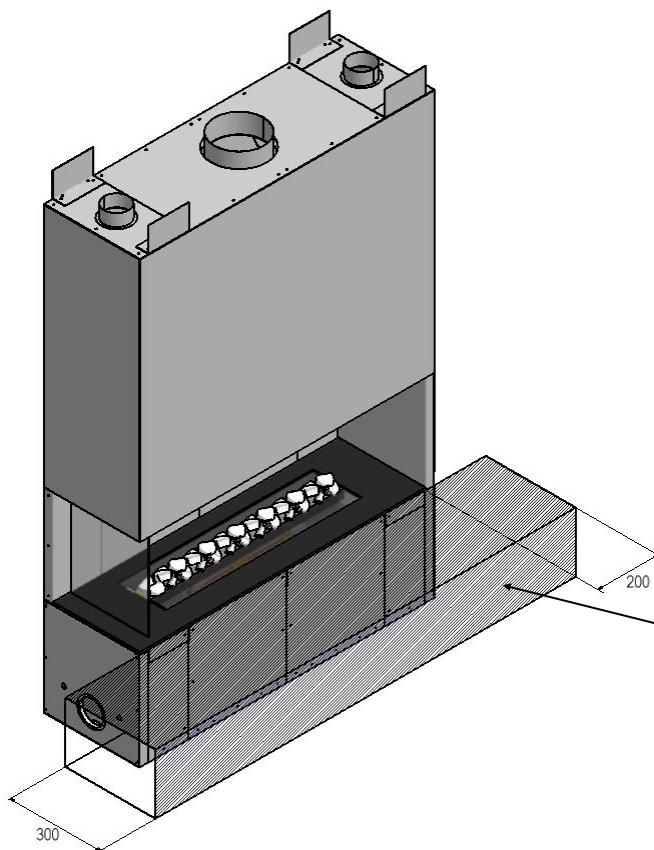

Minimum requirement for floor protector

Debonaire series of decorative flame effect fires

TO THE INSTALLER / GAS FITTER and ELECTRICIAN

NOTES:

- Service annually or more if required.
- Custom built to clients requirements to relevant and current standards.
- The appliance and flue system must be installed in accordance with the relevant and current standards and the appropriate building codes.
- The appliance and flue system must be tested in accordance with the relevant and current standards and the appropriate building codes.

FLUED GAS APPLIANCES All Gas Fires requiring Warmington Flue Systems shall be Installed to the requirements of the current standards and shall be appropriately designed and constructed to permit safe and effective use. This Appliance must be flued to the outside atmosphere. All Warmington Fires must be Installed with a **minimum of 3.6m** of Approved **Warmington Gas Flue and Liners** .

GAS TYPE All Gas Fires shall operate safely on the Gas Type specified on the Appliance and shall comply with the requirements of The Gas Act 1992 .

APPLIANCE SAFETY Any gas fire appliance shall comply with the safety requirements of the current standards listed under 'related documents' in this specification.

ELECTRICAL REQUIREMENTS All Gas Fire Appliances Installed with Mains Supplied Electrical components for associated use with these Appliances, must comply with The Electricity Regulations 1993.

ELECTRONIC CONTROL SYSTEMS Any Gas Fire Appliance Installed with Manual or Programmable Electronic Control System shall be tested and/or approved by a Recognised Person or Authority.

SEISMIC RESTRAINTS All Fires used for Domestic and Commercial Purposes shall be firmly secured (unless defined as portable or mobile) to prevent dislodgement from their point of fixture or Installation during Seismic Activity. Such Restraint must be of a reasonable expectation .

GAS CONNECTION

A Gas Certificate must be obtained for the Installation and Commissioning of this Appliance and Flue System .

Check that the Gas Type Specified on the Data Plate is correct for the available supply (LPG or NG).

A Copper Gas supply capable of supplying the correct MJ/h , should be brought into the rear of the Installation Cavity through the hole provided . A Flare Nut is provided on the Burner for Gas Connection to the Appliance .

COMMISSIONING AND TESTING OF FIREPLACE

(To be carried out by Gasfitter)

Read all the instructions before commissioning. Install coals or logs and burner before commission.

Light appliance and check HIGH/LOW settings. Check operation of appliance and adjust to suit.


Adjust control valve setting if required. After a period of running (30min Plus) check the setting of the pilot and adjust if required. See Spec's for details.

Extinguish appliance, remove test equipment and secure test nipple. Check for Gas Leaks.

Note* The Control Valves are factory set and should not require adjustment.

GAS FITTER TO CARRY OUT STANDARD TESTING FOR COMMISSION:



- Spill test taken at top of opening with smoke or smoke match.
- Leak testing appliance and joints.
- Correct operation of the burner and coal and log lay out.
- Test gas pressures high and low, drop test on supply line.
- 5 second light time across burner. Other testing that may be required.
- Ventilation requirements to the standards.
- Hand over to client, tests and comply to relevant standards.

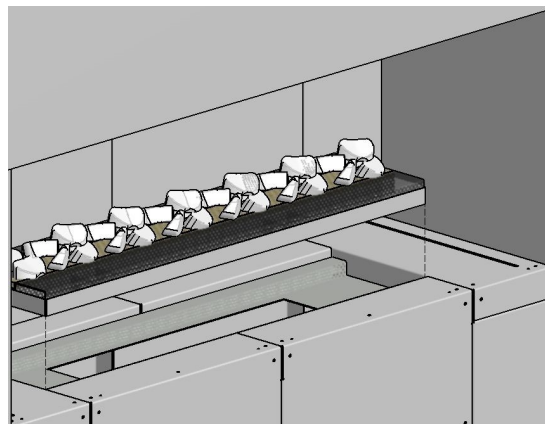

VERMICULITE (COURSE)

(To be set by Gasfitter)

General Coal orientation for optimum effect.

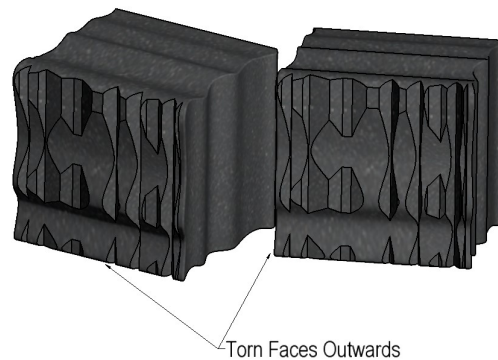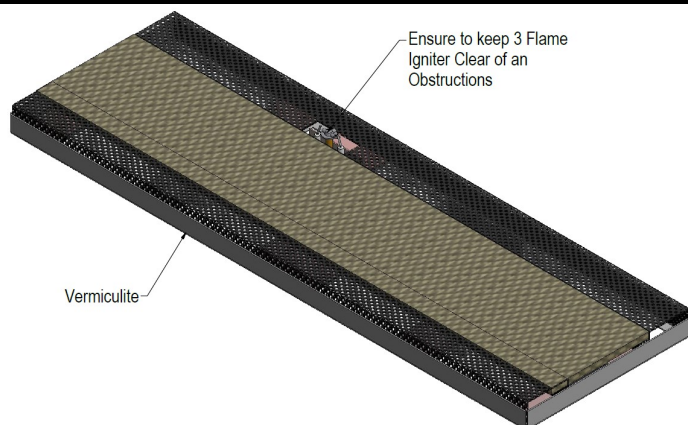

APPLYING THE VERMICULITE : (Coarse—must be larger than the burner plates holes so not to block them)

Apply with care a thin layer of Vermiculite over the Burner, just enough to cover the Burner Tray only.

NOTE: If the burner flame is uneven, the Vermiculite may need to be changed or sifted to remove the smaller pieces that can block the burners holes. The smaller pieces can ,cause uneven burn and the unit to run dirty.

COALS AND LOGS

(To be set by Gasfitter)

Gloves should be worn when handling Ceramic Fibre Coals & Logs : care needs to be taken when handling Coals & Logs , Due to the Carbon on the Coals can stain the surroundings.

HELPFUL HINTS : When Hot use Metal Tongs.


Apply a thin layer of Vermiculite over the Burner , just enough to cover the Burner Tray only as shown above.

Each Coal randomly positioned with the Torn (roughest) Face Outward . **Ensure Coal positioning does not directly block the 3 Flame Pilot .**

The placement of the Coals & Logs may vary to make an even Flame Pattern .

Ceramic Logs and Twigs may be scattered to achieve best Visual Effect .

Fit Burner Grate by sliding R & L Side Metal Pins on Grate, into Holes Located on Burner Side Plates , as shown below .

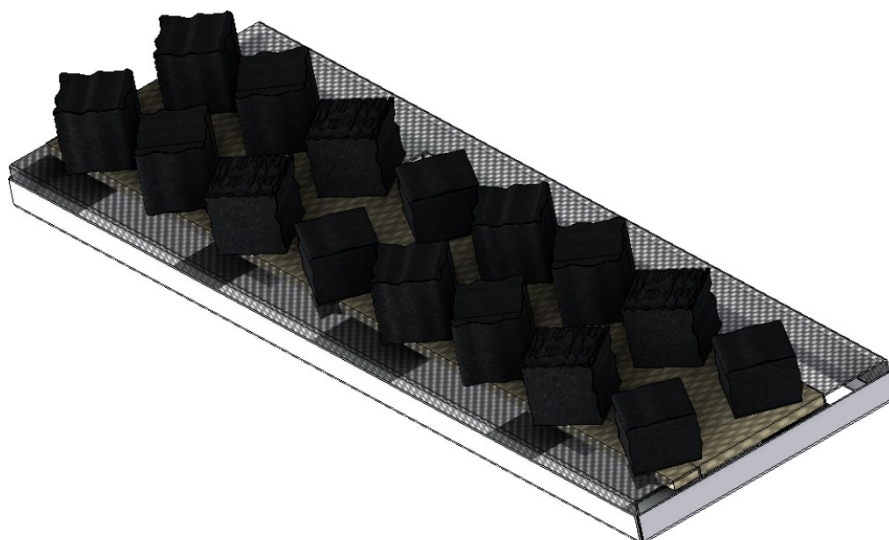


| | 1200 | 1600 | 2000 | 2400 | 2800 |
|-----------------|------|------|------|------|------|
| Number of Coals | 16 | 24 | 32 | 40 | 48 |

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.


All Dimension are in mm.....Copyright ©

VIEW OF GENERAL COMPONENTS

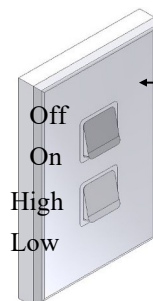

The main isolating switch (not supplied)


High/low option only. Push switch to on and set to High/Low as needed.

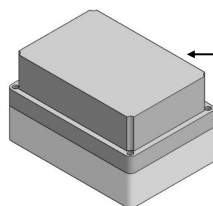

The Main Control box

(Ensure that the box is accessible)

NOTE: Control box must be in a moisture free environment because of electronics.

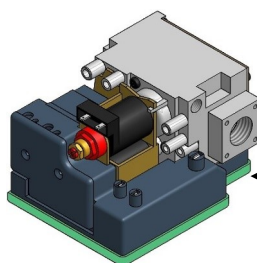

SIT 840 Control Valve

SIT 843 Control Valve

SIT 845 Control Valve

ADJUSTMENT OF THE PILOT - 3 FLAME

(BOTH SG & EG)


(Only to be Adjusted by Gasfitter)

Note: When the Base screw is removed, gas will leak from the outlet. Ensure that the pilot is not adjusted or the screw is removed when the fire is burning.




1. Adjustment of Pilot - 3 Flame: Unscrew Base Screw as shown in Diagram 2.
2. Insert a screwdriver as shown in Diagram 3 and adjust the adjustment screw up inside the 3 flame pilot to adjust the flame height.
3. The flame must always be passing over the electrodes &/or file tube on either side.
4. Replace the base screw and check for leaks.

Note: to Gasfitters

The 3 flame pilot may need adjustment after a period of running time on set up as the increase in heat in the fire will induce a higher draft in the fire, and may pull in flame away from the File Tube causing the fire to shut down.

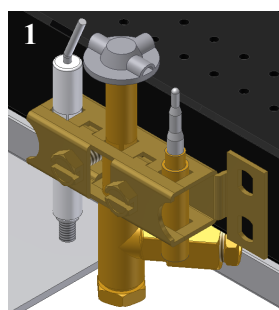

3 Flame Pilot in assembled state

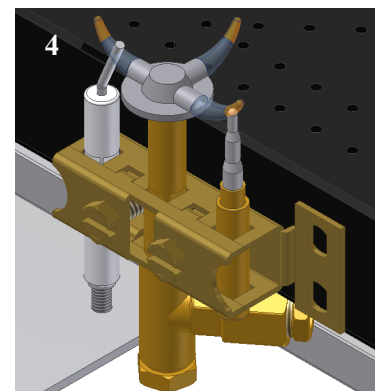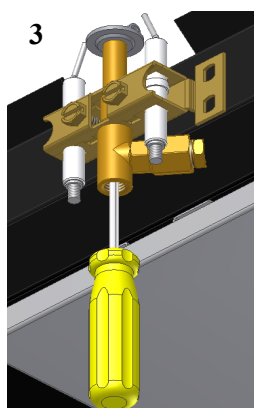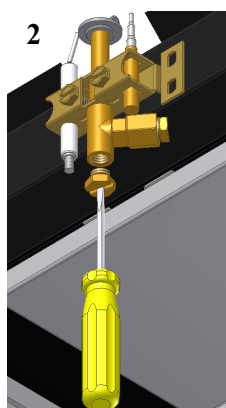

Correct Operation of 3 Flame Pilot

TESTING BURNER

Once the unit is installed: (to be tested by the electrician and the gas fitter for correct operation)

Ensure that all gas connections are leak free.

Ensure all components and electrical connections are completed and firmly secured.

Ensure the unit is free of obstruction and any flammable material.

Switch on main power switch (supplied by Electrician).

Depress the pulse switch (supplied by Electrician).

The high frequency spark electrode will operate. At the same time the gas solenoid valve will open allowing the gas to flow to the burner. If the unit does not light it will automatically shut down.(On flame failure)

The main power switch should be switched off when burner is not being used to ensure that there is no accidental operation of the unit.

POINTS OF SAFETY—To the Customer /Home-Owner

Your Warmington gas decorative fire operates on the principle of dual radiant and convected heat. Therefore it is important to observe the following precautions associated with any heating appliance or open fire.

- Do not cover or restrict the fireplace upper or lower vents in any way as this may result in a build-up of hazardous gases within the room.
- The fire is not intended for the drying of clothing, bedding etc.
- Avoid installing this appliance in high traffic areas, strong draughts or near drapes or furniture.
- Avoid using aerosols when the appliance is operating.
- Avoid anyone leaning against or lying directly in front of the fire while operating.
- Do not place anything objects into or against the gas fire at any stage.
- The fire may release a small amount of smoke on its first start up which may take 1 or 2 hours to dissipate . This is part of the curing process so ensure there is adequate ventilation within the room.
- Always use a registered Gas Fitter or Electrician for installing and maintenance work
- Always use certified gas cylinders that have been tested and are safe to use.
- Never modify your gas appliance or its settings from those specified by the manufacturer.

APPLIANCE SAFETY Any gas fire appliance shall comply with the safety requirements of the current standards listed under 'Related documents' in this specification.

ELECTRONIC CONTROL SYSTEMS Any gas fire appliance fitted with manual or programmable electronic control systems shall be tested and/or approved by a recognised person or authority.

WHAT YOU DO IF YOU SMELL GAS

Open windows and doors

Do not light any gas appliance

Do not use any electrical appliance or switches

Do not use the telephone in your home

Leave the building; shut off the domestic gas supply valve (beside your meter)

Call your gas supplier/gas fitter or the Fire Service for further advice

OPERATION OF YOUR CUSTOM BURNER (WITH ELECTRONIC CONTROL)

Your burner must be installed and tested by a suitably qualified gas fitter or technician prior to use.

TO LIGHT

1. Ensure the unit is free of obstruction and any flammable material.
2. Switch on main power switch (supplied by electrician).
3. Depress the pulse switch (supplied by electrician).

The high frequency spark electrode will operate. At the same time the gas solenoid valve will open allowing the gas to flow to the burner. If the unit does not light it will automatically shut down (On flame failure/ safety feature).

TO SHUT DOWN


Switch the main power switch off to shut down the unit.

**Lighting your gas fire using electronic or remote ignition systems may vary as per manufacturer instructions*


IMPORTANT NOTE ABOUT YOUR DECORATIVE FIRE

Warranty Cover will be considered void if failure to operate the appliance in accordance with the supplied Instructions and Specifications, or is the subject to damage or misuse beyond the expected conditions of normal use which could result in injury or property damage.

GAS BURNER AND ELECTRICAL CONTROL BOX LAYOYUT FOR SWITCH OPTIONS

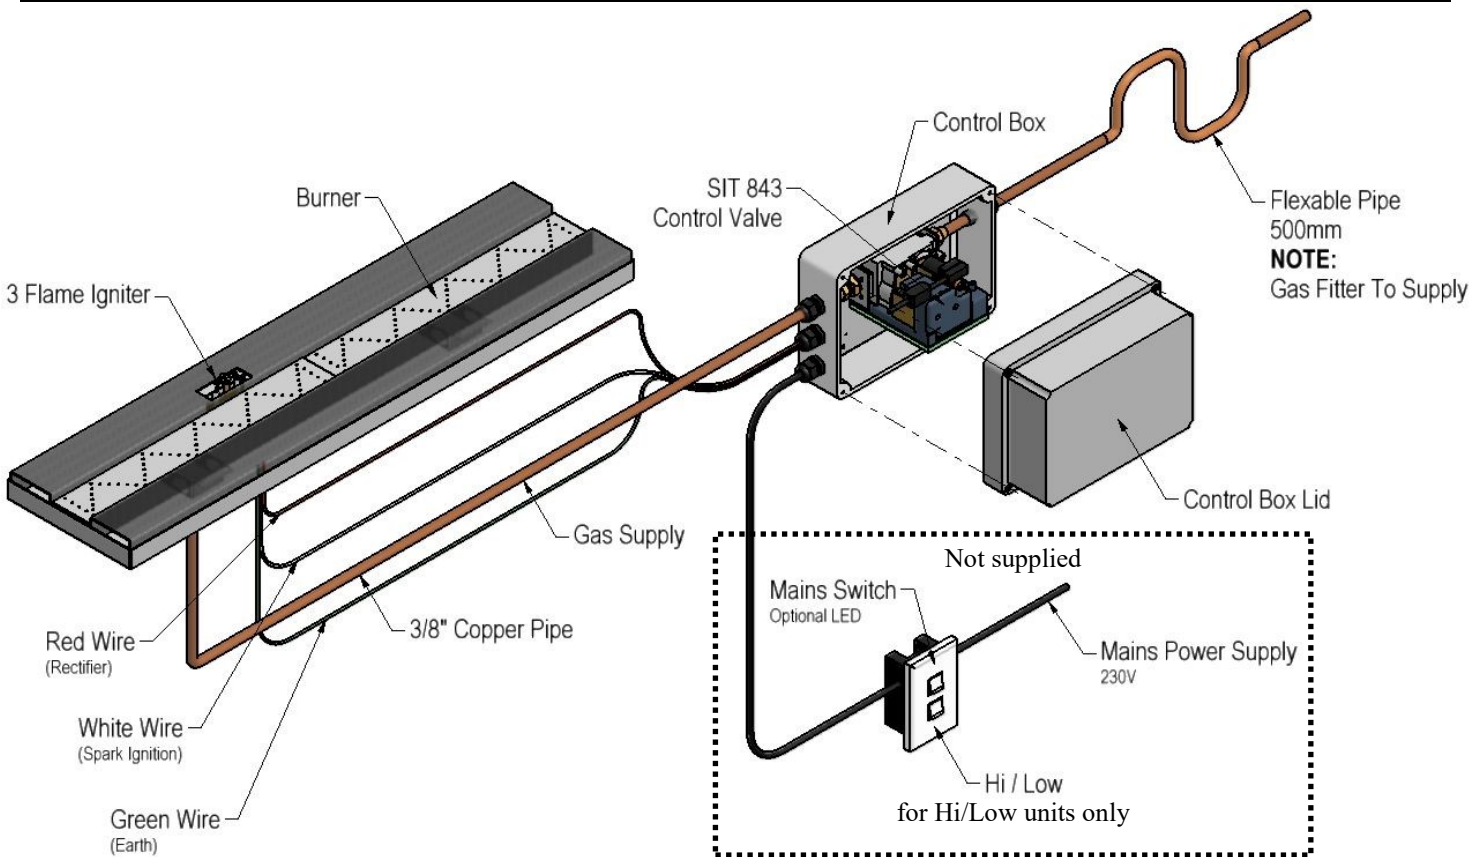

MAIN & HI / LOW SWITCH CONNECTION

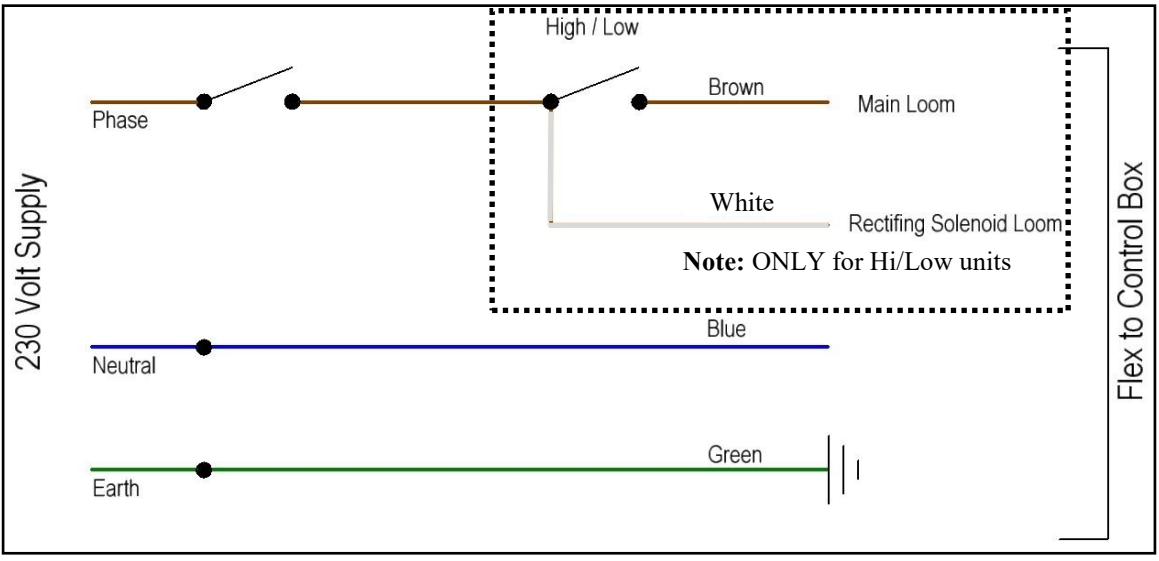

| HT Leads |
|----------------------|
| White Lead – spark |
| Red Lead - rectifier |

EG ON/OFF ONLY (SIT840 valve)

- Light appliance and check the pressure to the hi kPa value in the table for maximum output.

NOTE: Any alterations to pressure is to be carried out by a Certified Gasfitter

- If adjustments are necessary, remove the dust cap on the control valve. The pressure adjustment screw is on the front side of the gas control valve (shown in Diagram B in this specification) and is **factory set**.


WARNING: Ensure that the dust cap is replaced after adjustment.

Pressure Setting: Turn the burner on with the switch and wait for full ignition. Using a standard screwdriver, screw the adjusting screw clockwise to increase the outlet pressure, or screw counter clockwise to decrease the pressure to the desired settings.

Set the pressure to the hi kPa value in the table for maximum output.
The burner will operate any pressure between the hi and the low pressures.

DIAGRAM B (SHOWING CONTROL VALVE WITH TEST POINTS AND ADJUSTING SCREW)


Modulator Harness Connections

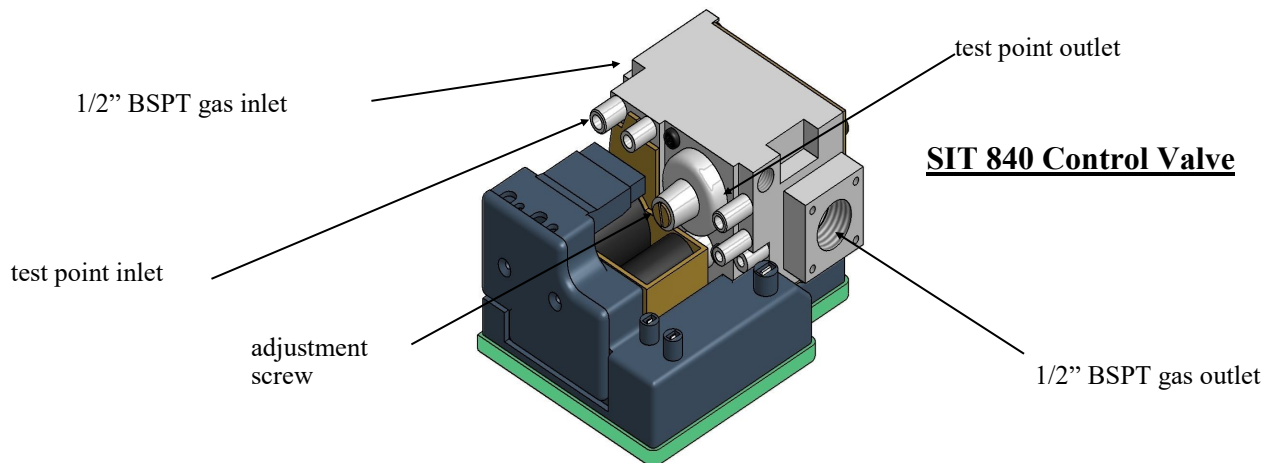

- After checking the pressure, turn the unit off, remove manometer from the test point and tighten the test point screw. Ensure to check for gas leaks.
- Turn the appliance on and off a few times to check ignition.
- When satisfied that the appliance is working correctly, fit the front panel assembly back to the gas burner.
- NOTE : Ensure you peel the Protective Plastic Coating from any stainless steel components if fitted.
- All burner aerations are Factory Preset and cannot be adjusted.
- If you are unable to get the unit to operate correctly, refer to troubleshooting before contacting your Local Service Contact.
- It may take approximately 2 hours of operation for the coals/Llgs or river rocks to achieve their full flame pattern and glow.
- During the initial burn period, some smoke and smell may be experienced. Because of this, run the appliance on the high position in a well ventilated room until these dissipate.

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.

ON/OFF SWITCH (SIT 840) - WIRING DIAGRAM

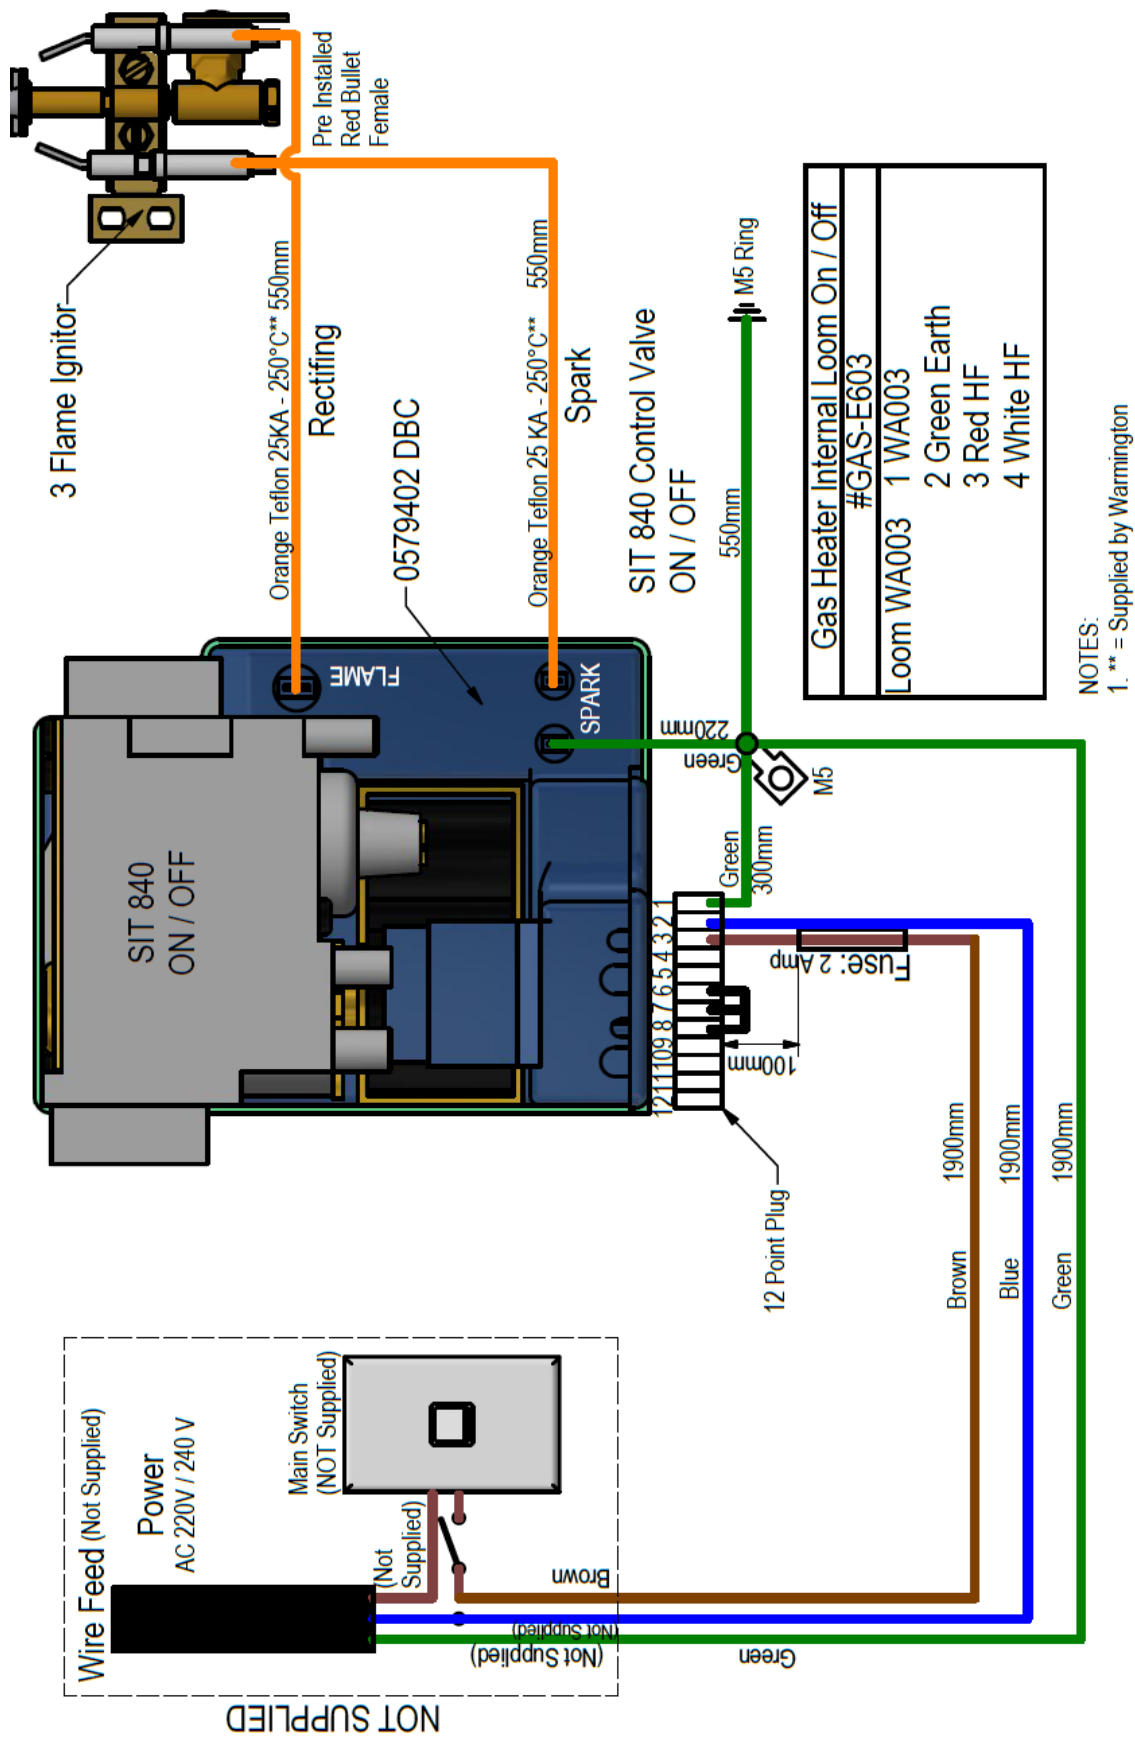

NOT SUPPLIED

Due to continued product improvement, warmington and LTD reserves the right to change product specifications without prior notification.

PROCEDURE FOR THE TEST AND COMMISSIONING OF YOUR DECORATIVE FIRE

Ensure Gas Supply and the Power Supply (caution 240V) to the Unit.

- Refer to Data Plate on this Specification for settings. The Data Plate is attached to the under carriage of the Burner.
- Loosen the Jet Test point and attach manometer (Digital is preferred). The Test Point is on the Right Hand Side of the Gas Burner, as Shown Below.



Note: Location of the Test Nipple - may vary from model to model

- Light Appli-
Flame setting and check pressure, adjust to Low Flame and check pressure. ance, adjust to High

NOTE : If setting the Pressure is required it is to be carried out by a Certified Gas Fitter.


- If adjustments are necessary, remove the cap . The Pressure Adjustment Screw and Nut are on the Front Side of the Gas Control Valve (shown in Diagram B in this specification) and are **Factory** set.

High Pressure Setting: Set the Burner to High with the switch. Screw in **Nut A** to Increase the Outlet Pressure then screw Nut A out to Decrease the Pressure to the desired settings. Use 10mm spanner.

Low Pressure Setting: Set the Burner to Low with the switch - See Wiring Diagram) and, keep Nut A stationary . Use a screwdriver to screw in **Screw B** to Increase the Pressure and Screw it Out to Decrease the Pressure . Carefully replace the Modulator Plastic Cap .

WARNING: To ensure the Correct Operation of the Hi/Low burner it is necessary that the Plastic Cap is returned to its original location.


DIAGRAM B (SHOWING CONTROL VALVE WITH TEST POINTS AND ADJUSTING SCREW)

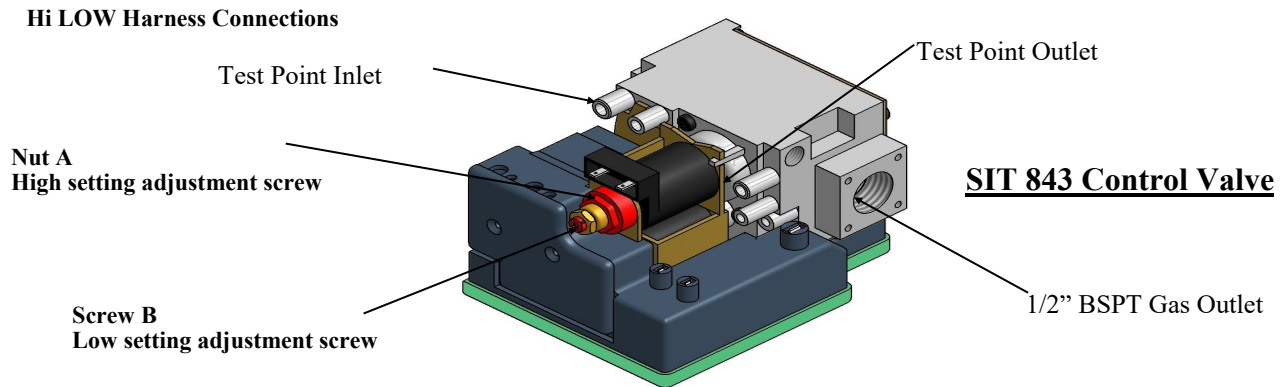

- After checking the pressure, turn the unit off, remove Manometer from the Test Point and Tighten the Test Point Screw. Ensure to check for gas leaks.
- Ensure Power is Off & Reconnect Modulator Harness Connection in the Main Harness. See Diagram B Above .
- Turn the Appliance On and Off a few times to check ignition.
- When you are satisfied that the Appliance is working correctly , fit the Front Panel Assembly back to the Gas Burner.
- NOTE : Ensure you peel the Protective Plastic Coating from any Stainless Steel components if fitted.
- All Burner Aerations are Factory Preset and cannot be adjusted.
- If you are unable to get the unit to operate correctly, refer to troubleshooting before contacting your Local Service Contact as listed.
- It may take approximately 2 hours of operation for the coals/Logs or river rocks to achieve their full flame pattern and glow.
- During the Initial Burning in period, some smoke and smell may be experienced , the appliance should be run on the high position in a well ventilated room until these dissipate .


Installing Burner & Control Box Location

Step 1

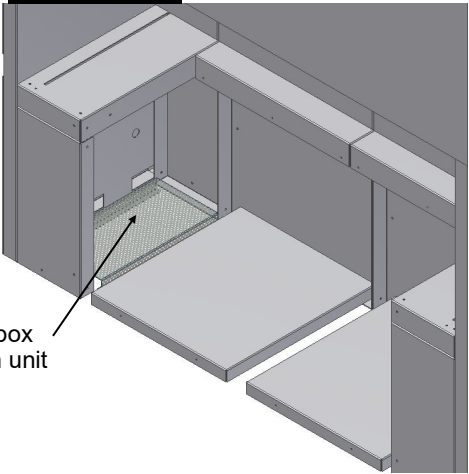


Place control box support tray in unit as shown.

Step 2

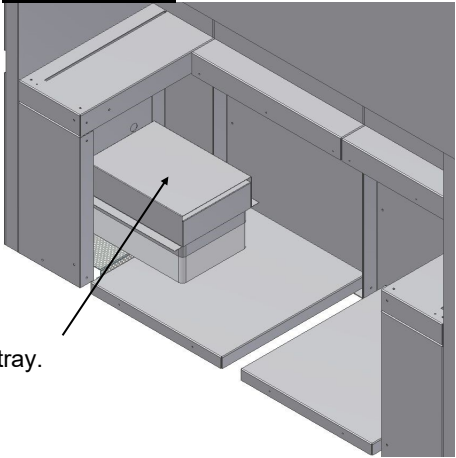


Place control box on top of support tray.

Step 3

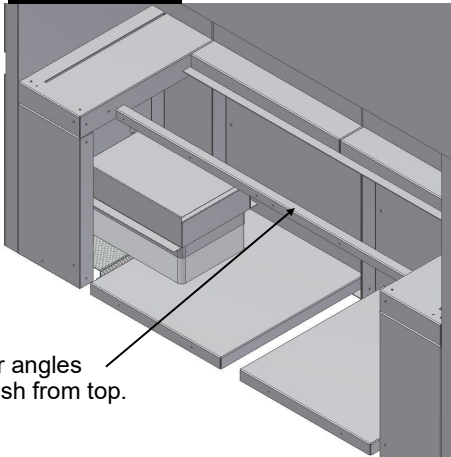


Fit burner angles 28mm flush from top.

Step 4

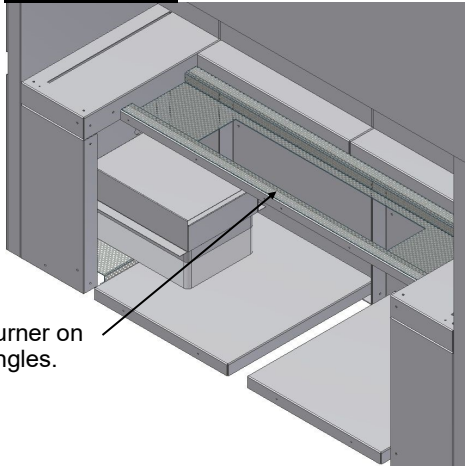


Place burner on top of angles.

Step 5

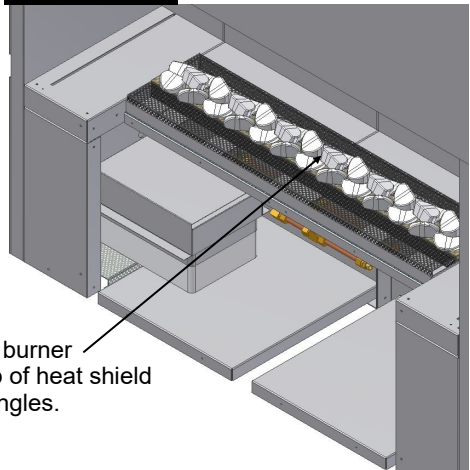


Place burner on top of heat shield and angles.

Access to Gas Test Point

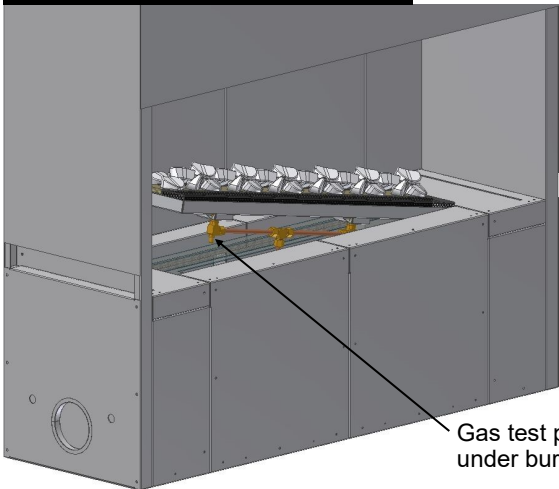


Gas test point under burner

HIGH/LOW SWITCH (SIT 843) - WIRING DIAGRAM

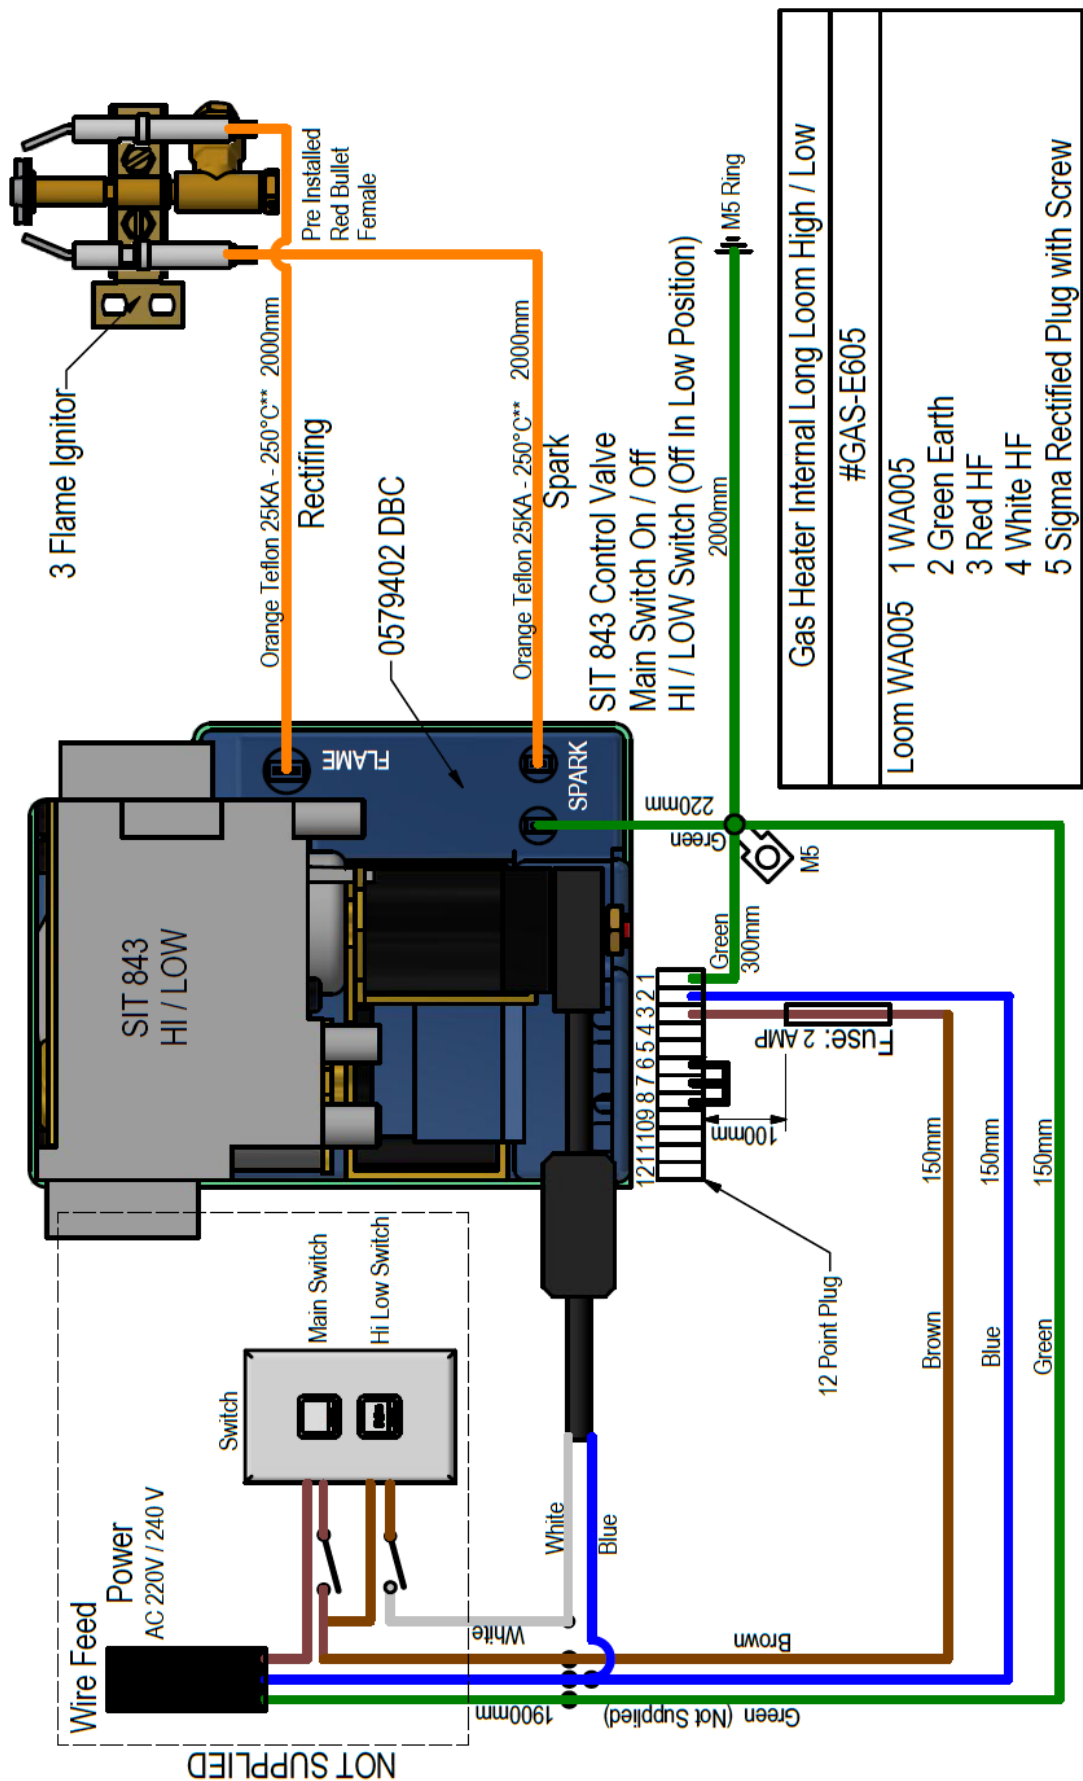

OPERATION OF YOUR REMOTE CONTROLLED EG GAS BURNER (SIT 845 valve)

REMOTE CONTROL FEATURES

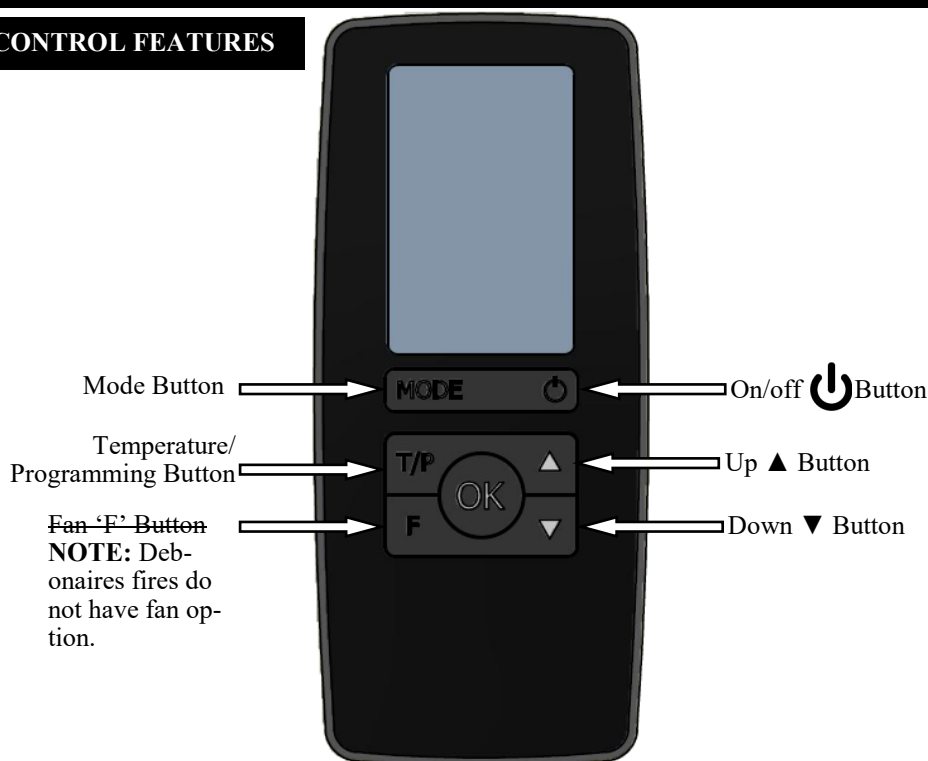

Press and release the  button to turn the remote on and off.

SETTING THE DAY OF THE WEEK AND TIME

With the remote off, press and hold the 'T/P' button for 2 seconds or longer to initiate programming the time. The Time, Hour setting and AM/PM will flash.

Setting the hour function: Press and release the ▲ or ▼ button to increase or decrease the hour setting by 1 hour. Please ensure that AM/PM is set correctly. Press 'OK' to accept. The minute digits will begin to flash.

Setting the minute function: Press and release, the ▲ or ▼ button to increase or decrease the minute setting by 1 minute. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the minute setting by 1 minute every 0.5 seconds. Press 'OK' to accept. The days of the week will begin to flash.

Setting the day of the week function: Press and release the ▲ or ▼ button to change the day of the week to the following or previous day. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the day of the week by 1 day every 0.5 seconds. Press 'OK' to complete setting.

The time and day of the week is now set.

USING THE VARIOUS MODES

While the remote is switched on, pressing and releasing the MODE button will cycle between all available modes. These are:

Manual Mode→Auto Mode→Flame Mode→Manual Mode

Manual mode

Manual mode does not require that the time and day of the week to be set. Press the ▲ or ▼ button to increase or decrease the temperature as desired.

Automatic mode

The automatic mode allows the temperature to be regulated according to a programmed level and time. At any time, the temperature may be adjusted up or down. However, whenever the remote changes to a new time period, the temperature will be set automatically according to that period's setting.

Flame Mode

In Flame mode the flame level is selected as required, and remains at the selected level. A change in the temperature will not change the flame level. Press the ▲ or ▼ button to increase or decrease the Flame level desired.

Programming for Auto Mode

Each day of the week can be programmed individually for 4 periods P1, P2, P3 and P4, making a total of 28 programmed periods. Alternatively, a weekday program can be set, so the same program is used for Monday-Friday. Similarly, a weekend program can be set for Saturday-Sunday. The entire week can also have the same program. Alternatively, a weekday or weekend program can be set with individual programs for the remaining days.

The suggested period settings for each day/s are:

Period 1 - morning

Period 2 - daytime

Period 3 - evening

Period 4 - night-time

Entering programming mode:

With the remote off, Press and hold the 'T/P' button for 2 seconds or longer then release, followed by another press and release of the 'T/P' button. If successful, the LCD will display 'Pd' at the top, and the word PROG at the bottom. The time at which the remote is currently set, and MO will flash.

Select which day/s to program. You must choose which day/s of the week you wish to program. Press and release the ▲ or ▼ button to change the day of the week to the following or previous day. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the day of the week by 1 day every 0.5 seconds. The order that you can scroll through the days is as follows:

MO→TU→WE→TH→FR→ 'MO TU WE TH FR' → SA → SU → 'SU SA' → 'MO TU WE TH FR SA SU'

To accept the selected day/s of the week press 'OK'.

First period's start time. The display will indicate 'P1' on the top. The Hour and AM/PM settings will now flash.

To set the P1 starting time:

Press and release the ▲ or ▼ button to increase or decrease the hour setting. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the hour setting by 1 hour every 0.5 seconds.

Please ensure that AM/PM is set correctly. Press 'OK' to accept. The Minute setting will now flash.

Adjust the minute setting:

Press and release the ▲ or ▼ buttons to increase or decrease the minute setting. Press 'OK' to accept. Setting the temperature. The Set Temperature setting will now flash.

Adjust the desired set temperature:

Press and release the ▲ or ▼ button to increase or decrease the temperature setting by 1 °C. Press and hold the ▲ or ▼ button for 2 seconds or longer to increase or decrease the temperature setting by 1°C every 0.5 seconds. Press 'OK' to accept. Period 1 is now set for the day/s of the week that you have chosen. The LCD will display 'P2' to indicate that Period 2 can now be set for the same day/s of the week. Repeat the programming process for periods 2, 3 and 4. After program 4 is set, press 'OK' and the program for the selected day/s will be set. Repeat the programming process for any other periods/days that are required.

Restore factory default settings

With the remote off, press the following sequence of buttons: 'F', 'T/P', 'T/P' again, ▼. If done correctly, the icon 'rE' will be indicated on the LCD.

Teaching RF remote ID code to control unit

CAUTION: The remote has already been programmed with a unique code. Do not attempt to teach the RF Remote ID code unless instructed by the manufacturer. With the remote off, press the following sequence of buttons: 'F', 'T/P', 'T/P' again, ▲. The LCD display will show 'LC' (Learn Code) for 2 seconds then return to the normal OFF state display. During this time a special code will be transmitted by the RF Remote to the Control Unit, causing the Control Unit to learn its ID.

APP OPERATION

The app can be used both on iOS and Android devices they can be downloaded here:

Apple Store: <https://apps.apple.com/jm/app/intelligy-thermostat-mkii/id1327577138>


Google Play Store: <https://play.google.com/store/apps/details?id=com.millec.intelligythermostatmkii>

For instructions on how to push the appliance to your Wi-Fi, please go to the Warmington website and find details located under the 'Downloads' tab for your fireplace model.


The app has both manual control and automatic controls.

In manual control you can adjust the flame height by touching the < and > symbols next to the flame icon.

In automatic control you can adjust the desired room temperature by touching the < and > symbols next to the temperature.

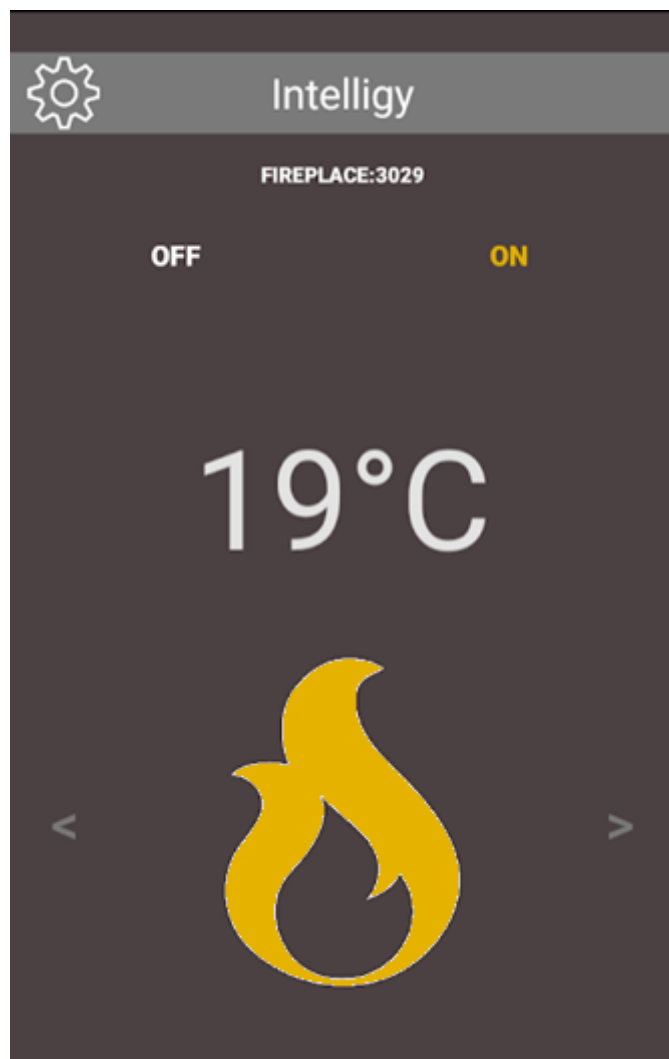


Manual

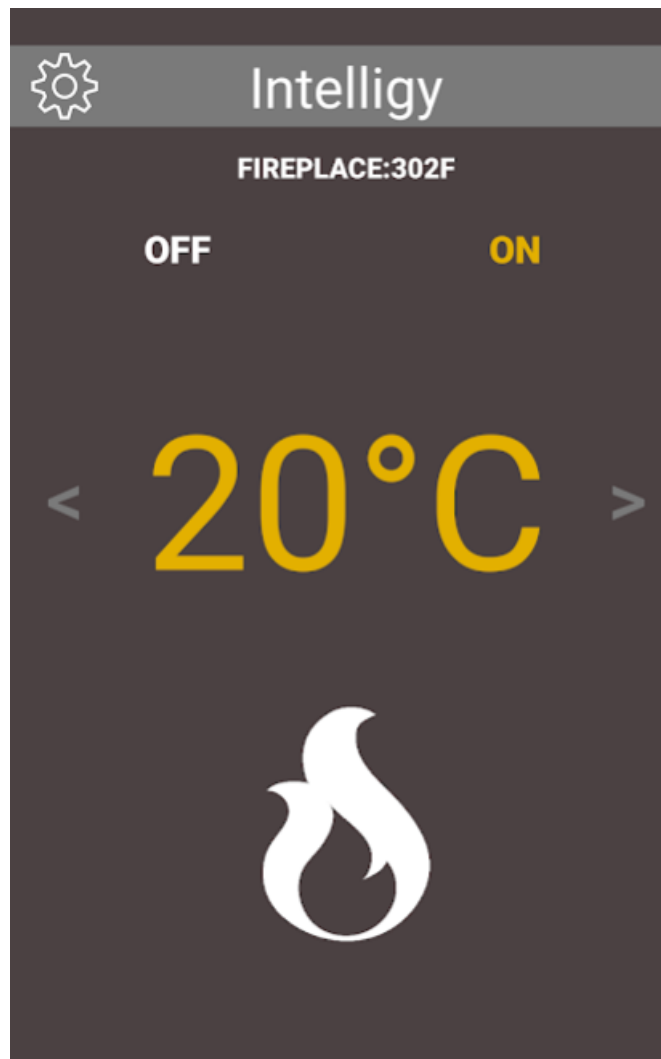

Automatic

MANUAL ON/OFF SWITCH

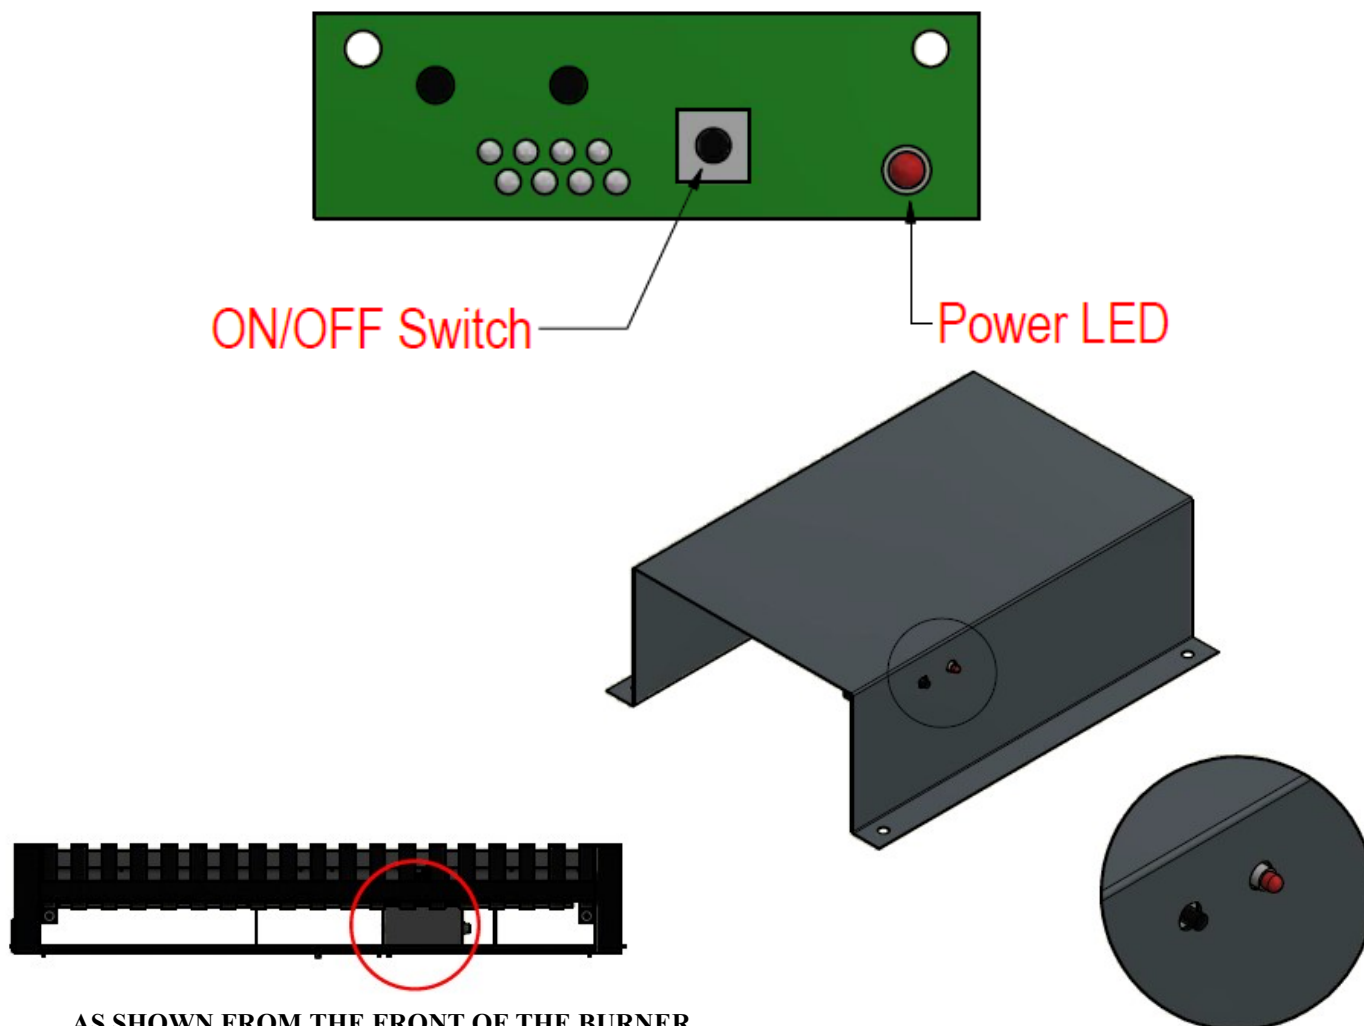

AS SHOWN FROM THE FRONT OF THE BURNER

The switch is located behind the grate on the control valve heat shield as shown above.

Press and release the power button. This will start the electronic spark and the power LED will be on permanently. The pilot will ignite first and once this is on, it will ignite the main burner. Pressing and releasing the power button again will switch off the appliance.

When the appliance is turned on, the gas fire will be set to medium flame setting.


If the gas fails to light, the appliance will go into lock out mode. To start the appliance again turn appliance off and wait 3 minutes before turning it on.

Please note that the power button is for use when the remote controller is lost or damaged and can't be used. This controller can not adjust flame height, hence is supplied for emergency use, if remote and phone App is not able to be used.

PROCEDURE FOR THE TEST AND COMISSIONING OF YOUR DECORATIVE FIRE

Ensure Gas Supply and the Power Supply (caution 240V) to the Unit

- Refer to Data Plate on this specification for settings. The Data plate is attached to the under carriage of the Burner.
- Remove front grate.
- Loosen the Jet test point and attach manometer (digital is preferred). The test point is on the right hand side of the gas burner, as shown below:

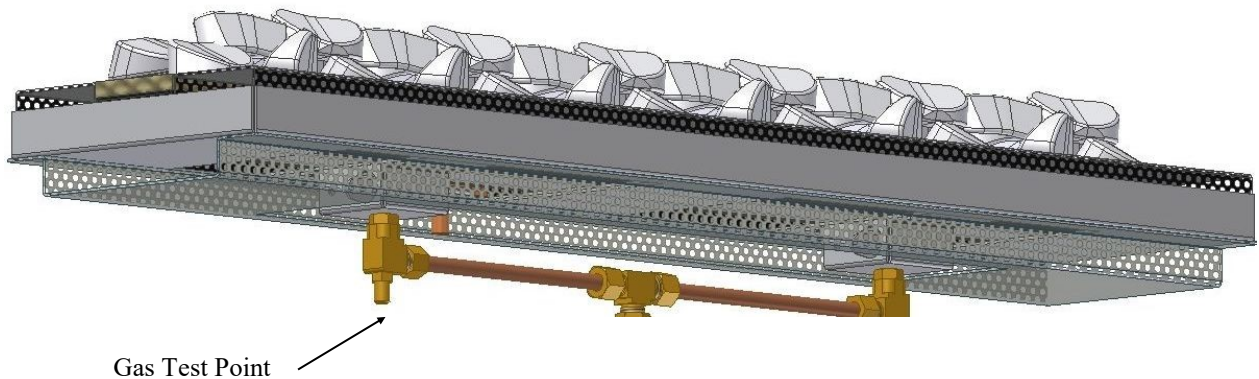

- Light appliance, adjust to high flame setting and check pressure, adjust to low flame and check pressure.

NOTE: Any alterations to pressure is to be carried out by a Certified Gasfitter


- If adjustments are necessary, remove the cap. The Pressure Adjustment screw and nut are on the front side of the Gas Control Valve (shown in diagram B in this specification) and are **factory** set.

High Pressure Setting: Set the modulator to maximum condition. Screw in **Nut A** to increase the outlet pressure then screw nut A out to decrease the pressure to the desired settings. Use 10mm spanner.

Low Pressure Setting: Turn off the power to the modulator (by disconnecting the modulator harness connection at the valve - see wiring) and keep nut A stationary. Use a screwdriver to screw in **Screw B** to increase the pressure and screw it out to decrease the pressure. Carefully replace the modulator plastic cap.


WARNING: To ensure the correct operation of the modulator it is necessary that the plastic cap is returned to its original location.

DIAGRAM B (SHOWING CONTROL VALVE WITH TEST POINTS AND ADJUSTING SCREW)

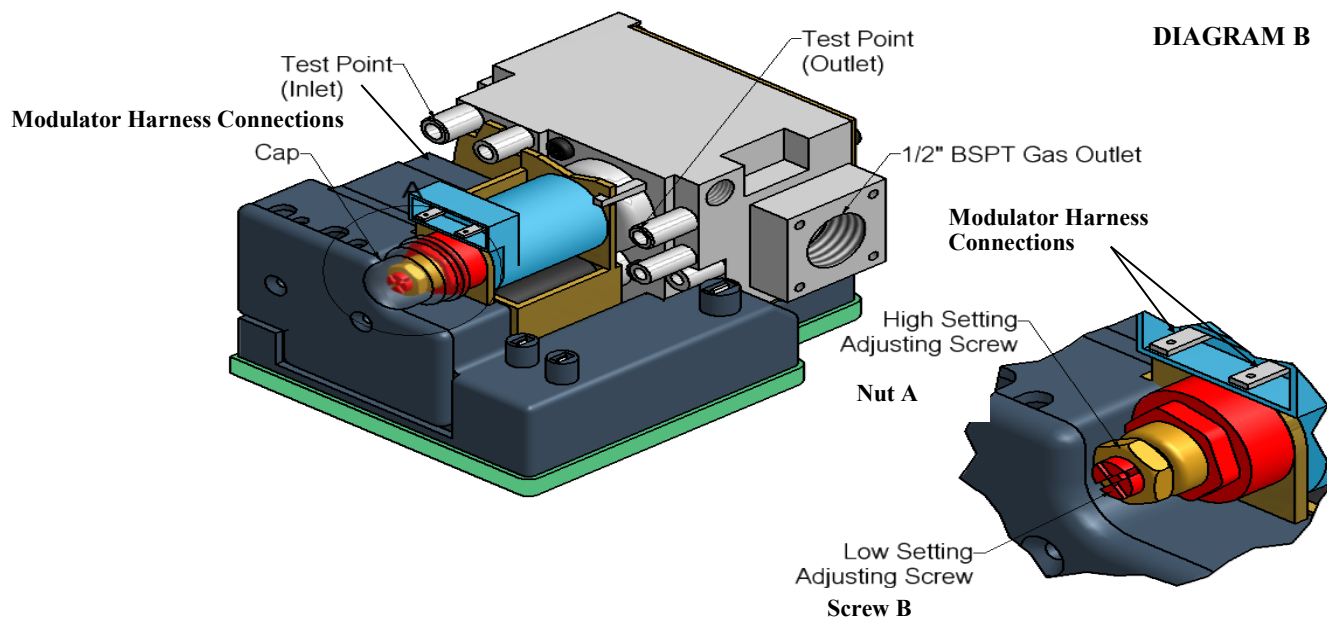

- After checking the pressure, turn the unit off, remove Manometer from the Test Point and tighten the Test Point screw. Ensure to check for gas leaks.
- Ensure power is off & reconnect Modulator Harness Connection in the main harness. See Diagram B above.
- Turn the appliance on and off a few times to check ignition.
- When you are satisfied that the appliance is working correctly, fit the front panel assembly back to the Gas Burner.
- NOTE: Ensure you peel the Protective Plastic coating from any stainless steel components if fitted.
- All Burner Aerations are factory preset and cannot be adjusted.
- If you are unable to get the unit to operate correctly, refer to troubleshooting before contacting your Local Service Contact as listed.
- It may take approximately 2 hours of operation for the coals/Logs or river rocks to achieve their full flame pattern and glow.
- During the Initial Burning in period, some smoke and smell may be experienced, the appliance should be run on the high position in a well ventilated room until these dissipate.

FULLY MODULATING (SIT 845) - WIRING DIAGRAM

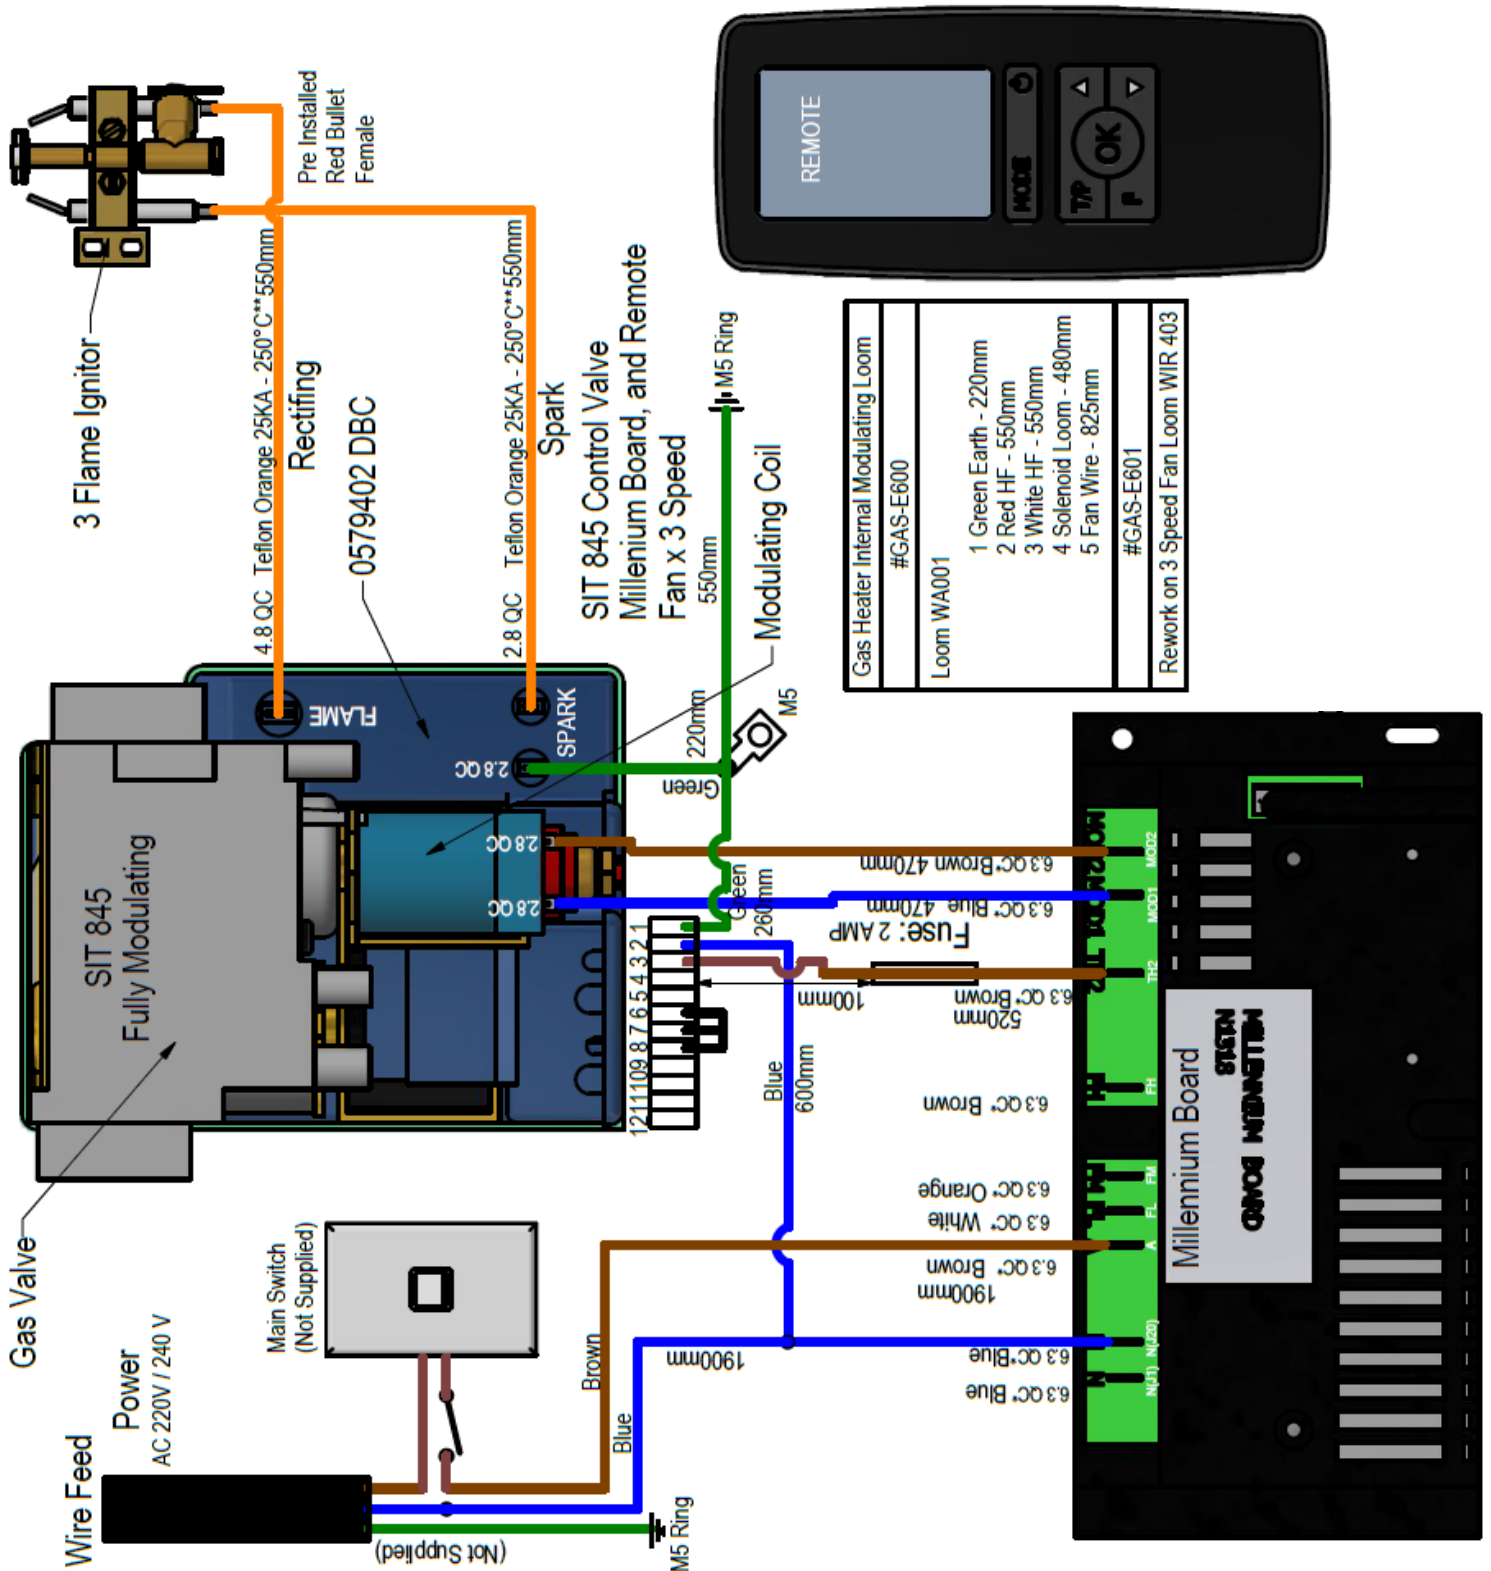

FAULT FINDING**1: Pulse Switch depressed and no spark at the electrode:**Check

- Earth Wire connected
- Main power is turned on
- Correct wiring to the wiring diagram (wiring to switches / electrodes)
- The gap between the electrode and pilot is approx 3mm
- The ceramic insulator on the electrode is not cracked
- Electrode Not coated by soot or dust
- Electrode Not burnt out

2: Sparking but failure to light:Check

Gas supply to the unit is turned on

Solenoid valve operating

Electrically wiring to solenoid

Correct jet for gas supply (LPG / NG)

3: Lights but goes out after a short time:Check

Flame rod is in the flame path

Setting of the timer in the control box – Contact Dealer

4: Flame burns well away from the burner:Check

The correct jet for the gas supply (LPG / NG)

Check the gas pressure

Note: If unit is fitted with an LED, the LED will light up on a flame failure.

The cycle from starting to ignition is approx 30 seconds.

MAINTANANCE

Warmington Industries recommend annual servicing of your gas appliances by an approved Warmington dealer, or gas fitter.

External surfaces should be dusted with a damp, lint-free cloth when the fire is cold.



WARRANTY

Warmington Industries provide 12 months warranty from the date of purchase, for domestic or commercial installations.

This warranty covers:

Replacement parts and labour for gas control components due to manufacturing defects only.

Repair or replacement of the burner components due to manufacturing defects only.

Warranty cover will be considered void if the product is subject to incorrect installation, seal on the control box is broken, failure to operate the appliance in accordance with the supplied instructions and specifications or is subject to damage modification or misuse beyond the expected conditions of normal use.

All installations and servicing must be carried out by and approved Warmington dealer, Gas Fitter or agency.

As part of the manufacturing process, these units have been fully factory tested for correct ignition and fault finding purposes to insure they run correctly before being packaged.

GENERAL NOTES**NOTES:**

- These installation and operating instructions should be kept in a safe place. Should you require another copy, download from the **Warmington** website www.warmington.co.nz
- Warranty - for full details on product warranties, contact your local Authorised **Warmington** Retailer.
- Correct installation, operation and maintenance must be maintained to comply with the **Warmington** Warranty. The appliance and flue system must be installed in accordance with relevant standards and the appropriate building codes.
- This appliance must be serviced annually and any service operation must be carried out by a qualified service person.

WARNINGS:

- **WARNING: ANY MODIFICATION OF THE APPLIANCE THAT HAS NOT BEEN APPROVED IN WRITING BY THE TESTING AUTHORITY IS CONSIDERED A BREACH OF NZ STANDARDS.**
- **WARNING: DO NOT USE OR STORE FLAMMABLE LIQUIDS OR AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILST IN OPERATION.**
- **WARNING: DO NOT PLACE FLAMMABLE MATERIALS ON OR AGAINST THIS APPLIANCE.**
- **CAUTION: THIS APPLIANCE SHOULD BE MAINTAINED AND OPERATED AT ALL TIMES IN ACCORDANCE WITH THESE INSTRUCTIONS.**
- **CAUTION: ALL SERVICING MUST BE CARRIED OUT BY AN AUTHORISED SERVICE TECHNICIAN.**
- **CAUTION: MAKE SURE THE CORRECT FUEL TYPE IS USED WITH THIS APPLIANCE.**

NOTE: Keep a copy of these instructions for operating and maintenance guidelines.



Industries 1994 LTD
PO Box 58652, Botany 2163, Auckland
www.warmington.co.nz