


# Studio Secondary Air Replacement

## Installation Instructions

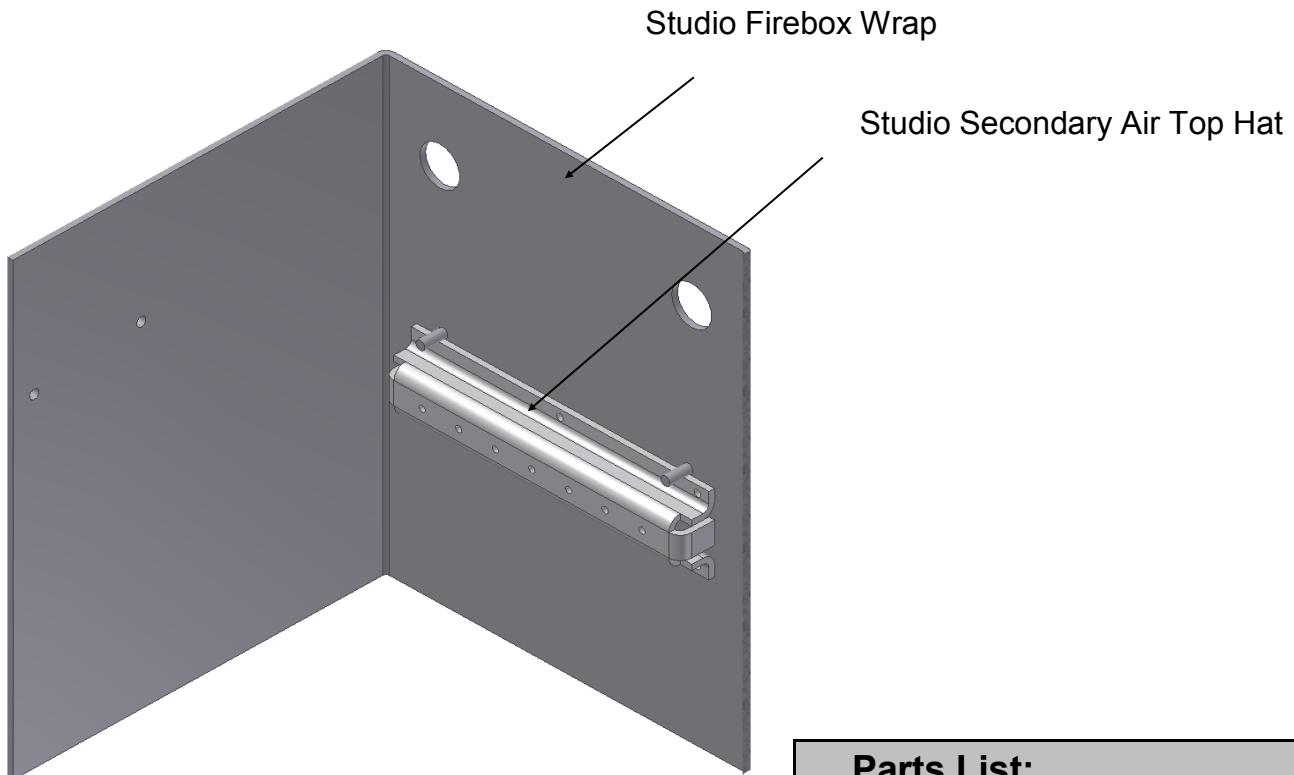

### Parts List:

- Studio Secondary Air Top Hat
- 6 x M5 cap Screws
- M5 Tap
- 4.5mm Drill bit
- 5mm Allen Key (not supplied)

### Instructions:

1. Place Studio secondary air top hat under damper pins and centre left to right.
2. Mark hole centres and drill with 4.5mm Drill.
3. Tap holes with M5 Tap.
4. Fix secondary air top hat to firebox wrap with M5 Cap screws using 5mm Allen key.