


Studio Baffle Support Pins Replacement

Installation Instructions

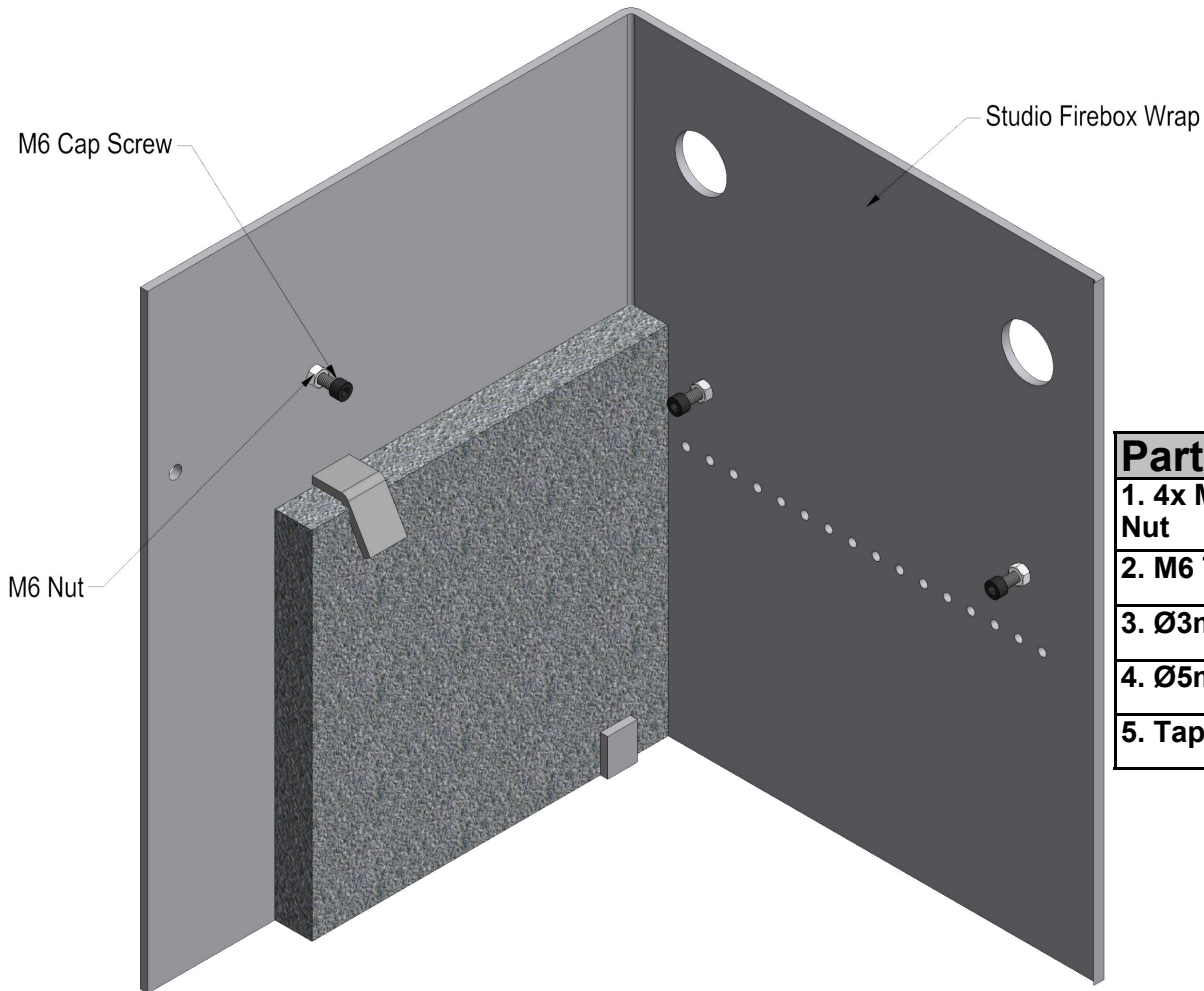

Parts List (supplied)	
1. 4x M6 Cap Screw & Nut	
2. M6 Tap	
3. Ø3mm Drill (pilot)	
4. Ø5mm Drill	
5. Tapping Paste	

Instructions
1. Mark hole centres
2. Drill Ø3mm pilot hole then drill with Ø5mm drill bit
3. Tap holes with M6 tap
4. Fit M6 cap screw
5. Set distance by adjusting the nut to 21mm from inside face of firebox to the head of cap screw

Recommended tool list (not supplied)
Power Drill (for hole drilling)
Tapping T-handle
6mm Allen key
Brush and shovel (for cleaning out firebox)
Bucket (for ash)
Blanket (for protecting floor)

Due to continued product improvement, Warmington Ind LTD reserves the right to change product specifications without prior notification.